

Firing order	Hose connection			
	1	2	3	4
1-3-7-2-6-5-4-8	1&6	3&5	7&4	2&8
1-5-4-8-6-3-7-2	1&6	5&3	4&7	8&2
1-8-7-2-6-5-4-3	1&6	8&5	7&4	2&3

