





# Fitting instruction rear kit

MAKE OF AUTOMOBILE:

TYPE:

TANK CAPACITY: TANK LOCATION

MODEL YEAR:

SYSTEM APPROVAL NUMBER (R115)

**BOOT SET NUMBER** 

MANUAL NUMBER:

DATE

Mazda CX-5 74/75 Liter fuel module toroidal Spare wheel room 2012-E4-115R-000011 / DLM-LPG 04 2010-2016 → 953/070501001/A 2017- → 953/070501002/A 076/1307274 2019-02-04



# Index

General	
Tank Fuel Module	
Tank isolation covers	
Spare wheel room Preparation	
Tank isolation	6
Ventilation pipes	
Front Tank bracket placement	8
Rear Tank bracket placement	
Filler	
Filter	11
Filler hose	12
Hose connection to tank	
Floor cover	
Tank wiring	

PAGE 2 076/1307274


#### General

- Tools needed for installing the LPG tank :
  - Soldering iron
  - Drilling machine
  - Drilling kit
  - Drill size 22 / 30mm / 55mm / 70 mm
  - Workshop tools.
  - Gas leak detection device
  - Vacuum cleaner
  - Anti-corrosion agent / black body coating
  - Car lift
- Always disconnect the battery when installing / working on the LPG system.
- Make sure the ignition key is outside the car.
   Be aware of central door locking, radio / telephone memory code, alarm system.
- Note the jack supporting points and moveable parts when mounting the LPG line.
- After having drilled the holes (use safety glasses) for the mounting of a tank frame, floor ventilation, etc., always treat the holes against corrosion after having removed the grindings.
- When the LPG tank is mounted underneath the vehicle treat the tank with a (black) under coating.
- Failure to follow the instructions in this manual can result in a poor or non-working gas installation or a dangerous situation.
- No component of the LPG-system shall be located within 100mm of the exhaust or similar heat source, unless such components are adequately shielded against heat.
- Mount the LPG tank according to the local LPG regulations. The LPG installer is responsible for that.
- After having completed the installation, check the whole system for gas leakage; use a gas leak detection device.
- Prins Autogassystemen is not responsible for any damages to people or objects as a result of changes to Prins products.
- Beware of moving, hot and rotating parts.
- Check the Prins site for tank certificates and wiring diagrams.



PAGE 3 076/1307274


#### **Tank Fuel Module**

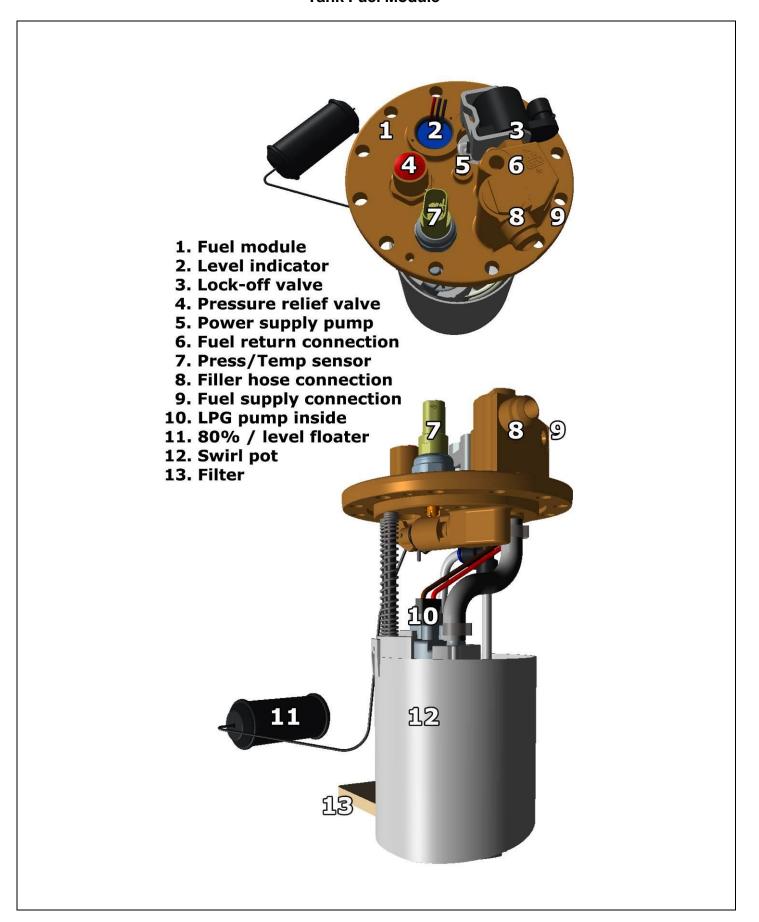



PAGE 4 076/1307274

## **Tank isolation covers**

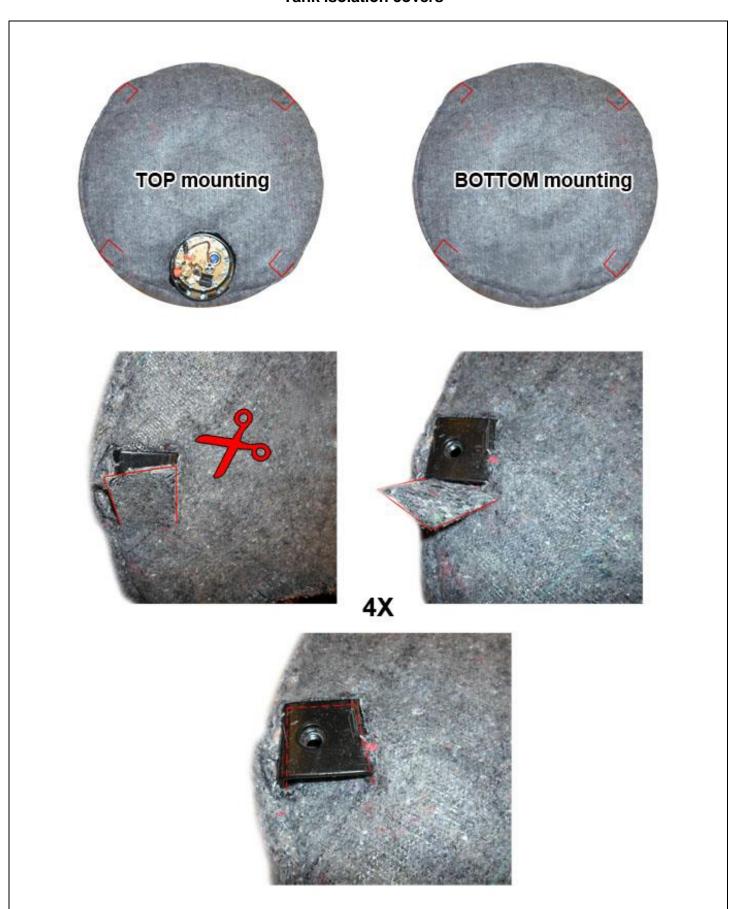




# **Spare wheel room Preparation**



Remove all covers and tools. Remove plastic door step.

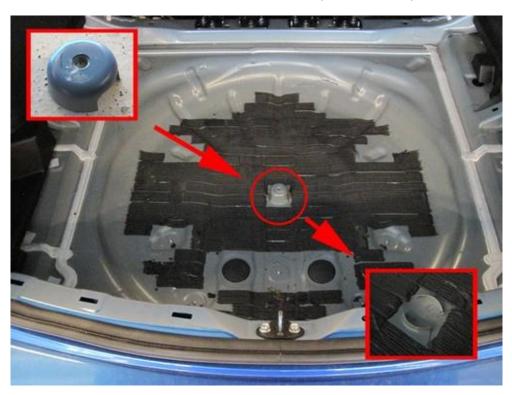

Remove spare wheel support and treat with anti-rust.



PAGE 6 076/1307274

## Tank isolation









PAGE 7 076/1307274

# **Ventilation pipes**

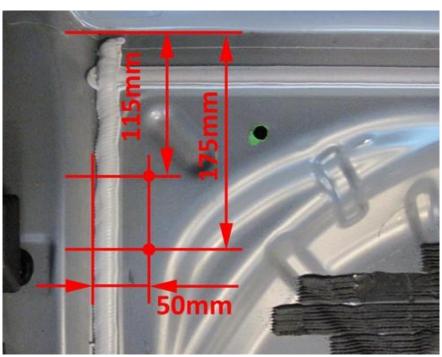

Mark the holes for the bleeders.

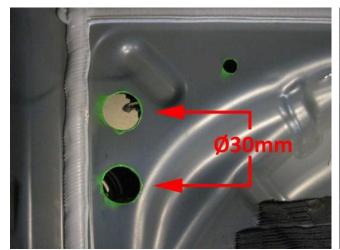




Drill holes for bleeder Ø30mm and treat with anti-rust. Cut of bleeders (see picture) and mount bleeders.

PAGE 8 076/1307274

# Front Tank bracket placement



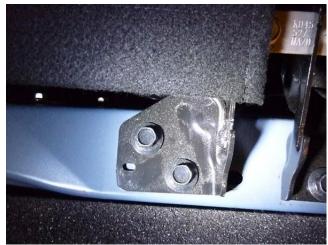



Install brackets onto the tank and on top of the back seat brackets, use the original bolts. 25Nm





Left right

PAGE 9 076/1307274


# Rear Tank bracket placement

Install rear brackets, mark and drill the holes. Secure brackets with M10 bolts and big washer plates on the underside.





Left right

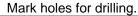



Drill holes Ø11mm and treat with anti-rust.



PAGE 10 076/1307274

## Filler →2017



Remove cover in left rear wheel arch. Mark hole for drilling.



Drill hole Ø70mm for filler. File out "ribs" for the locking of the filler housing.



Mount filler hose to filler. Mount filler with hose to filler housing.

PAGE 11 076/1307274

#### Filler →2017



Mount filler with hose to filler housing with screws and back plate.





Mount rear filler housing to front filler housing with the supplied parker screws.

PAGE 12 076/1307274

## Filler hose →2017





Mount filler cap. Fixate filler hose with clamps.





Filler hose routing.



Stab filler hose through bleeder.



PAGE 13 076/1307274

#### Filler 2017→



Mount the filler directly into the filler housing.





Adapt 2 corners of the filler cap and mount to the filler.



Different routing inside wheel arch for the 2017 $\rightarrow$  model, the rest is the same.




PAGE 14 076/1307274

#### Hose connection to tank

Stab hoses / wiring trough bleeder. Mount tank bleeders to tank.



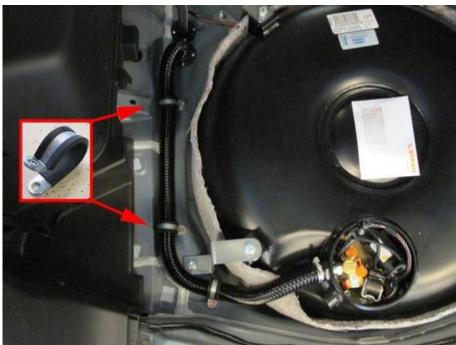


Mount filler hose to tank with bleeder hose around. Fixate hose with clamps.

Connect fuel lines and wiring to tank (for wiring see last page) with bleeder hose. Fixate hoses to each other with pulling straps. Mount tank cover.


PAGE 15 076/1307274

#### Floor cover



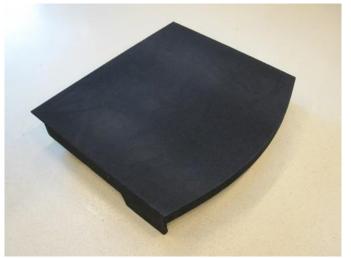

Mount floor cover.

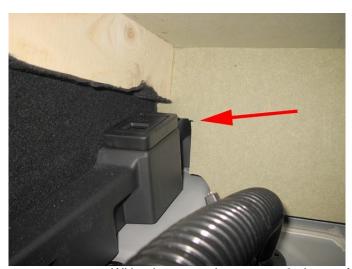



With a luxury trunk, cut away 2 pieces of the floor cover to fit over the plastic bar.





Example: with the option of a subwoofer, remove the speaker from the box and mount to the floor cover.

Also drill the hole in the floor cover for the speaker.

PAGE 16 076/1307274

# Tank wiring

Wire number / code		Wire colour	Connection		
3-pole tank level connector 1. 33 Ground tank level		Brown-white	Connect the 3-pole connector to the tank level sensor.		
	Tank level in	Blue	Connect the 3-pole connector to the tank level sensor.		
3. 11	+ tank level supply	Red-blue			
4-pole T	4-pole Tank P/T sensor				
1. 45	Ground P-Tank	Brown-black	Connect the 4-pole connector to the P/T sensor.		
	P-Tank	Green			
3. 15 4. 28	T-Tank +5V sensor	Grey Red			
4. 20	+3 V Serisor	Neu			
	teering Diagnose connector	Duarra	Commont the Complete commont of the driver commont of the		
1. 2.	Ground pump driver +12V pump driver	Brown Red	Connect the 2-pole connector to the driver, connector 3.		
2.	+12 v pullip ulivei	Neu			
2-pole Steering Diagnose connector					
1. 71	LSS3 Pump driver PWM	Purple-pink	Connect the 2-pole connector to the driver, connector 4.		
2. 64	Pump driver diagnose	Blue-grey			

Wire colour	Connection	
Green-yellow	From tank pump driver	
Brown	From tank pump driver	
Red	From tank pump driver	
Brown	From tank pump driver	
Brown	From main ground	Ground pump driver
Red	From tank pump relay	+12V pump driver
Green	From AFC pin 71	LSS3 Pump driver PWM
Grey	From AFC pin 64	Pump driver diagnose
	Green-yellow Brown Red Brown Brown Red	Green-yellow Brown From tank pump driver From tank pump relay  Green From AFC pin 71

