



Installation manual Dedicated PART 2/2

MANUFACTURER	VOLVO
TYPE	V60 / V70 T4F
ENGINE DISPLACEMENT	1600cc
NUMBER OF VALVES	16v
ENGINE CODE / NUMBER	B4164T2
VEHICLE CATEGORIES	M
TRANSMISSION	MT/AT
VERSION	Direct LiquiMax-2.0
PETROL ECU MANUFACTURER / CODE	Bosch MED 17.0
HIGH PRESSURE PETROL PUMP	Bosch HDP-5-PE 0261.520.(064)/(065)/(100)/(101)/(139)/(140)
HIGH PRESSURE PETROL INJECTOR	Bosch HDEV-5-1 0261.500.(119)/(120)/(103)
MODEL YEAR:	2012
SYSTEM APPROVAL NUMBER (R115)	E4-115R-000009 / DLM-LPG 02
LOCATION SYSTEM STICKER	right side, centre door post
ENGINE SET NUMBER	367/070007/A (V60) / 367/070003/A (V70)
MANUAL NUMBER	076/2705900
DATE	2015-01-06



TABLE OF CONTENTS

General instructions	2
Required equipment / tools / materials for installing a complete system	3
Vehicle check	3
Tightening moments	4
Direct LiquiMax	5
Overview Direct LiquiMax	6
Direct LiquiMax parts / approval numbers	7
Mounting and connection points	8
Removal of the Bosch High Pressure Pump	8
Installation of the Bosch High Pressure Pump	10
High pressure pump installation	11
High pressure pump return	12
Boost pump	13
Connection of the fuel hose to the boost pump	14
Fuel Supply Unit	15
Mounting the Fuel Supply Unit	16
Fuel Return Unit	17
Mounting the Fuel Return Unit	18
Lpg / petrol fuel lines	19
Supply hose – Return hose – Tank wiring	20
Hose routing	21
Hose routing	22
Mounting the AFC	23
Wiring routing	24
Mounting the fuel selection switch	25
Electrical connections	26
Electrical connections	27
Electrical connections	28
Electrical connections	29
Electrical connections	30
Electrical connections	31
Checklist after installation	32

FOR EXPLANATION AND CIRCUIT DIAGRAMS SEE : INSTALLATION MANUAL GENERAL PART 1 / 2



General instructions

- The installation of the system shall be done in accordance with the installation manual provided by Prins Autogassystemen.
- This manual is based on Dutch regulations, always install the system in accordance to the local regulations.
- For an optimal functioning of the Direct LiquiMax system, maintain a clean and organized work environment during installation and maintenance to prevent pollution of the LPG components.
- Always download the “general manual 1/2 “ from our website for basic instructions and diagrams.
- Always disconnect the battery when installing the lpg system. Make sure the ignition key is outside the car. Be aware of central door locking, radio / telephone memory code, alarm system.
- Wear safety goggles when working on petrol filled system / connections (pressurized petrol)
- Do not place the main fuse into the fuse holder before having completed the installation of the system.
- The AFC has to be activated by means of the Prins diagnosis software.
- Never disconnect the AFC connector, unless you have removed the main fuse.
- When installing the wiring harness, ensure that it does not run near any of the ignition components.

Solder and insulate all electrical connections.

The wires in the loom are provided with numbers and text. The text on the wire explains the function of the wire. The wire harness is not model specific, therefore it may be necessary to adjust the length of the wires. Ensure maximum care is taken when connecting wiring.

Make professional joints using solder and shrink sleeve. Do not stretch the wiring harness.

- No component of the LPG-system shall be located within 100 mm of the exhaust or similar heat source, unless such components are adequately shielded against heat.
- If holes have to be drilled (wear safety glasses) for installing brackets, etc., the drilled holes must always be treated with an anti-corrosion agent, after the chips have been removed (especially when mounting a exterior filler into body work).
- After having completed the installation, check the whole system for lpg leakage; use a lpg leak detection device. Also check for leak of engine coolant, petrol and air.
- Fitting and maintenance is only allowed by Prins Autogassystemen selected LPG engineers.
- Failure to follow the instructions in this manual can result in a poor or non-working lpg installation or a dangerous situation.
- For maintenance instructions and filter registration see owner manual.
- Prins Autogassystemen is not responsible for any damages to people or objects as a result of changes to Prins products.
- Check our website regularly for diagrams, certificates, updates, info-bulletins and product information.

Register (warranty card) the system on the Prins warranty portal .



Required equipment / tools / materials for installing a complete system

- Complete workshop toolbox (wrenches, screwdrivers, cutters, pliers, ratchet, sockets)
- Car lift
- Portable computer : operating on Windows 98, W2000 or XP.
 - Internal memory : 16 Mb or more
 - Memory HD space : 5MB
 - Screen : 256 colours, advise colours 16 bits or more
 - Com port : 1 free COM port 1 or COM port 2 with a 9 or 25 pins connector
- Vehicle fuel system scan tool or OBD scan tool Prins (part nr. 099/99928)
- Exhaust gas analyser
- Multimeter
- Oscilloscope
- Prins diagnostic software
- Prins serial interface
- Torque wrench (10Nm)
- Torque wrench (200-250Nm)
- Portable light
- Assortment drill bits 4 to 12 mm
- Assortment cutters (ø 20, 30, 50, 70 mm)
- Portable drill or pneumatic drill
- Thread cutting device (male M6x1, M8x1, M10x1)
- Socket 46mm
- Air gun
- Vacuum cleaner
- Safety goggles
- Hot air gun
- Soldering iron, soldering tin
- Wire-stripping pliers
- Adhesive tape
- Adhesive sealant
- Thread locking compound
- Anti-corrosion agent / black body coating
- Gas leak detection device or foam leak spray
- Shrink sleeves
- Engine coolant

Vehicle check

- Check the vehicle drivability on petrol
- Check the fuel system for error codes (scan tool)
- Check if the catalytic converter is in good condition (exhaust gas analyzer)
- Check the condition of the ignition system (spark plugs, cables, coil)



Tightening moments

	Nm	SW
M 4 x 0,7	3,3	7
M 5 x 0,8	6,5	8
M 6 x 1,0	11,3	10
M 7 x 1,0	14,5	11
M 8 x 1	50,1	13
M 8 x 1,25	27,3	13
M 10 x 1	103	15-16-17
M 10 x 1,5	54	15-16-17
(filtered)Banjo bolt	10	14
Supply line connection	15	13
Fuel module Allen bolts	20	7
Filler hose connection	50	22
HPP cover Hitachi	220	46

EXPLANATION OF SYMBOLS :




= IMPORTANT,
CAUTION



= WEAR SAFETY GOGGLES




Direct LiquiMax

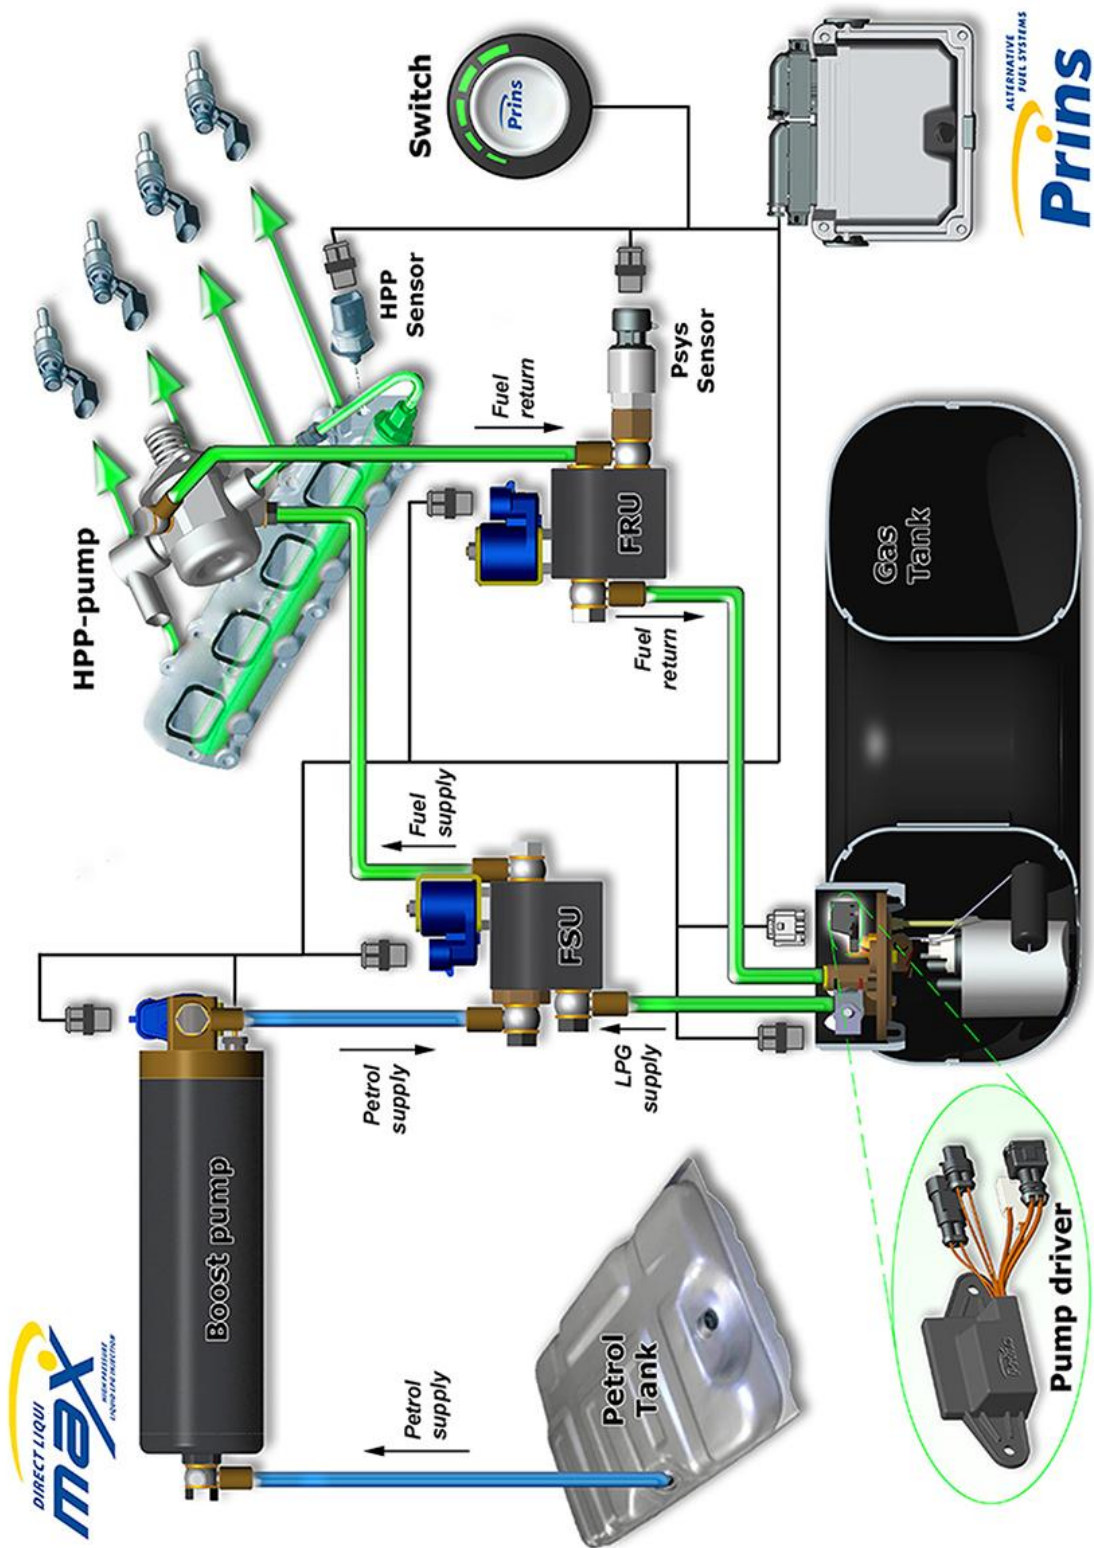

Overview Direct LiquiMax

overview Direct Liqui Max

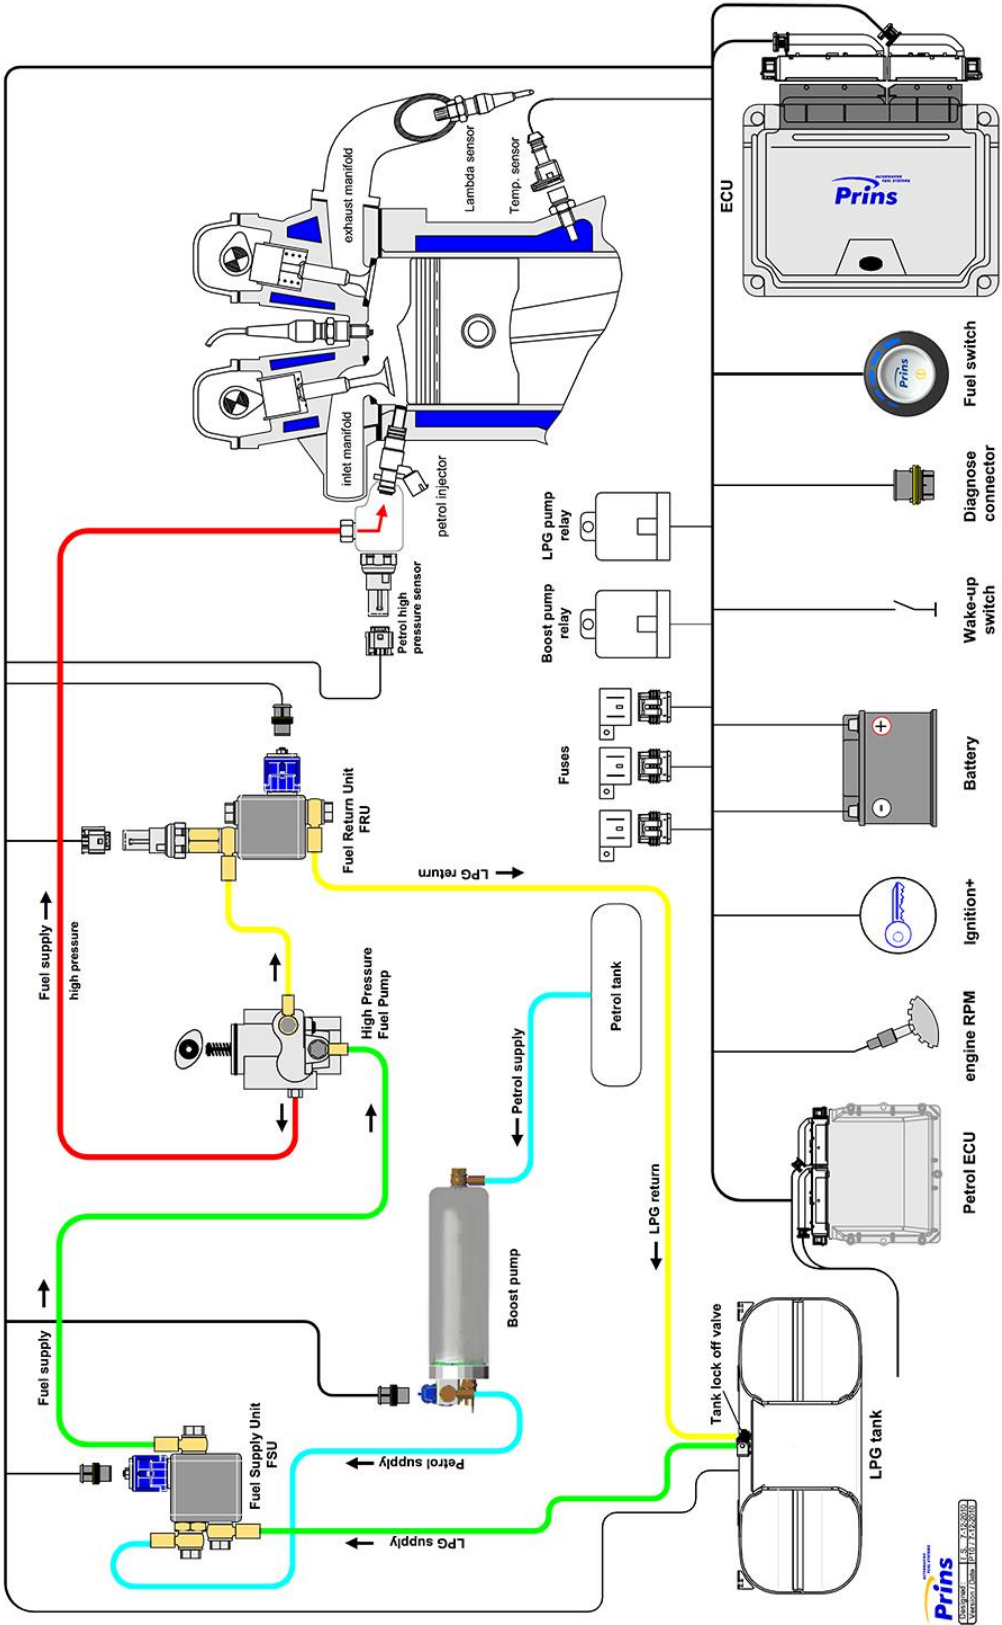

Direct LiquiMax parts / approval numbers

 1st generation  2nd generation	 1st generation  2nd generation
Fuel Supply Unit : E4-67R-010269	Fuel Return Unit : E4-67R-010270 Pressure Sensor : E4-67R-010051
	
Boost pump	High Pressure Pump : E4-67R-010266 High Pressure Rail : E4-67R-010267 High Pressure Injectors : E4-67R-010309
	 XD-3 LPG  XD-4 LPG
Prins AFC : E4-67R-010098 E4-10R-030507	Fuel lines series XD : E4-67R-010247 XD3 E4-67R-010247 XD4



Mounting and connection points



A : High pressure petrol pump	L : R115 Approval sticker
B : Fuel Supply Unit : FSU	M : Grommet
C : Fuel Return Unit : FRU	N : Gas system fuses
D : Boost pump	P : T-ect
E : AFC	Q : Low pressure signal
F : Boost pump relay	R : MAP, Analog 3
G : Tank relay	S : Analog 2
H : Petrol ECU	T : Analog 4
I : Engine speed signal RPM	V : Digital input 3
J : “+” ignition	W : Wake-Up
K : High pressure signal Analog 1	X : Digital input



L:
R115 approval sticker :
Right side centre door post

Removal of the Bosch High Pressure Pump



-REMOVAL-

-WARNING-


In case of removing the high pressure fuel pump, high pressure fuel pipe, delivery pipe, there may be injury caused by leakage of the high pressure fuel.

Don't do any repair work right after engine stops (HOT engine).

- Turn the ignition switch OFF and disconnect the battery negative (-) cable.
- Wear safety goggles.
- Disconnect the fuel pressure regulator valve connector
- Disconnect the High Pressure fuel feed pipe (B)
- Remove the Low Pressure fuel pipe / hose (A).
- Remove the installation bolts (E), and then remove the high pressure fuel pump from the cylinder head assembly.

CAUTION:

Unscrew in turn the two bolts in small steps (0.5 turns). In case of fully unscrewing one of the two bolts with the other bolt installed, the housing surface of the cylinder head may break because of tension of the pump spring.

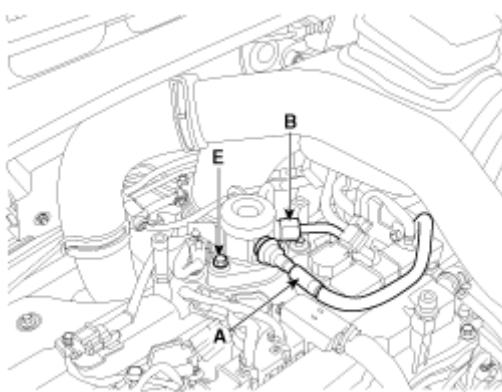

CAREFULLY store the removed petrol pump. Make sure no pollution can come into the pump.




Installation of the Bosch High Pressure Pump

INSTALLATION:

Before installing the high pressure fuel pump, position the roller tappet (**B&C**) in the lowest position by rotating the crankshaft. Otherwise the installation bolts may be broken because of tension of the pump spring.

Apply engine oil to the O-ring (**A**) of the high pressure fuel pump, the roller tappet (**B**), and the protrusion (**C**). (roller tappet, only if removed from cylinder head)
Also apply engine oil to the groove on the location where the protrusion (**C**) is installed.

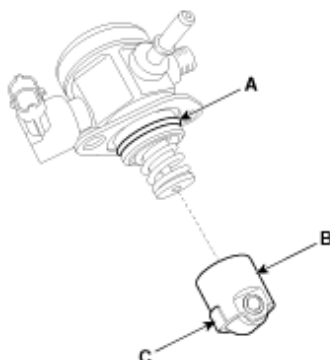

Installation bolts:

When tightening the installation bolts of the high pressure fuel pump, tighten and turn the bolts in small step (0.5 turns) after tightening them with hand-screwed torque.

High pressure fuel pump installation bolt: 12.8 ~ 14.7 N.m

Fuel pipe:

First hand-tighten the nut(s) fully until they are not fastened any more in order to have them inserted in place and then completely tighten to the specified torque using a torque wrench.
If not tightening the bolts or nuts in a straight line with the mating bolt holes or fittings, it may cause a fuel leak due to broken threads.

High pressure fuel pipe installation nut: 26.5 ~ 32.4 N.m

Installation is reverse of removal.



High pressure pump installation



Replace the high pressure pump for the adapted high pressure pump.
(Follow the workshop manual of the car)



Install a normal bolt (M6x20 tighten 12-14Nm).



Remove fuel line, remove pressure sensor and install into adapter (page 13)



High pressure pump return


Replace the high pressure pump for the adapted high pressure pump.
(Follow the workshop manual of the car)



Adapt cover. Remove bolt (cut away)





Boost pump


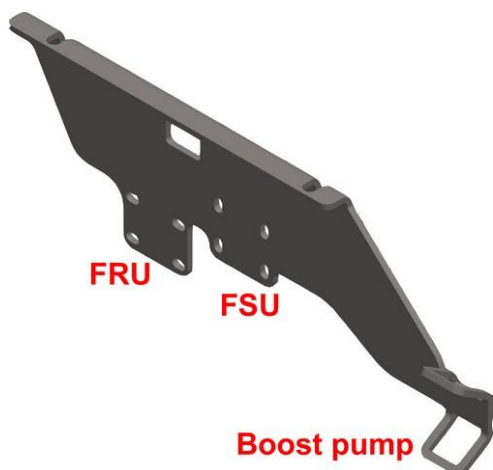


Connection of the fuel hose to the boost pump.

Connect the fuel hoses with an adapter to the boost pump.

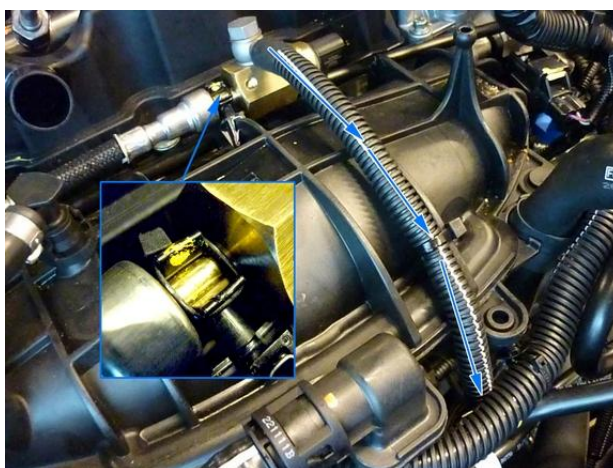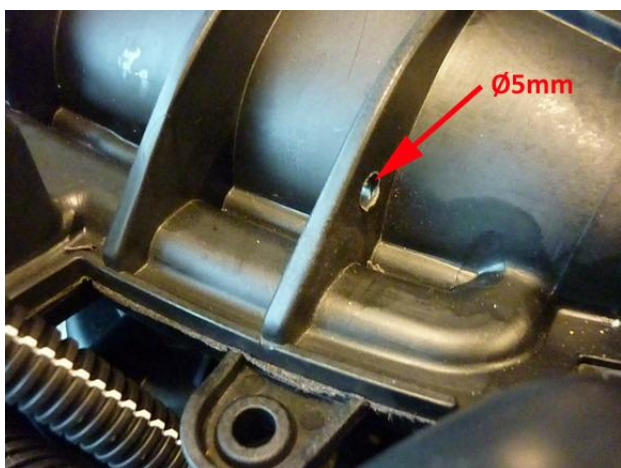

Fuel Supply Unit

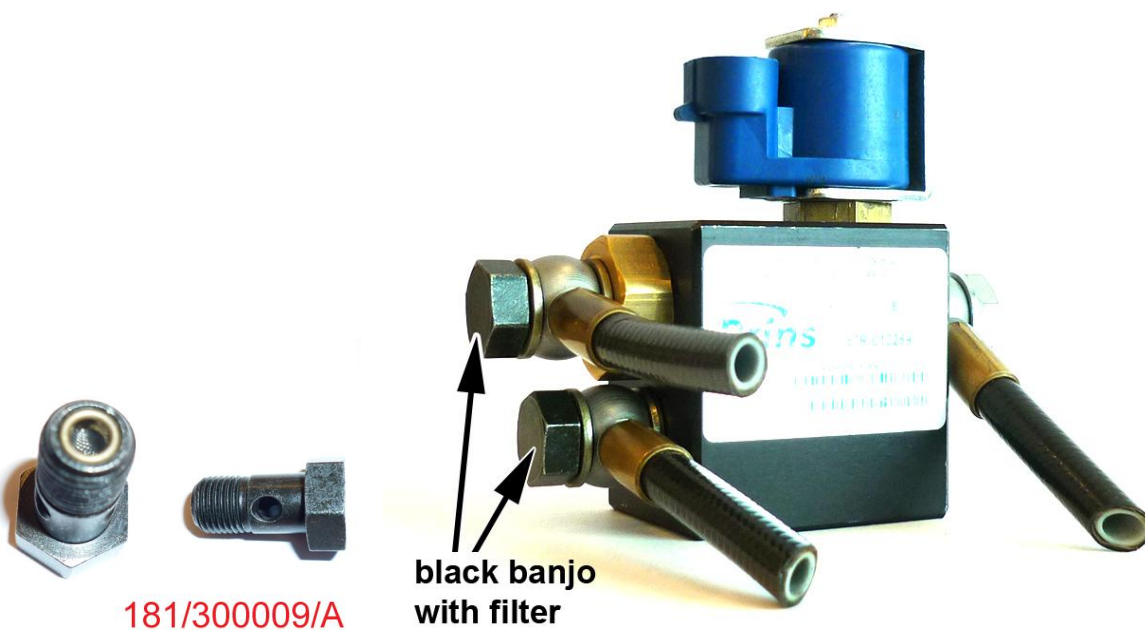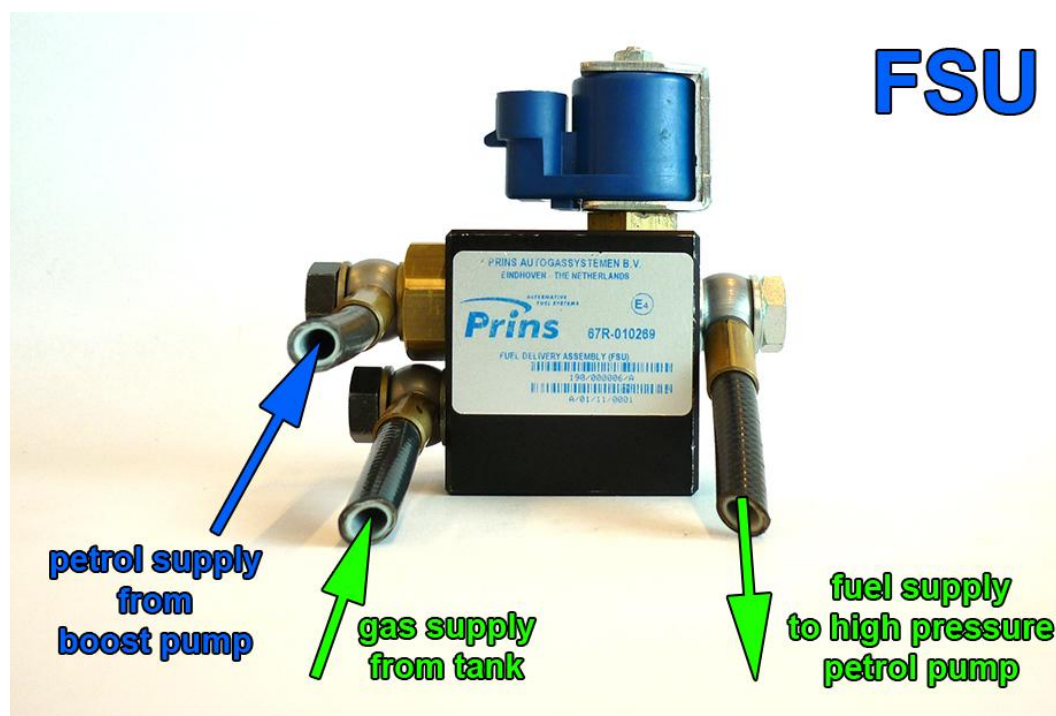


Black filtered banjo will only be used on inlet connections !



Mounting the Fuel Supply Unit





70cm, filtered banjo

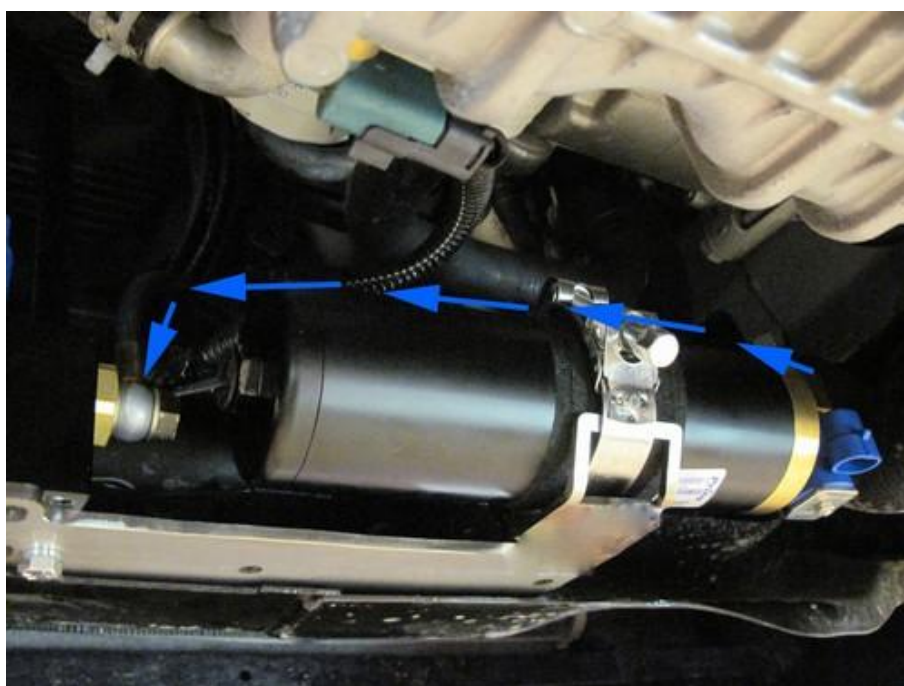


40cm



Fuel Return Unit

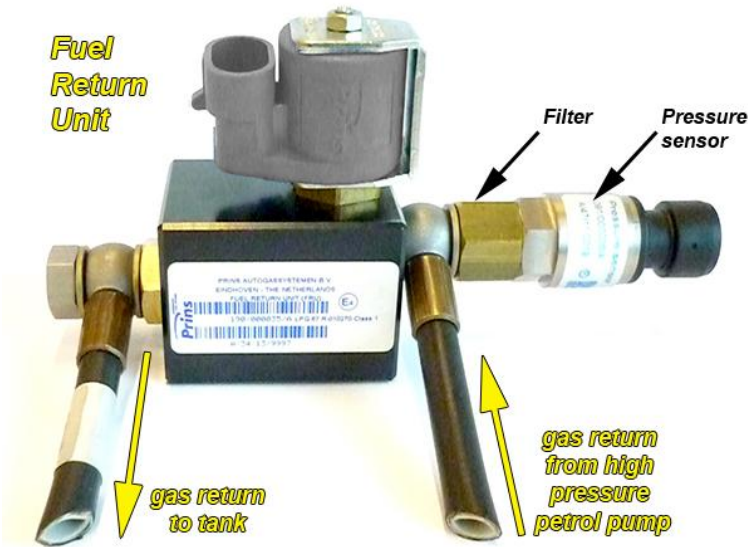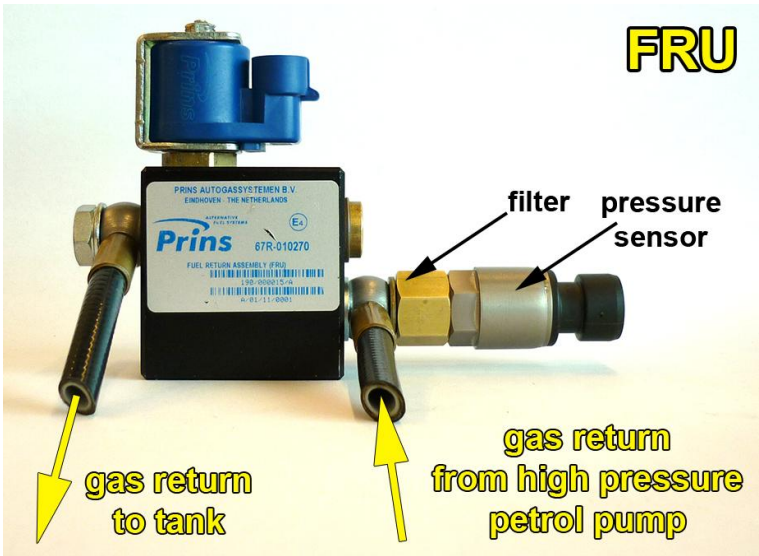

Filter inside sensor banjo

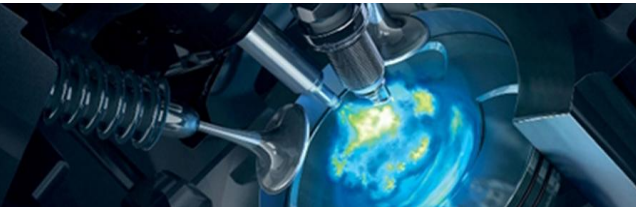

Mounting the Fuel Return Unit




Lpg / petrol fuel lines

Hose	from	to	Length (cm)
XD-3	Adapter original petrol hose	Petrol boost pump	70
XD-3	Fuel supply unit	High pressure petrol pump	100
XD-3	Petrol boost pump	Fuel supply unit	40
XD-3	Fuel return unit	High pressure petrol pump	115



Install the fuel line using two bonded seal washers and banjo bolt :

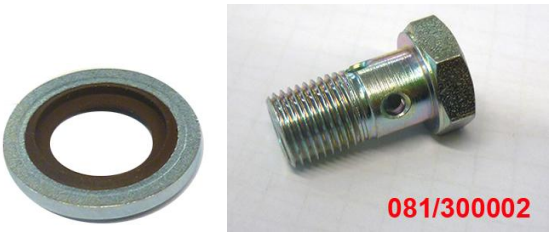


Filtered banjo: (FSU supply inlets / boost pump inlet : black filtered banjo) :




Supply hose – Return hose – Tank wiring


Protect the supply- and return hose together with tank-wiring using the Ø16 split tube.
Mount the "hose assembly " with clamps, with a maximum distance of 40cm.

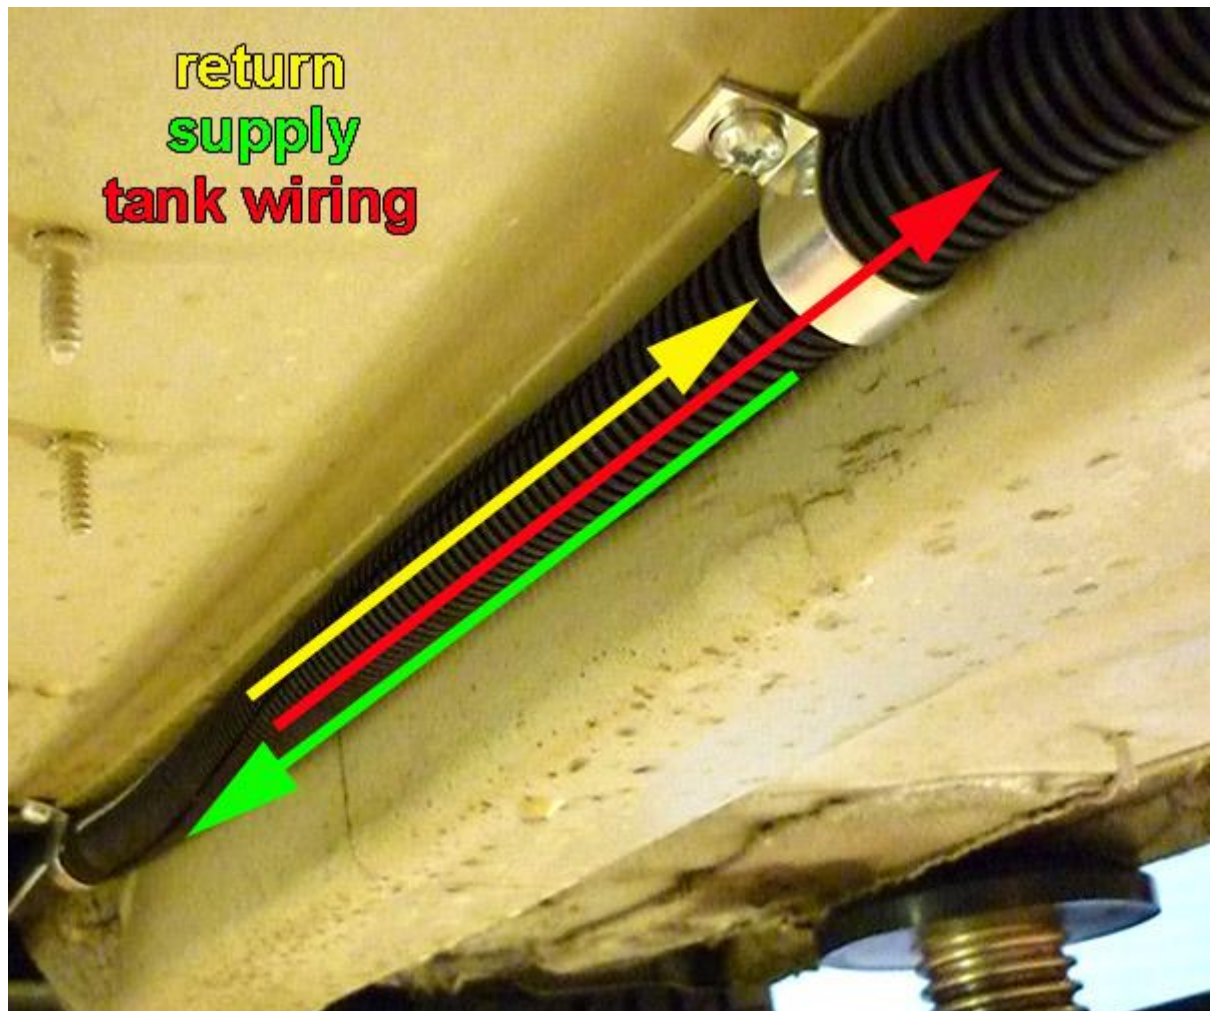



Hose routing

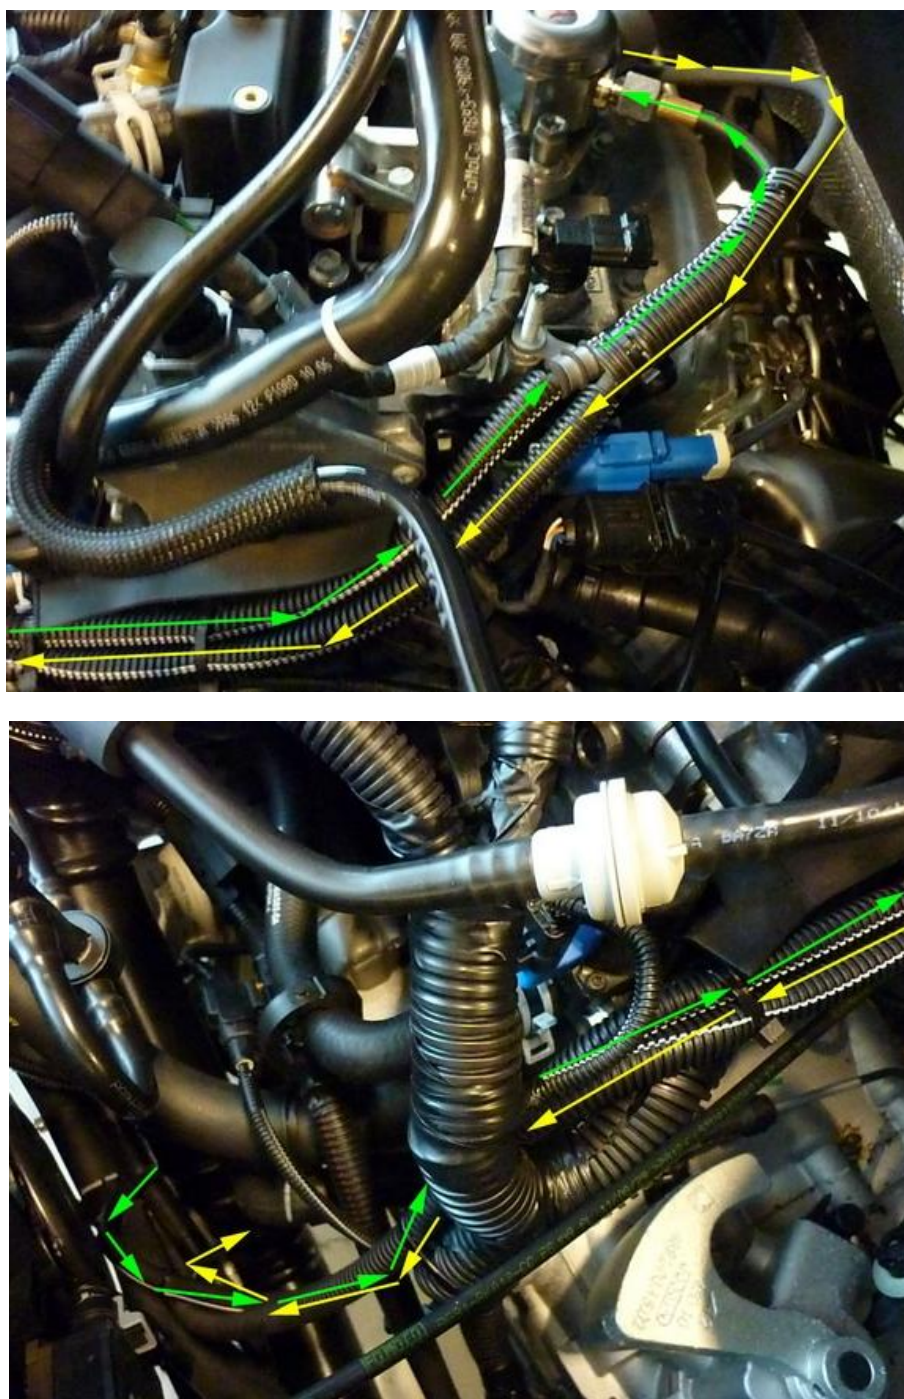


Hose routing

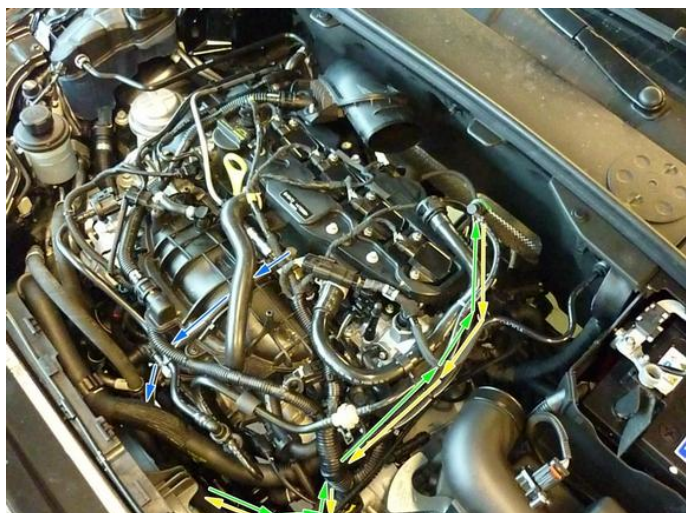

Mounting the AFC

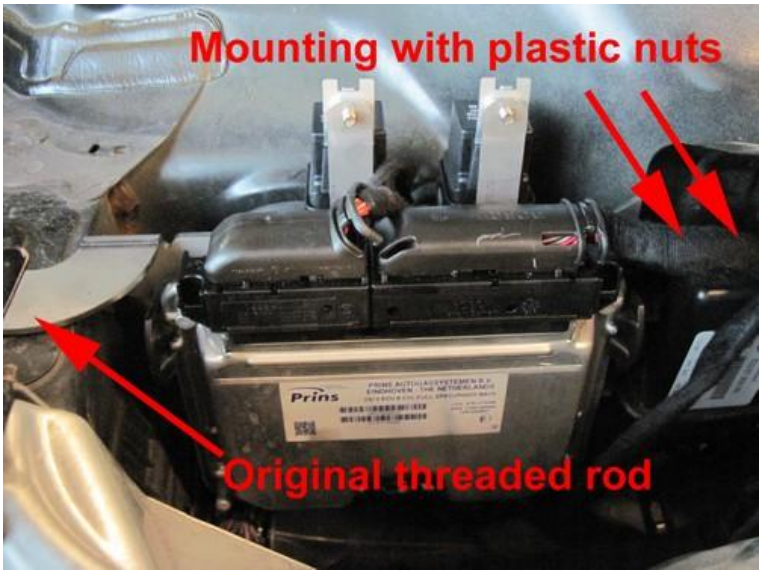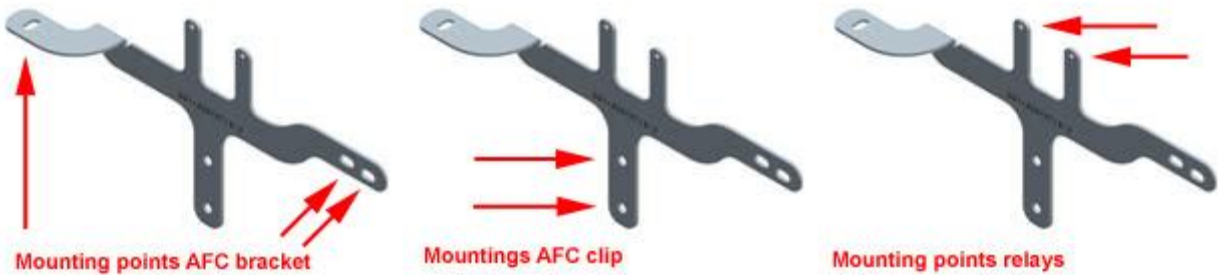


Mount the AFC unit with AFC clip and relays.

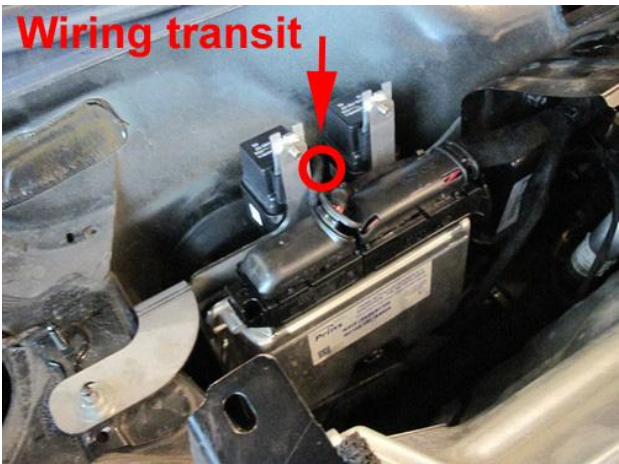

Wiring transit



Wiring routing

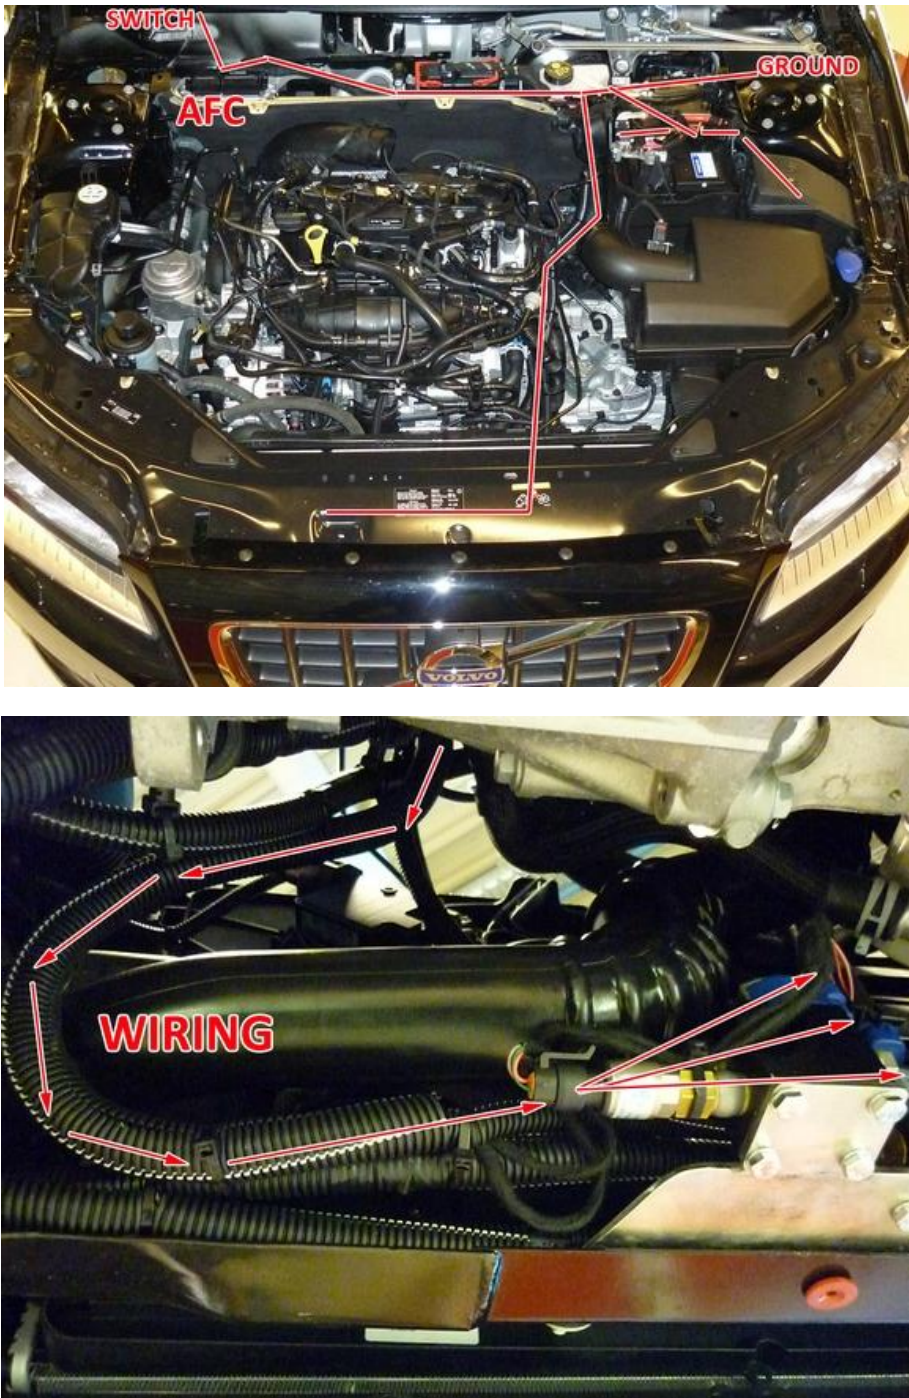




Mount the switch.
Drill Ø8.2mm

Mounting the fuel selection switch



or

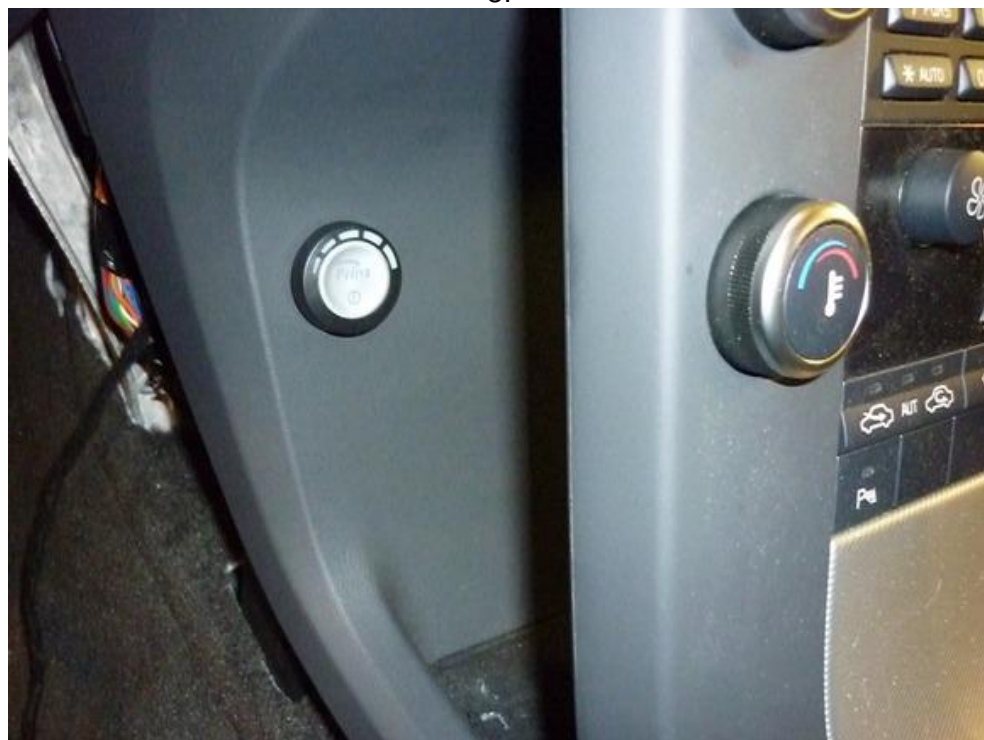

Electrical connections

**Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.**

Driver room

Wire number / code	Wire colour	Connection
3-pole micro connector 66 Ground fuel switch 3 +12V fuel switch 49 LIN fuel switch	Brown Red Yellow	Connect the 3-pole connector to the Prins fuel selection switch.
51 CAN-High	Blue-yellow	EOBD connector pin 6
70 CAN-Low	Blue	EOBD connector pin 14

1-32 MAIN GND ecu MAIN GROUND SENSE MAIN GND pump driver MAIN GND boost pump	Brown	Connect to the '-' of the battery (-31) ; use a ring terminal. Wire colour : Brown Wire location : Under the black panel, under the windshield wiper
--	-------	--





4 – 13 – 44 +12V BATT sense +12V BATT fused +12V BATT boost pump +12V BATT pump driver	Red	Connect to the '+' of the battery (+30) ; use a ring terminal. Do not place the fuse in the holder before having completed the installation of the lpg system. Wire colour : Red Wire location : Battery
--	-----	--



Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

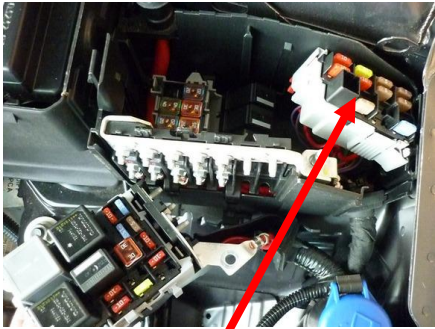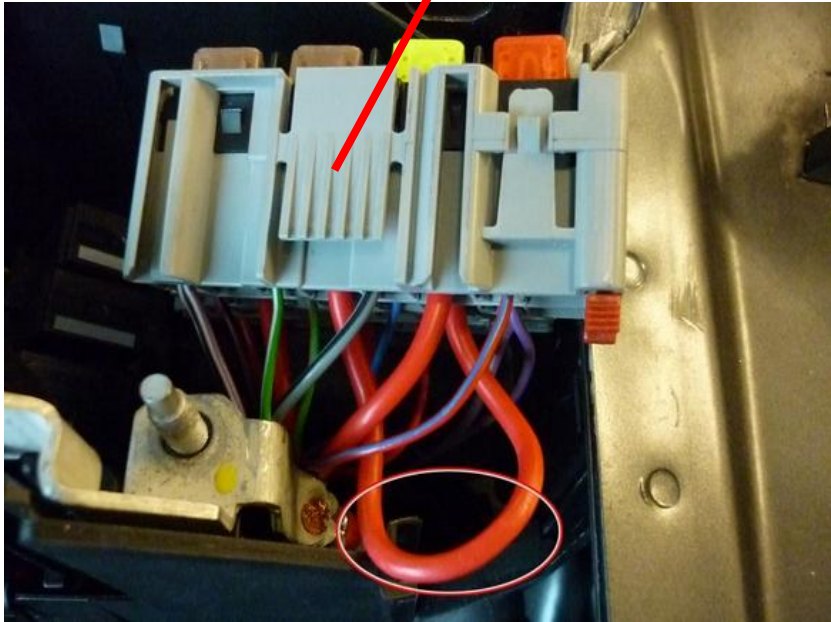7	+12V IGNITION	Grey - white	Make a connection to ignition + / contact + (+15). Do not place the fuse in the holder before having completed the installation of the lpg system. Wire colour : Red (wire loop) Wire location : In fuse box.    
---	---------------	--------------	--



Electrical connections

**Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.**

Wire number / code	Wire colour	Connection
18 Analog 1 25 Simulation 1	Blue-red Green-grey	<i>High pressure sensor petrol interruption (HPPS)</i> Sensor side. ECU side. Wire colour :blue-brown Wire location :Petrol ecu pin A9
17 Analog 2 10 Simulation 2	Blue-black Green-black	<i>Low pressure sensor petrol interruption</i> Sensor side. ECU side. Wire colour :purple-brown Wire location :Petrol ecu pin A7
19 Analog 4	Blue-white	<i>High pressure sensor petrol ground</i> Wire colour :blue-grey Wire location : Petrol ecu pin A34
119 Digital input 2 23 Digital Simulation	Yellow-grey Green-red	<i>Digital Airflow 1</i> Sensor side. ECU side. Wire colour :yellow-lila Wire location :Petrol ecu pin A55
115 Digital input 4	Yellow-red	<i>Petrol fuel pump driver (PWM in)</i> Fuel control unit Wire colour : yellow-orange Wire location :Petrol ecu pin B45
121 Wake-up	Red-grey	<i>5 volt sensor supply HPPS</i> Wire colour : grey Wire location :Petrol ecu pin A23

A = big ecu connector

B = smallest ecu connector



Electrical connections

**Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.**

Wire number / code	Wire colour	Connection
27 +5V sensor 37 C ground 20 Analog 3 MAP*	Red: insulate Brown: insulate Blue	<i>For measuring the inlet manifold pressure from the engine MAP sensor.</i> Cut off connector from the Prins wiring loom. Wire colour : Green-brown Wire location : petrol ecu pin A83
8 RPM	Purple-white	For measuring the engine speed signal. Wire colour : Brown /Blue Wire location : petrol ecu pin A80
15 T-ect	Grey	For measuring the engine coolant temperature. Wire colour : Yellow Wire location : Petrol ecu pin A12
6 Lambda1 WB	Orange	insulate
42 Lambda2 WB 10KΩ	Orange-white	insulate
14 T-LPG	Grey	insulate
117 Digital input 3	Yellow-black	insulate
97 Digital input 5	Yellow-orange	insulate
113 Digital input 6	Yellow-purple	insulate



Electrical connections

**Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.**

Engine room

Wire number / code	Wire colour	Connection
<i>3-pole connector</i>		Connect the 3-pole connector to the Psys sensor positioned into the Fuel Return Unit.
35 C Ground pin A 9 +5V sensor pin B 16 Psys pin C	Brown Red Green	Sensor wire pin A Sensor wire pin B Sensor wire pin C
<i>2-pole connector Boost Pump</i>		
106 + Lock-off Boost Pump 98 Ground lock-off	Red White-yellow	Connect the 2-pole connector to the lock-off valve of the Boost Pump.
<i>2-pole connector FSU</i>		
108 + Lock-off FSU 100 Ground lock off	Red Pink-yellow	Connect the 2-pole connector to the lock-off valve of the Fuel Supply Unit
<i>2-pole connector FRU</i>		
90 + Lock-off FRU 82 Ground lock off	Red Blue-yellow	Connect the 2-pole connector to the lock-off valve of the Fuel Return Unit
<i>4-pole diagnose connector</i>		<i>Diagnose connector for service / diagnosis</i>
46 Service TxD 65 Service RxD 68 C ground	Grey Grey Brown	Connector pin 1 Connector pin 2 Connector pin 4
<i>Boost pump relay</i>		
107 + relay boost pump 99 GND relay boost pump +12V fused BATT +12V Boost pump	Red Green-yellow Red Red	Pin 86 of the boost pump relay Pin 85 of the boost pump relay Pin 30 of the boost pump relay Pin 87 of the boost pump relay
<i>Wiring tank pump driver relay</i>		
2 + driver relay 26 Ground driver relay +12V BATT fused +12V driver	Red Green-yellow Red 2.5mm2 Red 2.5mm2	Pin 86 of the driver relay Pin 85 of the driver relay Pin 30 of the driver relay Pin 87 of the driver relay




Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Lpg tank housing

Wire number / code	Wire colour	Connection
3-pole tank level connector		Connect the 3-pole connector to the tank level sensor.
40 Ground tank gauge 12 Tank level in 11 + tank level supply	Brown Blue Red	
1. 2-pole connector tank lock-off	Green-yellow Brown	From tank pump driver From tank pump driver
2. 3-pole connector tank pump	Red 2.5mm ² Brown 2.5mm ²	From tank pump driver From tank pump driver
3. 2-pole connector driver	Red 2.5mm ² Brown 2.5mm ²	From tank pump relay 87 From main ground
4. 2-pole connector driver	Green Grey	From AFC pin 22 pwm From AFC pin 64 diagnose

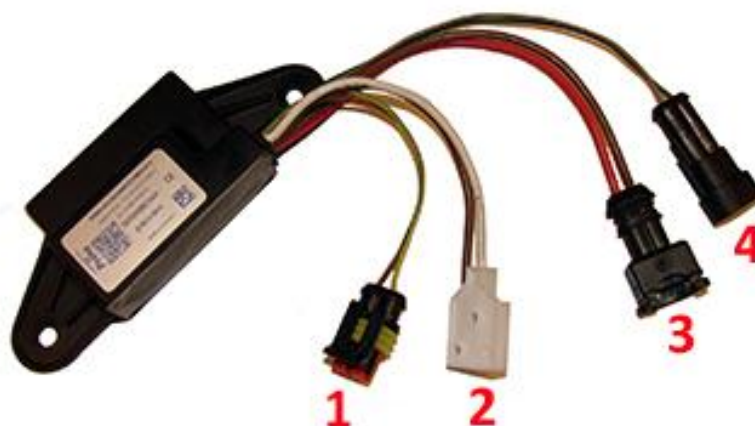

Checklist after installation

1. Install the system fuses.
Turn on ignition.
Connect the Prins interface wire and run the Prins diagnosis program.
When working on the car, beware of moving and rotating parts in the engine compartment (even when the engine is not running !!).
2. When commissioning the LPG system, you must activate the AFC with the diagnosis software.
3. Check whether the program in the AFC matches with the car (dedicated engine set):
See "Identification" in the diagnosis program.
4. Check all components and connections for any LPG leakage, use a LPG leak detector device or a fluid detection like soap. Also check for petrol leakage. Make sure the solenoid valves are in open position.
No evidence of leakage is permitted.
Caution for moving and rotating parts in the engine compartment !
5. Use the diagnosis software to check again all input and output signals.
6. Check the system for error codes and solve these, if required.
Check the petrol MMS for EOBD error codes.
Place the protection connector back on the diagnose connector.
7. Make a test drive and check the cars drivability on LPG and petrol.

