



Installation manual

PART 2/2

MANUFACTURER	VAG
TYPE	(based on Audi A6)
ENGINE DISPLACEMENT	2000cc
NUMBER OF VALVES	16
ENGINE CODE / NUMBER - OUTPUT	BPJ – 125kW
FIRING ORDER	1-3-4-2
VEHICLE CATEGORIES	M
TRANSMISSION	MT / AT
VERSION	AFC-2.1 DI - LPG
TYPE VSI INJECTOR	KN9 - 82 cc
TYPE INJECTION MODULE	GEN2 TYPE 2
PETROL ECU MANUFACTURER / CODE	BOSCH MED 9.1
MODEL YEAR:	2005 -
SYSTEM APPROVAL NUMBER (R115)	E4-#115R-000020 / VSI-LPG 31
LOCATION R115 SYSTEM STICKER	right side, centre door post
ENGINE SET NUMBERS	366/121028/A
MANUAL NUMBER	076/2617400
DATE	2018-09-12

Copyright © Prins Autogassystemen B.V. 2018



TABLE OF CONTENTS

General instructions	2
Required equipment / tools / materials for installing a complete system	3
Vehicle check	3
Tightening moments.....	4
Base diagram	4
VSI approval numbers.....	6
Overpressure / MAP connection	7
Mounting the inlet manifold couplings	8
Mounting the VSI injector rail	9
Coolant hose diagram	10
Mounting the fuel selection switch	11
Wiring Diagram.....	12
Electrical connections – Insulate	13
Petrol ecu box	14
Electrical connections IM	15
Electrical connections	16
Electrical connections	17
Electrical connections	18
Electrical connections	19
Electrical connections	20
Checklist after installation	21

FOR EXPLANATION AND CIRCUIT DIAGRAMS SEE : INSTALLATION MANUAL GENERAL PART 1 / 2



General instructions

- The installation of the system shall be done in accordance with the installation manual provided by Prins Autogassystemen.
- This manual is based on Dutch regulations; always install the system in accordance to the local regulations.
- Always download the “general manual 1/2” from our [website](#) for basic instructions and diagrams.
- Always disconnect the battery when installing the LPG system. Make sure the ignition key is outside the car. Be aware of central door locking, radio / telephone memory code and alarm system.
- Do not place the main fuse into the fuse holder before having completed the installation of the VSI system.
- The VSI computer has to be activated by means of the diagnosis software.
- In the unlikely event the VSI computer fails, it will automatically switch over to petrol. Never disconnect the VSI computer connector, unless you have removed the main fuse.
- When installing the VSI wiring harness, ensure that it does not run near any of the ignition components.
- Solder and insulate all electrical connections.
The wires in the loom are provided with numbers and text.
The text on the wire explains the function of the wire.
The wire harness is not model specific, therefore it may be necessary to adjust the length of the wires.
Ensure maximum care is taken when connecting the wiring.
Make professional joints using solder and shrink sleeve. Do not stretch the wiring harness.
- No component of the LPG-system shall be located within 100mm of the exhaust or similar heat source, unless such components are adequately shielded against heat.
- Remove any internal burrs after having shortened the LPG pipe.
(This guarantees the maximum flow through the pipe without pollution.)
- If holes have to be drilled (wear safety glasses) for installing brackets, etc., the drilled holes must always be treated with an anti-corrosion agent after the chips have been removed (especially when mounting an exterior filler into the body work).
- After having completed the installation, check the whole system for gas leakage; use a gas leak detection device. Also check for any leak of engine coolant, petrol and air.
- Fitting and maintenance is only allowed by Prins Autogassystemen selected LPG engineers.
- Failure to follow the instructions in this manual can result in a poor or non-working LPG-installation or a dangerous situation.
- For maintenance instructions and filter registration see owner's manual.
- Prins Autogassystemen is not responsible for any damages to people or objects as a result of changes to Prins products.
- [Check our website regularly for diagrams, certificates, updates, info-bulletins and product information.](#)

Please fill in the [warranty portal](#) completely within 14 days after installation.



Required equipment / tools / materials for installing a complete system

- Complete workshop toolbox (wrenches, screwdrivers, cutters, pliers, ratchet, sockets)
- Car lift
- Portable computer
- Vehicle fuel system scan tool or OBD scan tool Prins (part nr. 099/99928)
- Exhaust gas analyser
- Multimeter
- Oscilloscope
- Prins diagnostic software
- Prins diagnostic tool
- Torque wrench (5-50Nm)
- Torque wrench (200-250Nm)
- Portable light
- Assortment drill bits 4 to 12 mm
- Assortment cutters (ø 20, 30, 50, 70 mm)
- Portable drill or pneumatic drill
- Thread cutting device (male M6x1, M8x1, M10x1)
- Air gun
- Vacuum cleaner
- Safety goggles
- Hot air gun
- Soldering iron, soldering tin
- Wire-stripping pliers
- Adhesive tape
- Adhesive sealant
- Thread locking compound
- Anti-corrosion agent / black body coating
- Gas leak detection device or foam leak spray
- Shrink sleeves

Vehicle check

- Check the vehicle drivability on petrol
- Check the fuel system for error codes (scan tool)
- Check if the catalytic converter is in good condition (exhaust gas analyser)
- Check the condition of the ignition system (spark plugs, cables, coil)




Tightening moments

	Nm	Spanner mm
M 4 x 0,7	3.3	7
M 5 x 0,8	6.5	8
M 6 x 1,0	11.3	10
M 7 x 1,0	14.5	11
M 8 x 1	24.5	13
M 8 x 1,25	27.3	13
M 10 x 1	52	15-16-17
M 10 x 1,5	54	15-16-17

EXPLANATION OF SYMBOLS :




= IMPORTANT, CAUTION

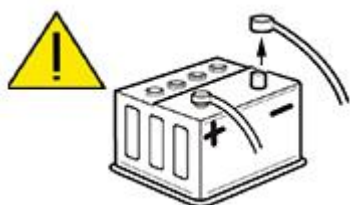


= WEAR SAFETY GOGGLES

Base diagram

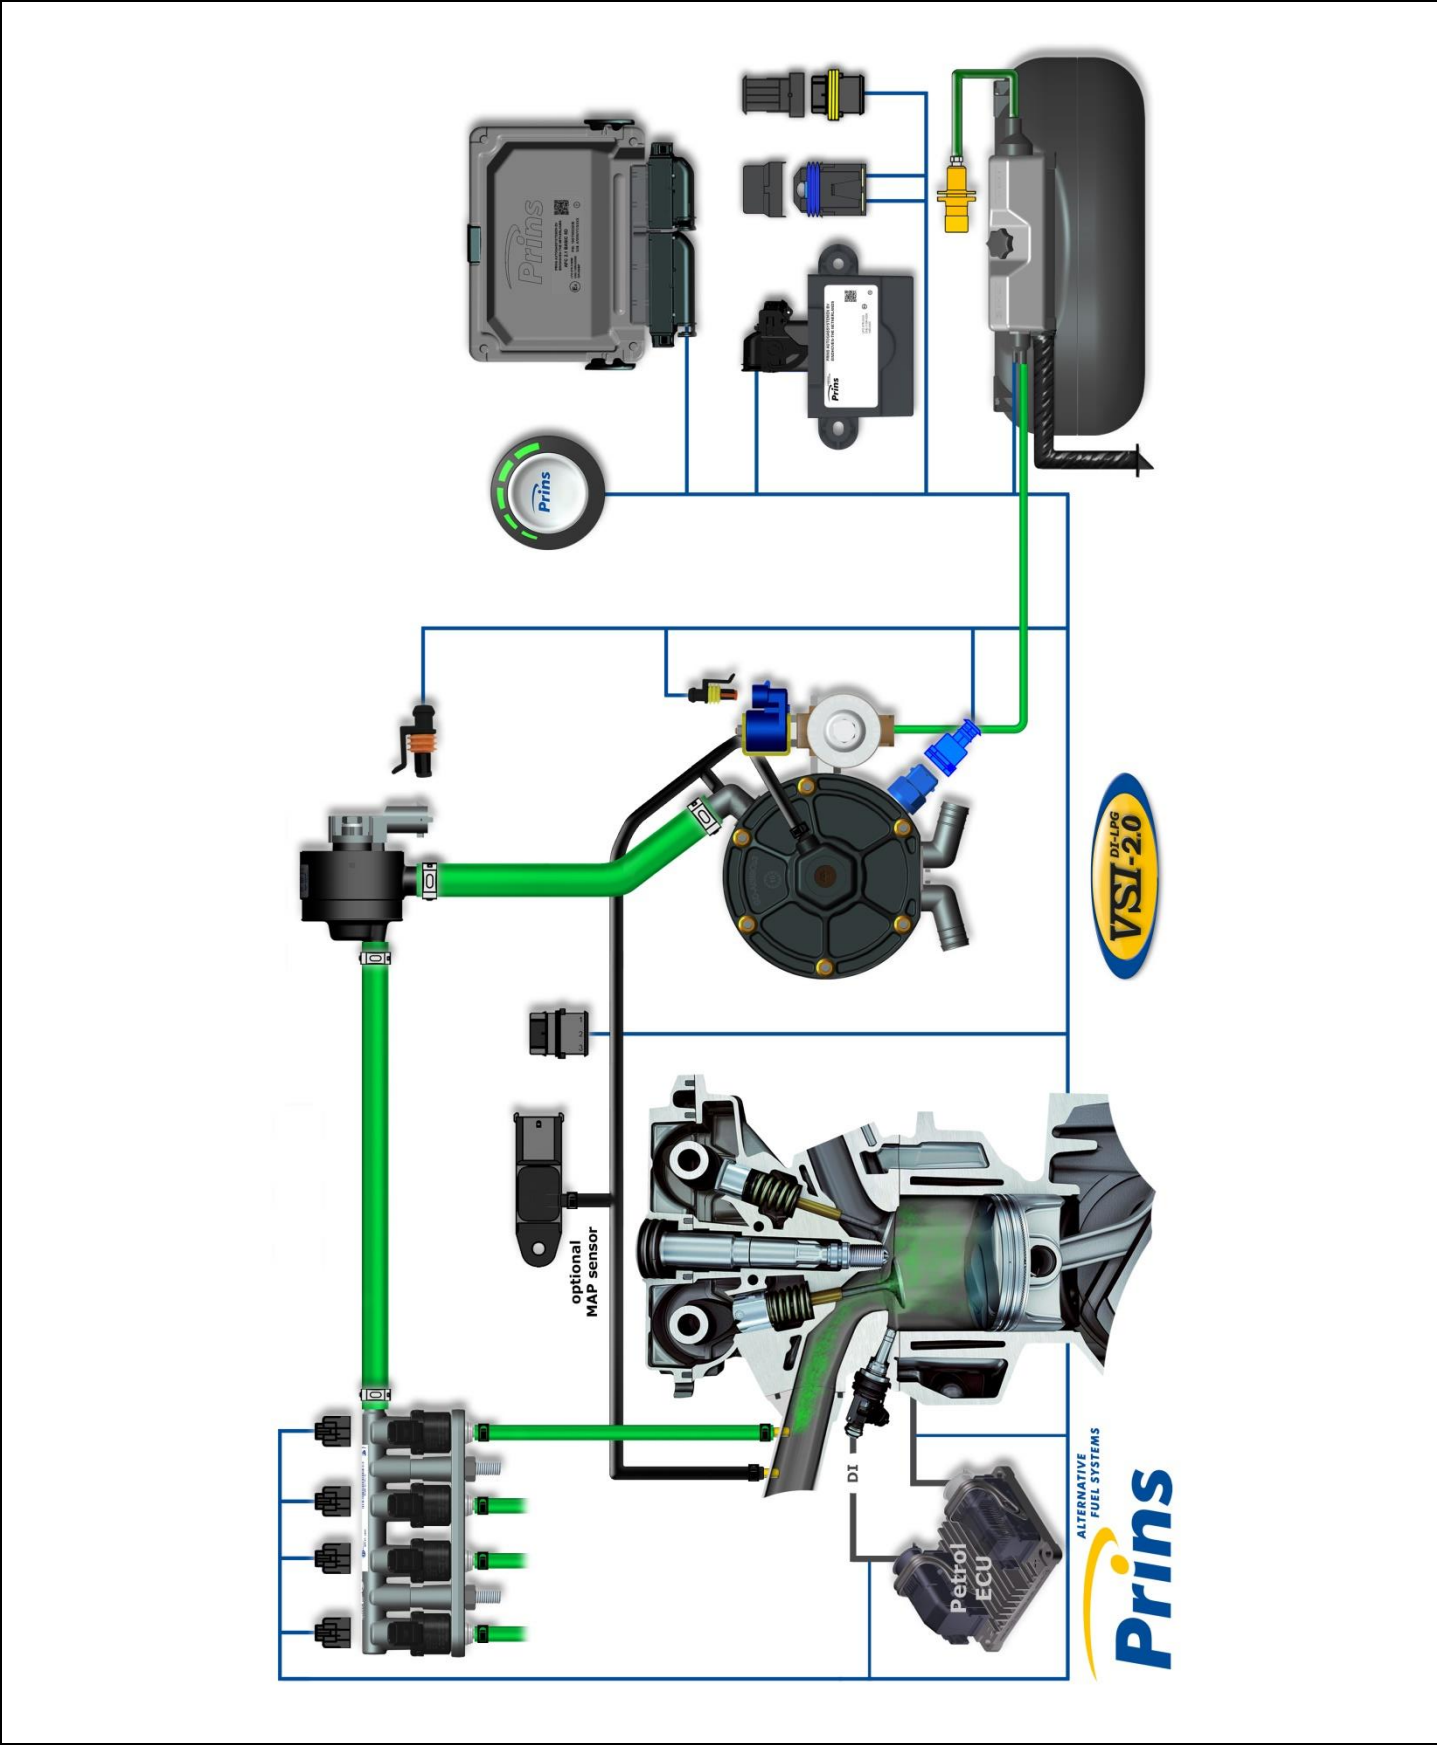

VSI approval numbers

	
Reducer VSI LPG Prins : E4-67R-010054 Lock-off valve OMB : E8-67R-014327 Lock-off valve Valtek : E4-67R-010041	Injector rail Prins : LPG E4-67R-010093 CNG E4-110R-000021
	
Filter unit T1 / T2 Prins : LPG E4-67R-010096 CNG E4-110R-000028 Filter unit Keihin: LPG E4-67R-010177 CNG E4-110R-000091	Injector Keihin KN8 : LPG E4-67R-010092 CNG E4-110R-000020 Injector Keihin KN9 : LPG E4-67R-010310 CNG E4-110R-000295
	
Prins AFC : E4-67R-010098 E4-10R-030507	Tubithor : LPG E13-67R-010145 CNG E13-110R-000017 WinLas : LPG E37-67R-010140 CNG E37-110R-000012 Thunderflex : LPG E24-67R-010018 CNG E24-110R-000040

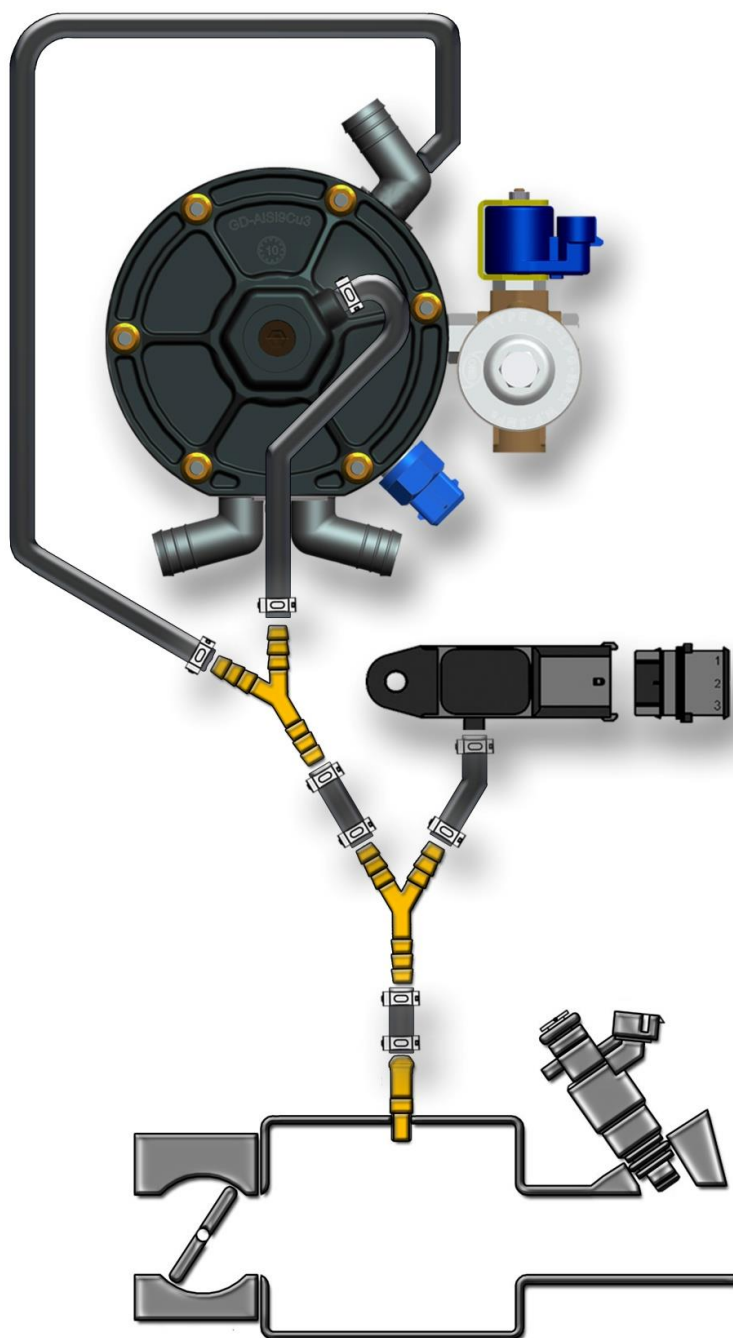Overpressure / MAP connection

Drill Ø5mm
Cut M6x1 thread.
Install coupling with a locking compound.

Mounting the inlet manifold couplings


Remove the inlet manifold.

Drill 6 holes of 5mm in the inlet manifold. (2 holes for MAP and MAP/overpressure reducer)



Cut M6x1 thread in these holes.

Place the VSI couplings with a lock compound in the inlet manifold.


Watch out that the lock compound doesn't come inside the VSI couplings and place the inlet manifold back on the engine.

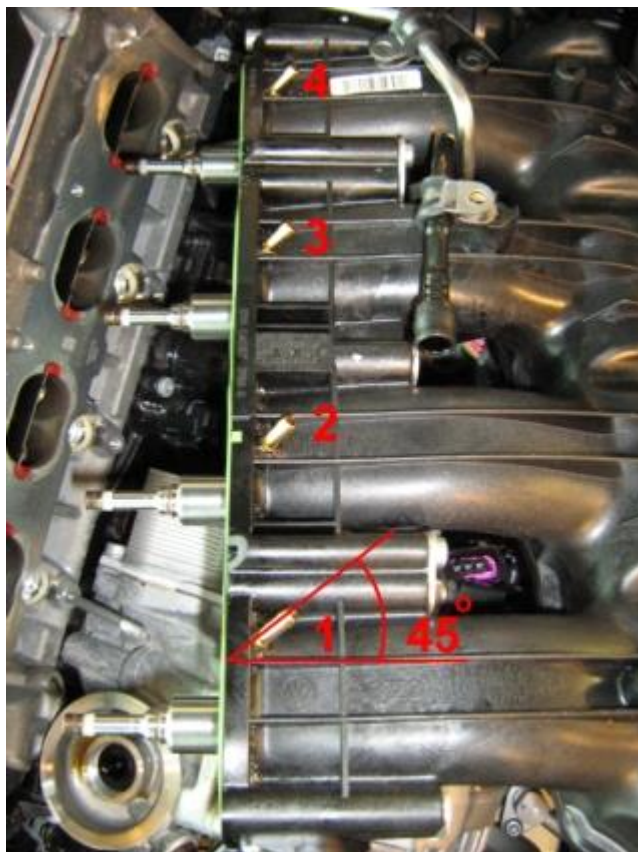

Mounting the VSI injector rail

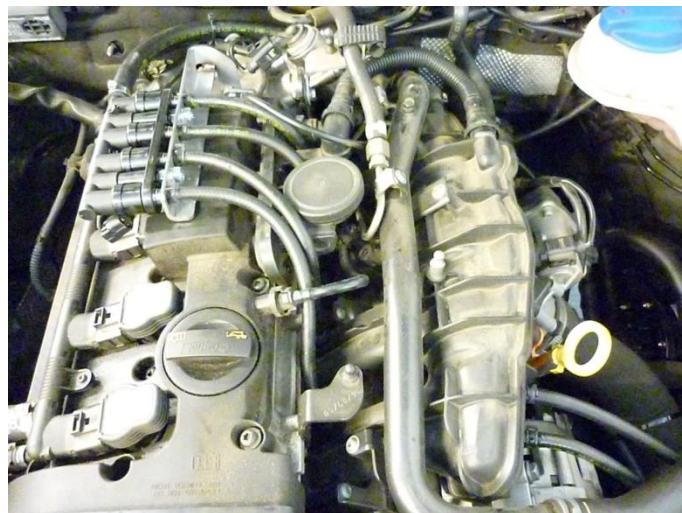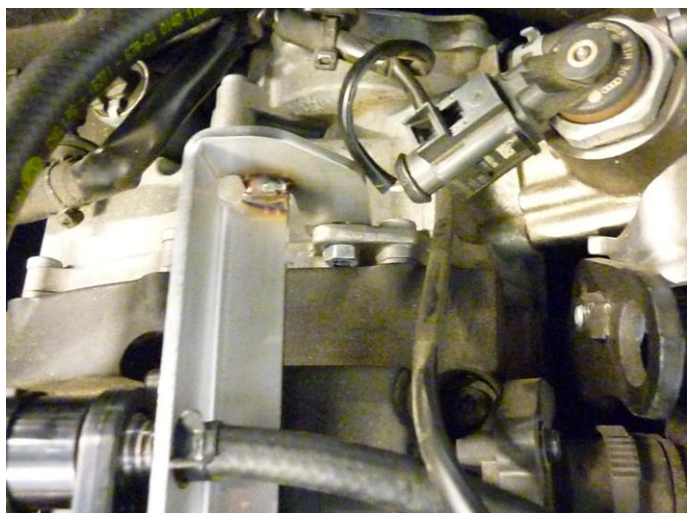

Coolant hose diagram (Example Audi A6)

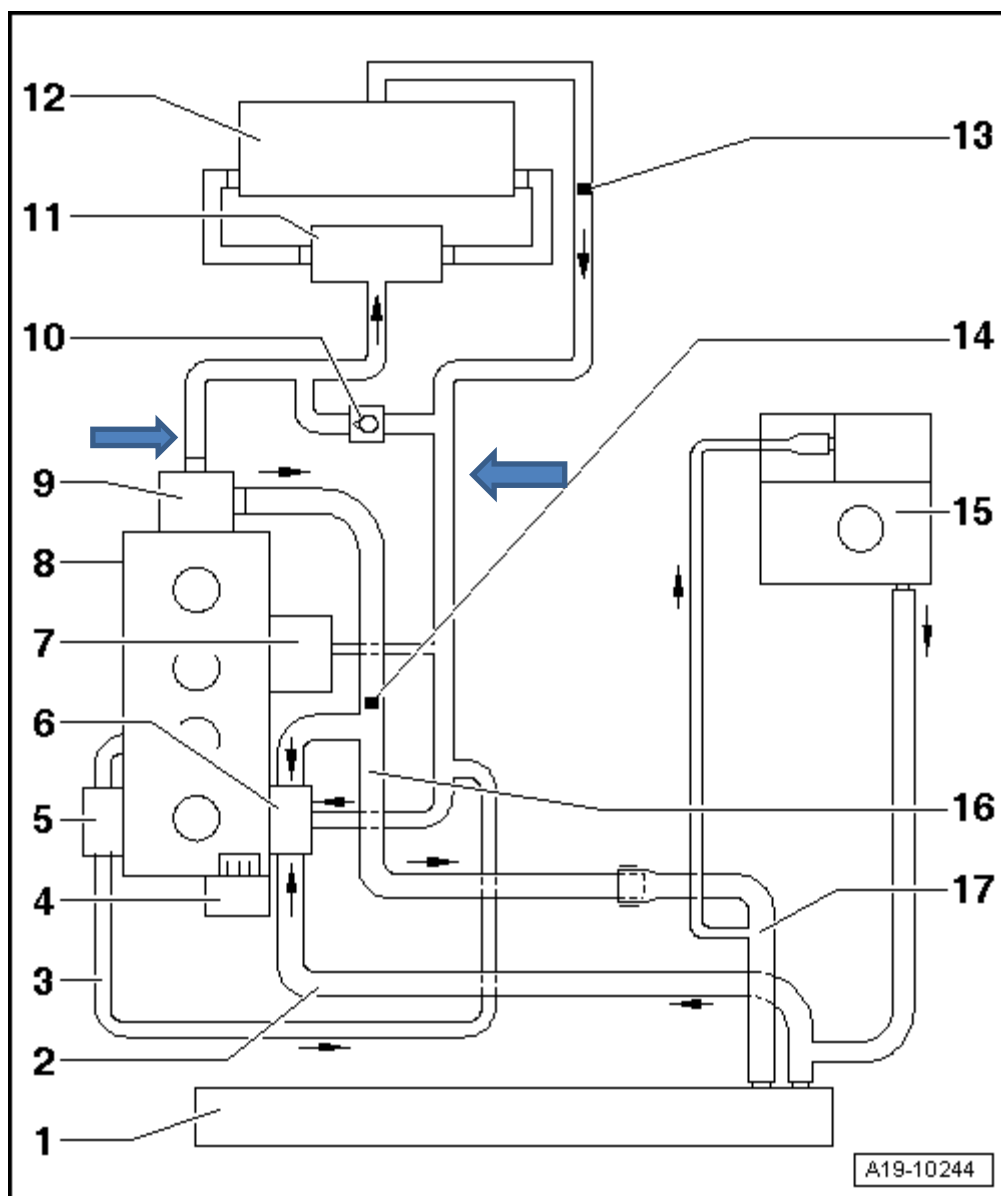

Mounting the fuel selection switch




When mounting the switch, only push on its sides.
Pushing the switch hard in the centre may result in damage to the switch.



(Example Audi A6)

Wiring Diagram



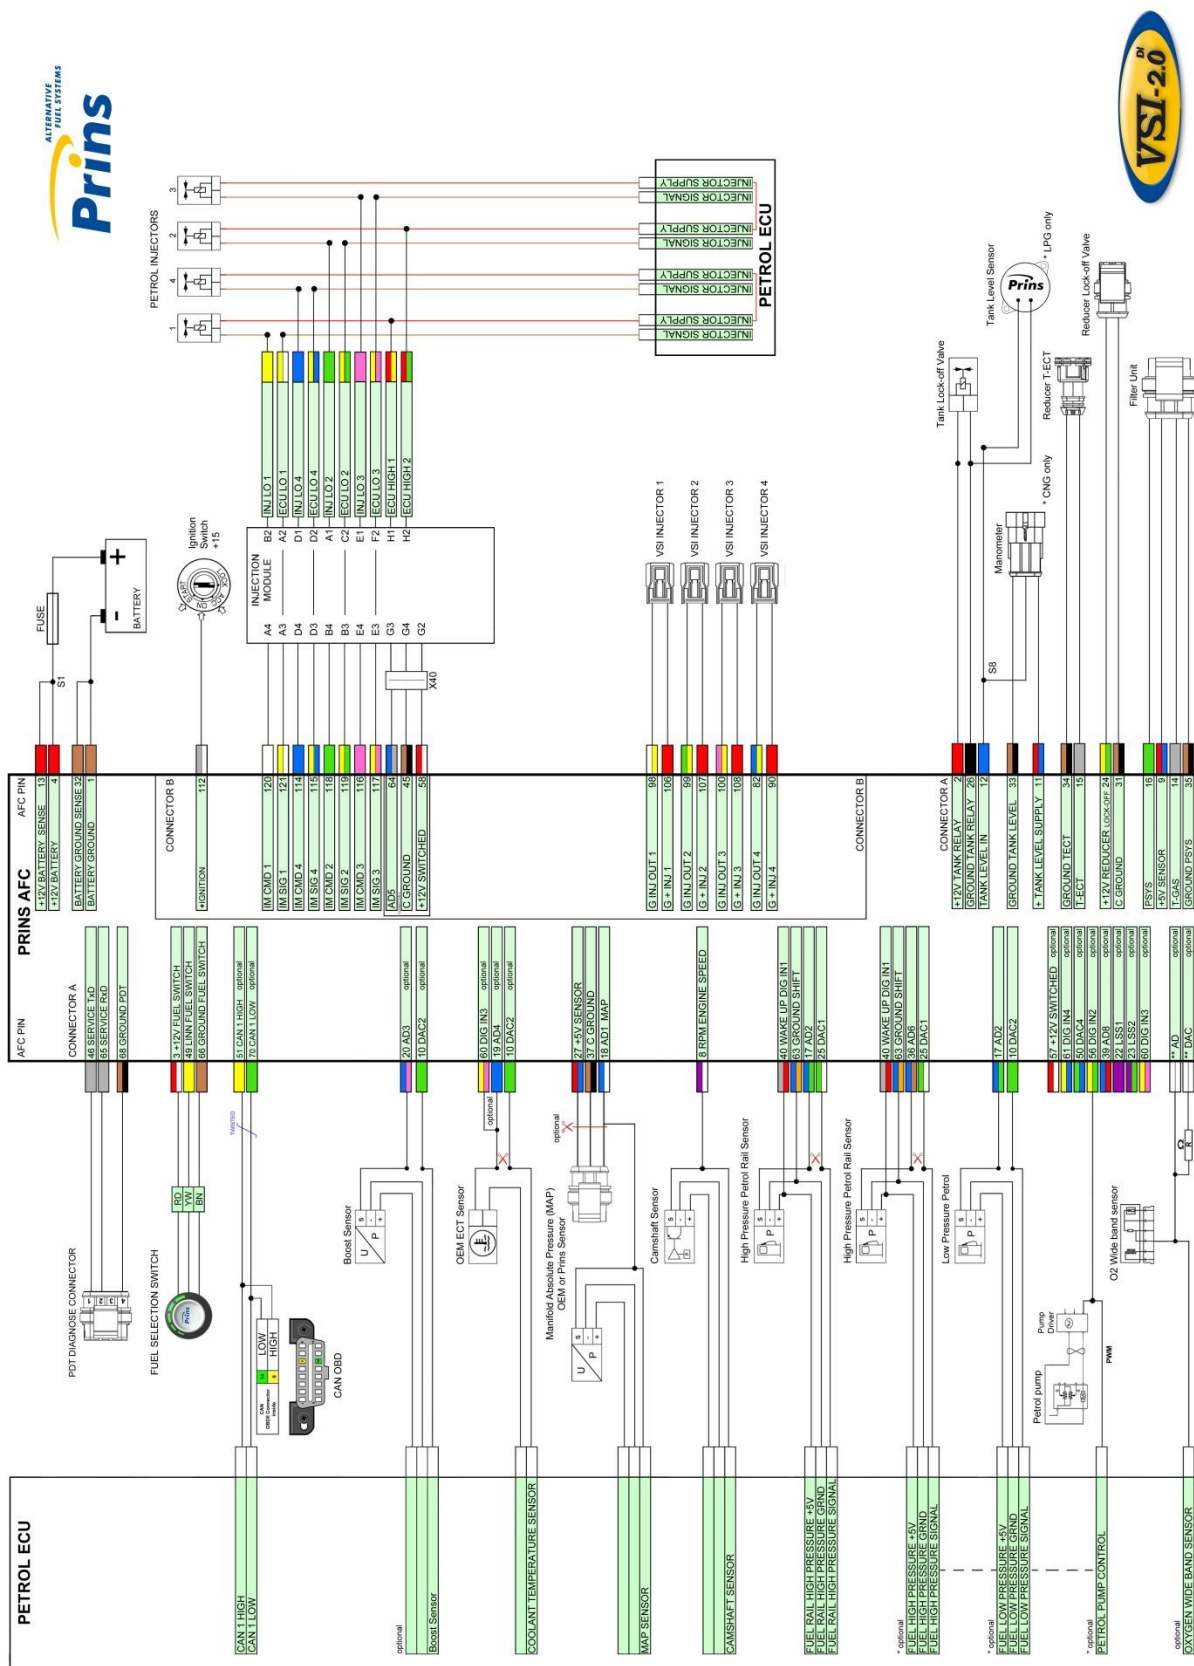


Electrical connections – Insulate

19	AD4	Blue	<i>Insulate</i>
22	LSS1	Purple	<i>Insulate</i>
23	LSS2	Purple-green	<i>Insulate</i>
36	AD6	Blue-brown	<i>Insulate</i>
38	AD7	Blue-light Blue	<i>Insulate</i>
39	AD8	Blue-red	<i>Insulate</i>
43	+12 Valve 2	Red-white	<i>Insulate</i>
50	DAC4	Green-blue	<i>Insulate</i>
56	DI2	Yellow-green	<i>Insulate</i>
60	DIG IN3	Yellow-pink	<i>Insulate</i>
61	DIG IN4	Yellow-blue	<i>Insulate</i>
62	C Ground	Brown-black	<i>Insulate</i>
74	DAC3	Green-pink	<i>Insulate</i>
<i>Insulate additional loose wires</i>			




Petrol ecu box (Example Audi A6)

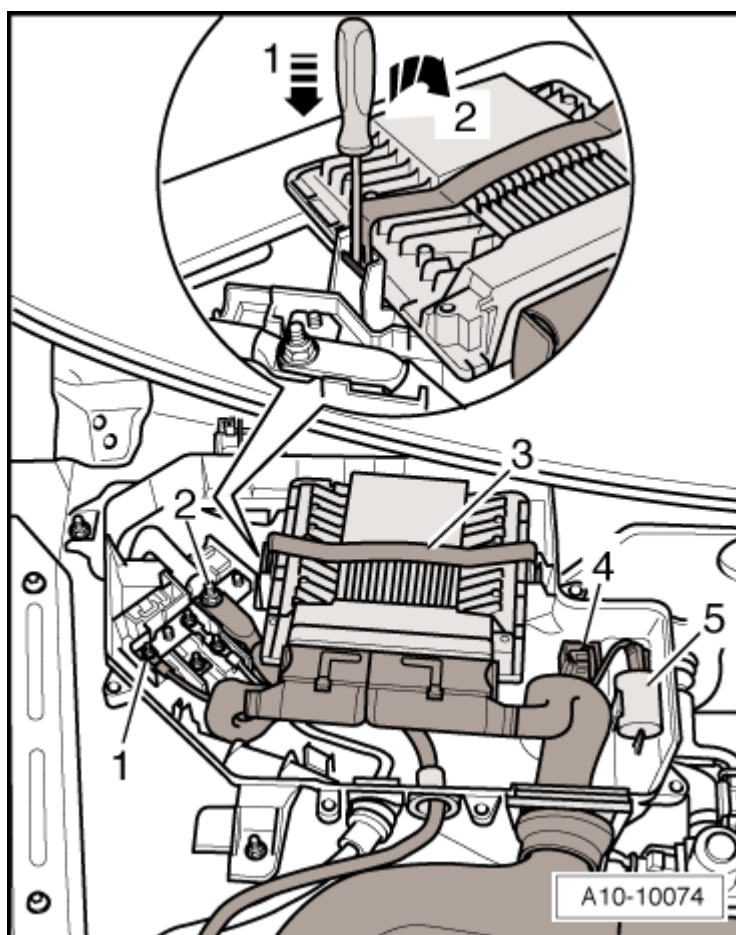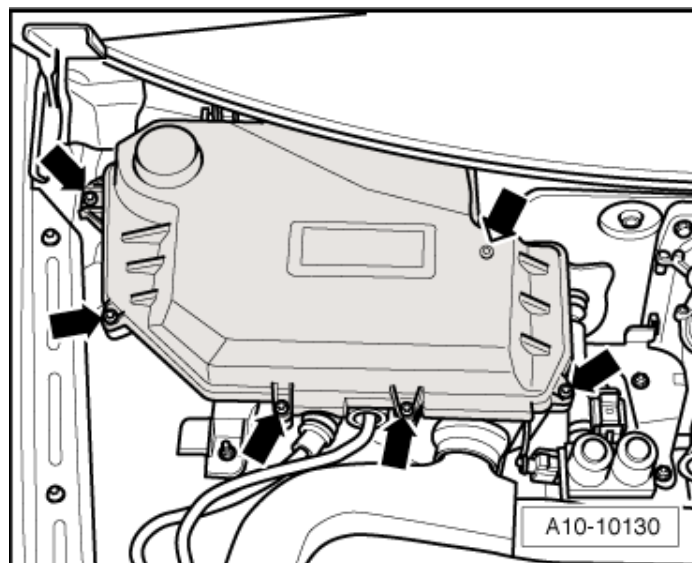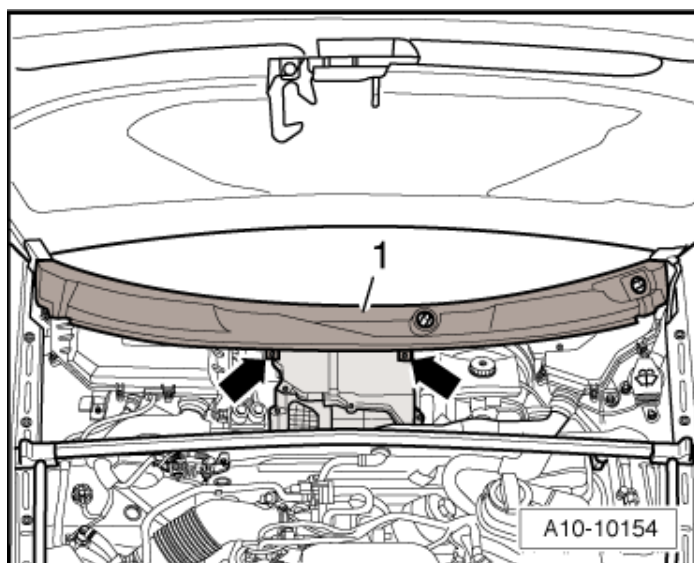

Electrical connections IM

Check and measure the wiring in case of changes in the cars wiring colours.

Connector Injection Module

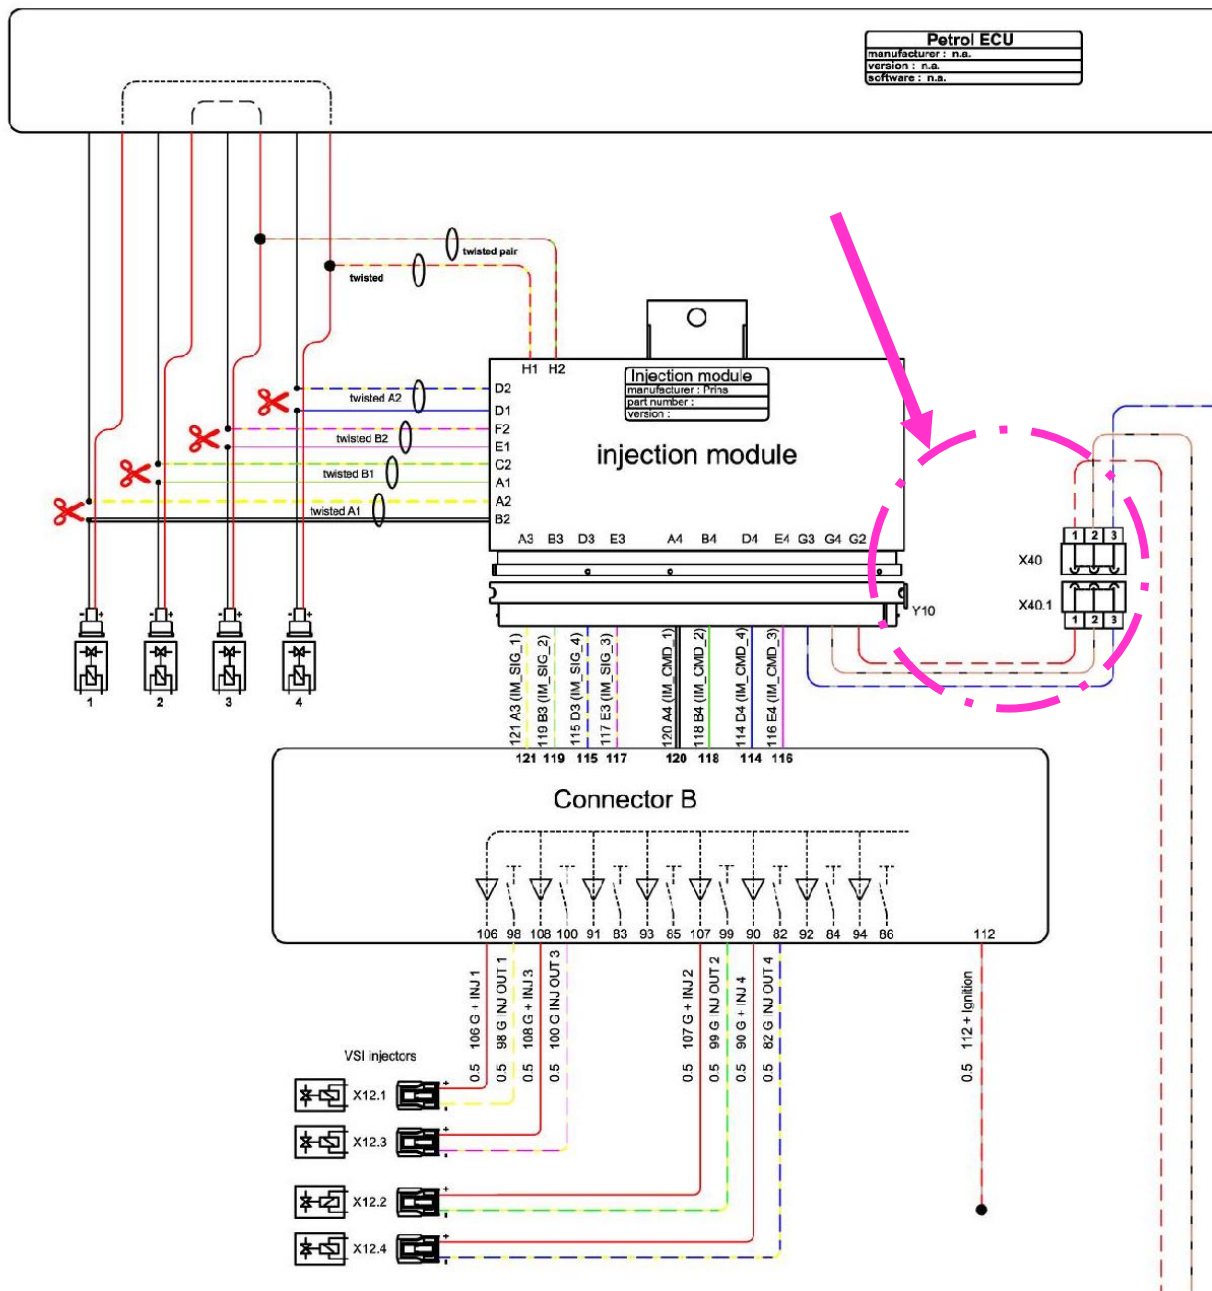



Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.

PIN LEADING !

For measuring the petrol injectors :

Interrupt each petrol injector control wire (injector min)

Each VSI wire has a petrol injector / cylinder number printed on the wire, connect this wire to the corresponding petrol injector / cylinder.

Connect the **bicoloured** VSI measuring wire to the **ecu side** (wire code: ecu-lo).

Connect the **corresponding full coloured** VSI wire to the **petrol injector side** (wire code: inj-lo).

See diagrams: Installation manual general part 1 / 2.

Attention:

Each bicoloured measuring wire corresponds to a specific LPG injector and petrol injector / cylinder number. Do not interchange the wires.

Petrol injector cyl. 1			
INJ LO 1		White	Injector side
ECU LO 1		White-yellow	ECU side
IM pos. B2 / A2			Colour : black-green Location : petrol ecu connector T60, pos. 2
Petrol injector cyl. 4			
INJ LO 4		Blue	Injector side
ECU LO 4		Blue-yellow	ECU side
IM pos. D1 / D2			Colour : brown-grey Location : petrol ecu connector T60, pos. 16
(cyl. 1-4)			
ECU HIGH A		Red-yellow	Injector side
IM pos. H1			Colour : red-yellow Location : petrol ecu connector T60, pos. 33
Petrol injector cyl. 2			
INJ LO 2		Green	Injector side
ECU LO 2		Green-yellow	ECU side
IM pos. A1 / C2			Colour : green-black Location : petrol ecu connector T60, pos. 1
Petrol injector cyl. 3			
INJ LO 3		Pink	Injector side
ECU LO 3		Pink-yellow	ECU side
IM pos. E1 / F2			Colour : grey-yellow Location : petrol ecu connector T60, pos. 17
(cyl. 2-3)			
ECU HIGH B		Red-green	Injector side
IM pos. H2			Colour : red-blue Location : petrol ecu connector T60, pos. 47



Electrical connections

Wire number / code	Wire colour	Connection
32 Ground sense 1 Ground battery	Brown Brown	Connect to the '-' of the battery; use a ring terminal or solder.
4 +12V Battery	Red	Do not place the fuse in the holder before having completed the installation of the LPG system.

98 98 G INJ OUT 1 106 106 G + INJ 1	White-yellow red	Connector VSI-injector to cylinder 1. Timing belt/chain side
99 99 G INJ OUT 2 107 107 G + INJ 2	Green-yellow red	Connector VSI-injector to cylinder 2.
100 100 G INJ OUT 3 108 108 G + INJ 3	Pink-yellow red	Connector VSI-injector to cylinder 3.
82 82 G INJ OUT 4 90 90 G + INJ 4	Blue-yellow red	Connector VSI-injector to cylinder 4.



Electrical connections

3-pole connector				For measuring the inlet manifold pressure (MAP).
27	+5V Sensor		Red-blue	Connect the 3-pole connector to the Prins MAP sensor. Or only blue-white to the OEM MAP sensor
37	C ground		Brown-black	
18	AD1		Blue-white	
18	AD 1		Blue-white	

				High pressure petrol sensor ground.
				Wire location : Petrol ecu T60 , pin 14
63	Ground Shift		Blue-orange	

17 & 25				High pressure petrol sensor signal interruption.
				Wire location : Petrol ecu T60 , pin 25
17	AD 2		Blue-green	Sensor side
25	DAC 1		Green-white	ECU side

				High pressure petrol sensor supply 5V
				Wire location : Petrol ecu T60 , pin 26
40	Wake-up		Grey-red	

				For measuring the engine speed signal.
				Wire location : Petrol ecu T60 , pin 44
8	RPM		Purple-white	



				Boost sensor signal interruption
				Wire location : Petrol ecu T94 , pin 38
20	AD 3		Blue-pink	Sensor side
10	DAC 2		Green	ECU side

112				Connect to +ignition / contact+ (+15).
				Do not place the fuses in the holder before having completed the installation of the LPG system.
				Wire location : Petrol ecu T94 , pin 87
112	+ Ignition		Red-grey	



Electrical connections

Driver room

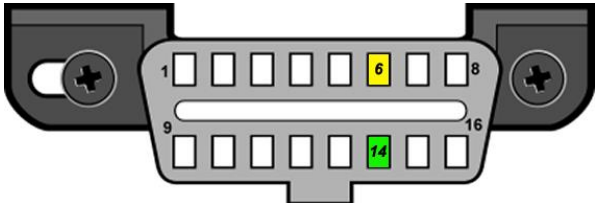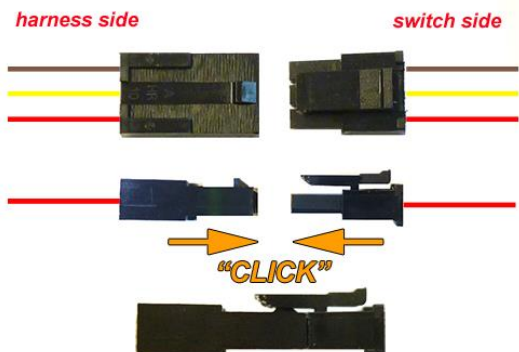51 70	CAN1 High CAN1 Low	Yellow Green	Connect to EOBD diagnose connector Pin : 6. Pin : 14
			
3-pole micro connector 66 3 49	Ground fuel switch +12V fuel switch LIN fuel switch	Brown-black Red-white Yellow	Connect the 3-pole connector to the Prins fuel selection switch
			

Electrical connections

Connectors in wiring loom

2-pole blue connector 15 T-ECT 34 Ground T-ECT	Grey Brown - black	For measuring the engine coolant temperature (Tect) Connect the connector to the reducer temperature sensor.
4-pole connector 35 Ground Psys 14 T-Gas 9 +5 Volt sensor 16 Psys	Brown - black Grey Red - blue green	For measuring gas pressure and temperature. Connect the connector to the filter unit sensor.
2-pole connector 24 +12V reducer lock-off 31 C Ground	Yellow - green Brown - black	Connect the connector to the reducer lock-off valve.
4-pole connector 46 Service TxD 65 Service RxD 68 Ground PDT	Grey Grey Brown - black	Diagnose connector.
Tank wiring loom 2 +12V Tank relay 12 Tank level IN 26 Ground tank relay	red blue black	Connect to the tank lock-off. Connect the tank level gauge. Connect to the tank lock-off.
Wiring loom link 45 C ground 58 +12V switched 64 AD5	Brown – black Red – white Blue - grey	Connection from AFC connector A to connector B

Optional:

3-pole connector 11 + manometer 12 tank level in 33 ground manometer	red blue brown	Not used
---	----------------------	-----------------



Checklist after installation

1. Connect the Prins Diagnostic Tool and run the VSI diagnostic program.
Install the VSI fuse, turn the ignition key in the accessory position.
When working on the car, beware of moving and rotating parts in the engine compartment.
2. When commissioning the LPG system, you must activate the VSI computer with the diagnostic software.
When the VSI computer has not been activated, the switch will keep blinking. To activate the VSI computer, select function activate ECM in the diagnostic software.
3. Check whether the program in the VSI computer matches with the car (dedicated engine set):
Refer the car description in the diagnostic software (Basic → Identification) and compare these with the set number.
4. The system will switch over to LPG as soon as the temperature of the coolant becomes higher than parameter 64 - Switch over ECT.
5. Check all components and connections for any gas leakage (use a LPG leak detector device or a fluid detection like soap) Caution for moving and rotating parts in the engine compartment !
6. Let the engine run warm on petrol >80°C.
Check if the evaporator heats up.
Check the engine signals, petrol injection time, RPM, ECT, lambda, MAP signal, petrol pressure signal.
Let the engine run idle on LPG.
Adjust the evaporator pressure. Refer to Basic → System in the diagnostic software for the idle level value set.
Adjust the evaporator pressure in such a way that the pressure measured (P-sys) equals the idle level value.
Turn the socket-head screw at the front of the evaporator to adjust the pressure.
An error code will be generated whenever the pressure variation is to high.
7. Use the diagnosis software to check again all input and output signals.
8. Check the system for error codes and solve these, if required.
Check the petrol ECM for EOBD error codes.
Place the protection connector on the VSI communication connector.
9. Take a test drive and check the drivability on LPG and petrol.

ATTENTION: please check, after activation of the AFC and switching the system to LPG, if DTC's are stored in the Prins diagnostic software.

If DTC's are stored, please contact our After Sales department for a software update in relation to the CAN-BUS compatibility. aftersales@prinsautogas.com

