



Quality, innovation and customer care, it's in our nature



**installation manual
Engine Kit
part 2/2**



MANUFACTURER
TYPE
ENGINE DISPLACEMENT
NUMBER OF VALVES
ENGINE CODE / NUMBER
VEHICLE CATEGORIES
TRANSMISSION
VERSION
PETROL ECU MANUFACTURER / CODE
HIGH PRESSURE PETROL PUMP
HIGH PRESSURE PETROL INJECTOR
MODEL YEAR:
SYSTEM APPROVAL NUMBER (R115)
LOCATION R115 SYSTEM STICKER
ENGINE SET NUMBER
MANUAL NUMBER
DATE

CHEVROLET / GMC
TRAVERSE / ACADIA
3600
V24
LLT DI
M
AT

AFC-2.1

BOSCH MED 9.6.1

Bosch HDP-5-PE 0261.520.(036-114-115) / M12626234

Bosch HDEV-5-1 0261.500.(028-056)

2008-2012

E4-115R-000012 DLM-LPG 05

right side, centre door post

333/070007/A / 338/070003/A

076/3301400

11-2-2016

Version 2013-09-28 D



TABLE OF CONTENTS

General instructions	2
Required equipment / tools / materials for installing a complete system	3
Vehicle check	3
Tightening moments	4
Direct LiquiMax-2.0, AFC-2.1	5
Direct LiquiMax-2.0 diagram, AFC-2.1	6
Direct LiquiMax parts / approval numbers	7
DLM component location overview	8
Removal of the Bosch High Pressure Petrol Pump	9
Installation of the Bosch High Pressure Petrol Pump	10
High pressure petrol pump installation	11
Remove the high pressure pump	11
High pressure petrol pump LPG return	12
Boost pump	13
MAP-SENSOR	14
Connection of the fuel hose to the boost pump.	15
Fuel Supply Unit / Fuel Return Unit	16
Mounting the Fuel Units	17
LPG / petrol fuel lines	18
Supply hose – Return hose – Tank wiring - PWM wiring	19
Hose routing	20
Mounting the AFC-2.1	21
Wiring AFC	22
Mounting the fuel selection switch	23
Electrical connections	24
Electrical connections	25
Electrical connections	28
Electrical connections	26
Electrical connections	27
Electrical connections	29
Electrical connections	31
Checklist after installation	32
FOR EXPLANATION AND CIRCUIT DIAGRAMS SEE : INSTALLATION MANUAL GENERAL PART 1 / 2	

General instructions

- The installation of the system shall be done in accordance with the installation manual provided by Prins Autogassystemen.
- This manual is based on Dutch regulations, always install the system in accordance to the local regulations.
- For an optimal functioning of the Direct LiquiMax-2.0 system, maintain a clean and organized work environment during installation and maintenance to prevent pollution of the LPG components.
- Always download the “general manual 1/2 “ from our website for basic instructions and diagrams.
- Always **disconnect the battery when installing / servicing** the LPG system. Make sure the ignition key is outside the car.
Be aware of central door locking, radio / telephone memory code, alarm system.
- Wear safety goggles when working on the petrol filled system / connections (pressurized petrol)
- Do not place the main fuse into the fuse holder before having completed the installation of the system.
- The AFC has to be activated by means of the Prins diagnosis software.
- Never disconnect the AFC connector, unless you have removed the main fuse.
- When installing the wiring harness, ensure that it does not run near any of the ignition components.

Solder and insulate all electrical connections.

The wires in the loom are provided with numbers and text. The text on the wire explains the function of the wire.

The wire harness is not model specific, therefore it may be necessary to adjust the length of the wires.

Ensure maximum care is taken when connecting wiring.

Make professional joints using solder and shrink sleeve. Do not stretch the wiring harness.

- No component of the LPG-system shall be located within 100 mm of the exhaust or similar heat source, unless such components are adequately shielded against heat.
- If holes have to be drilled (wear safety glasses) for installing brackets, etc., the drilled holes must always be treated with an anti-corrosion agent, after the chips have been removed (especially when mounting a exterior filler into body work).
- After having completed the installation, check the whole system for LPG leakage; use a LPG leak detection device. Also check for leak of engine coolant, petrol and air.
- Fitting and maintenance is only allowed by Prins Autogassystemen selected LPG engineers.
- Failure to follow the instructions in this manual can result in a poor or non-working LPG installation or a dangerous situation.
- For maintenance instructions see owner manual.
- Prins Autogassystemen is not responsible for any damages to people or objects as a result of changes to Prins products.
- Check our website regularly for diagrams, certificates, updates, info-bulletins and product information.

Register (warranty card) the system on the Prins warranty portal .



Required equipment / tools / materials for installing a complete system

- Complete workshop toolbox (wrenches, screwdrivers, cutters, pliers, ratchet, sockets)
- Car lift
- Portable computer
- Vehicle fuel system scan tool or OBD scan tool Prins (part nr. 099/99928)
- Exhaust gas analyser
- Multimeter
- Oscilloscope
- Prins diagnostic software
- Prins serial interface
- Torque wrench (5-50Nm)
- Torque wrench (200-250Nm)
- Portable light
- Assortment drill bits 4 to 12 mm
- Assortment cutters (ø 20, 30, 50, 70 mm)
- Portable drill or pneumatic drill
- Thread cutting device (male M6x1, M8x1, M10x1)
- Air gun
- Vacuum cleaner
- Safety goggles
- Hot air gun
- Soldering iron, soldering tin
- Wire-stripping pliers
- Adhesive tape
- Adhesive sealant
- Thread locking compound
- Anti-corrosion agent / black body coating
- Gas leak detection device or foam leak spray
- Shrink sleeves

Vehicle check

- Check the vehicle drivability on petrol
- Check the fuel system for error codes (scan tool)
- Check if the catalytic converter is in good condition (exhaust gas analyzer)
- Check the condition of the ignition system (spark plugs, cables, coil)

Tightening moments

	Nm	Spanner mm
M 4 x 0,7	3.3	7
M 5 x 0,8	6.5	8
M 6 x 1,0	11.3	10
M 7 x 1,0	14.5	11
M 8 x 1	24.5	13
M 8 x 1,25	27.3	13
M 10 x 1	52	15-16-17
M 10 x 1,5	54	15-16-17
(filtered) Banjo bolt	10	14
Supply line connection	15	13
Fuel module Allen bolts	20	7
Filler hose connection	50	22
Boost pump clamp	7	10
High pressure petrol fuel line	24-35	17


EXPLANATION OF SYMBOLS :




= IMPORTANT, CAUTION




= WEAR SAFETY GOGGLES

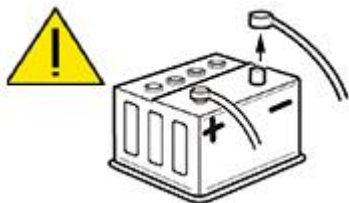

Direct LiquiMax-2.0, AFC-2.1

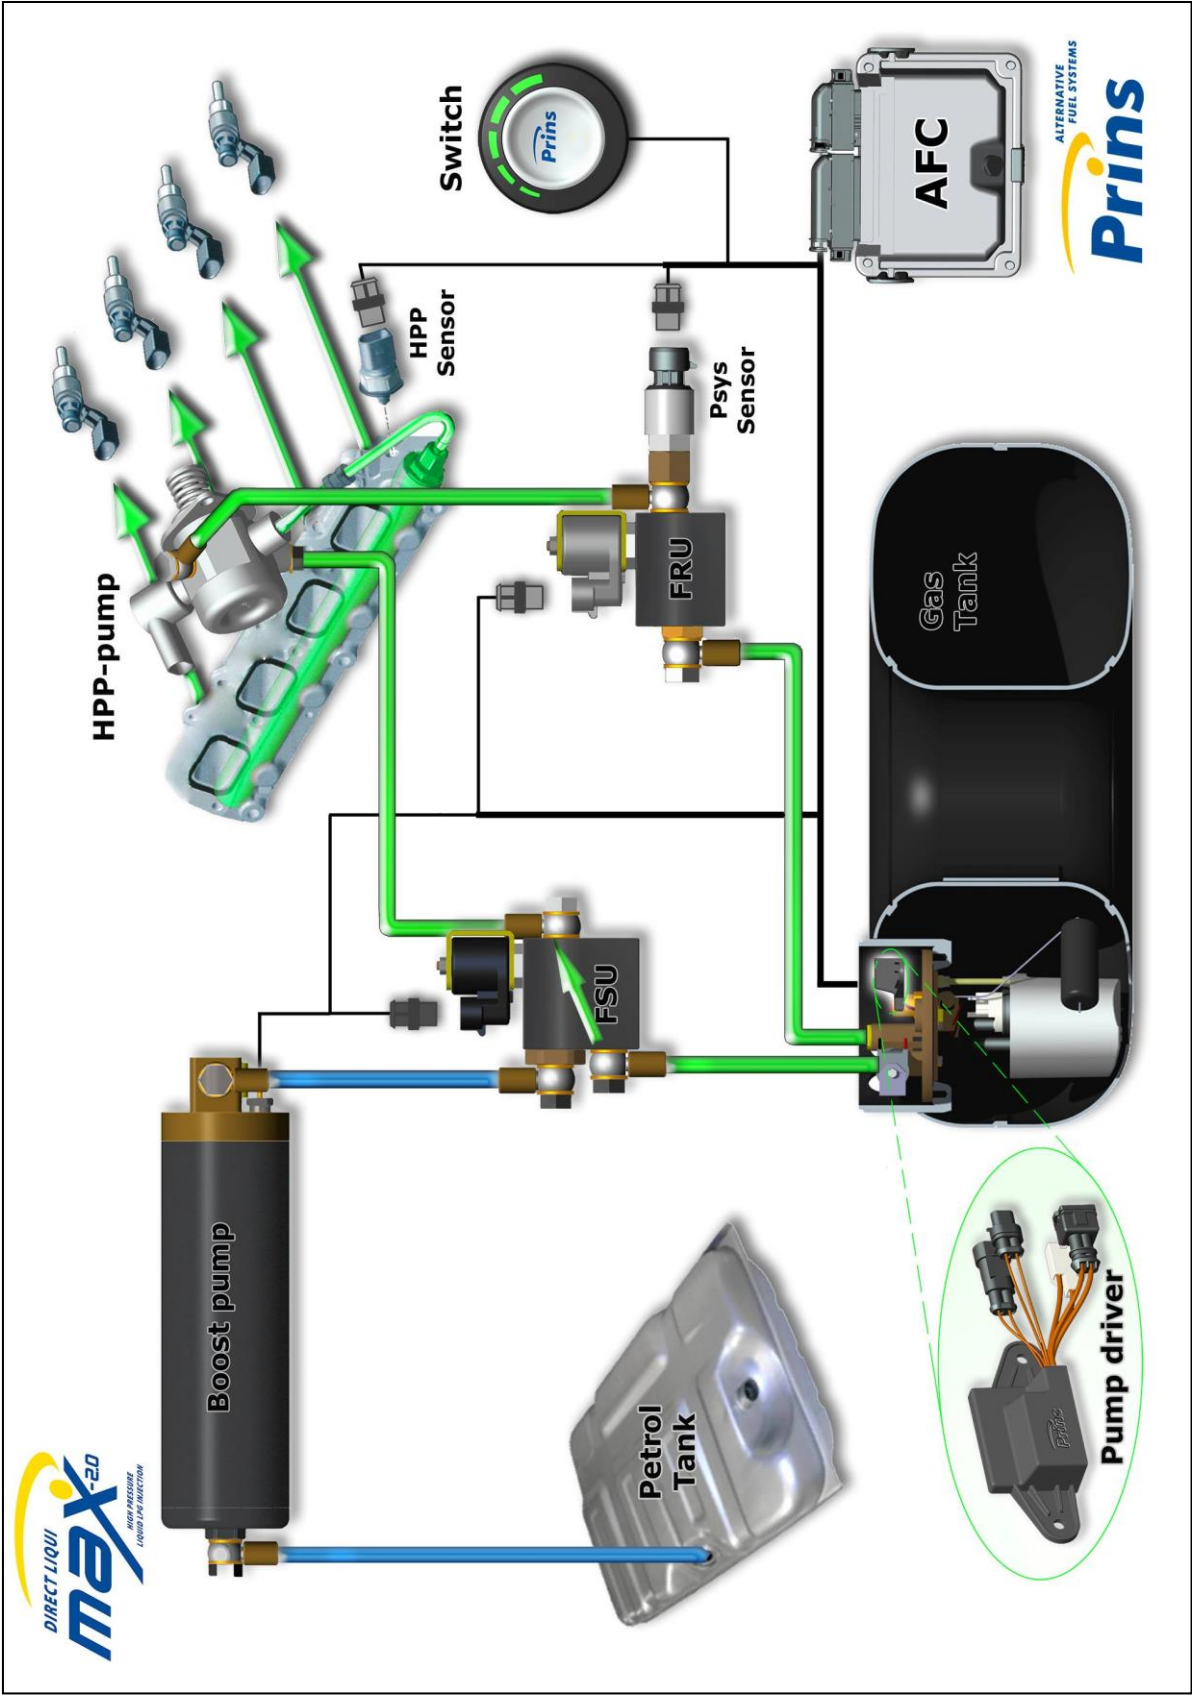


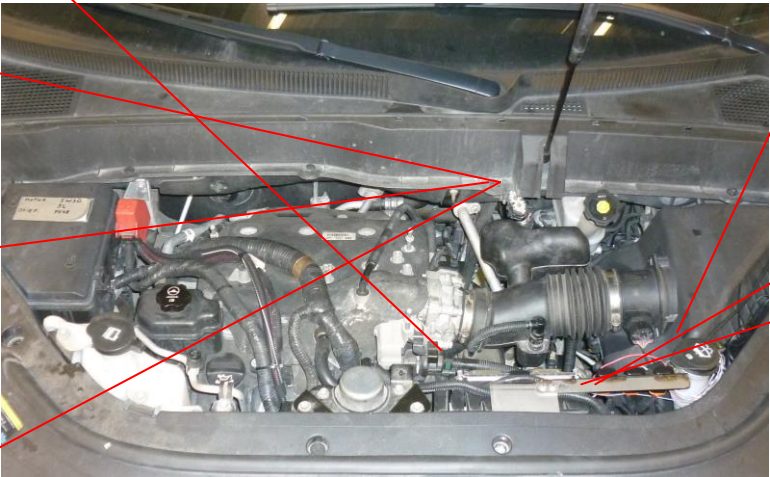


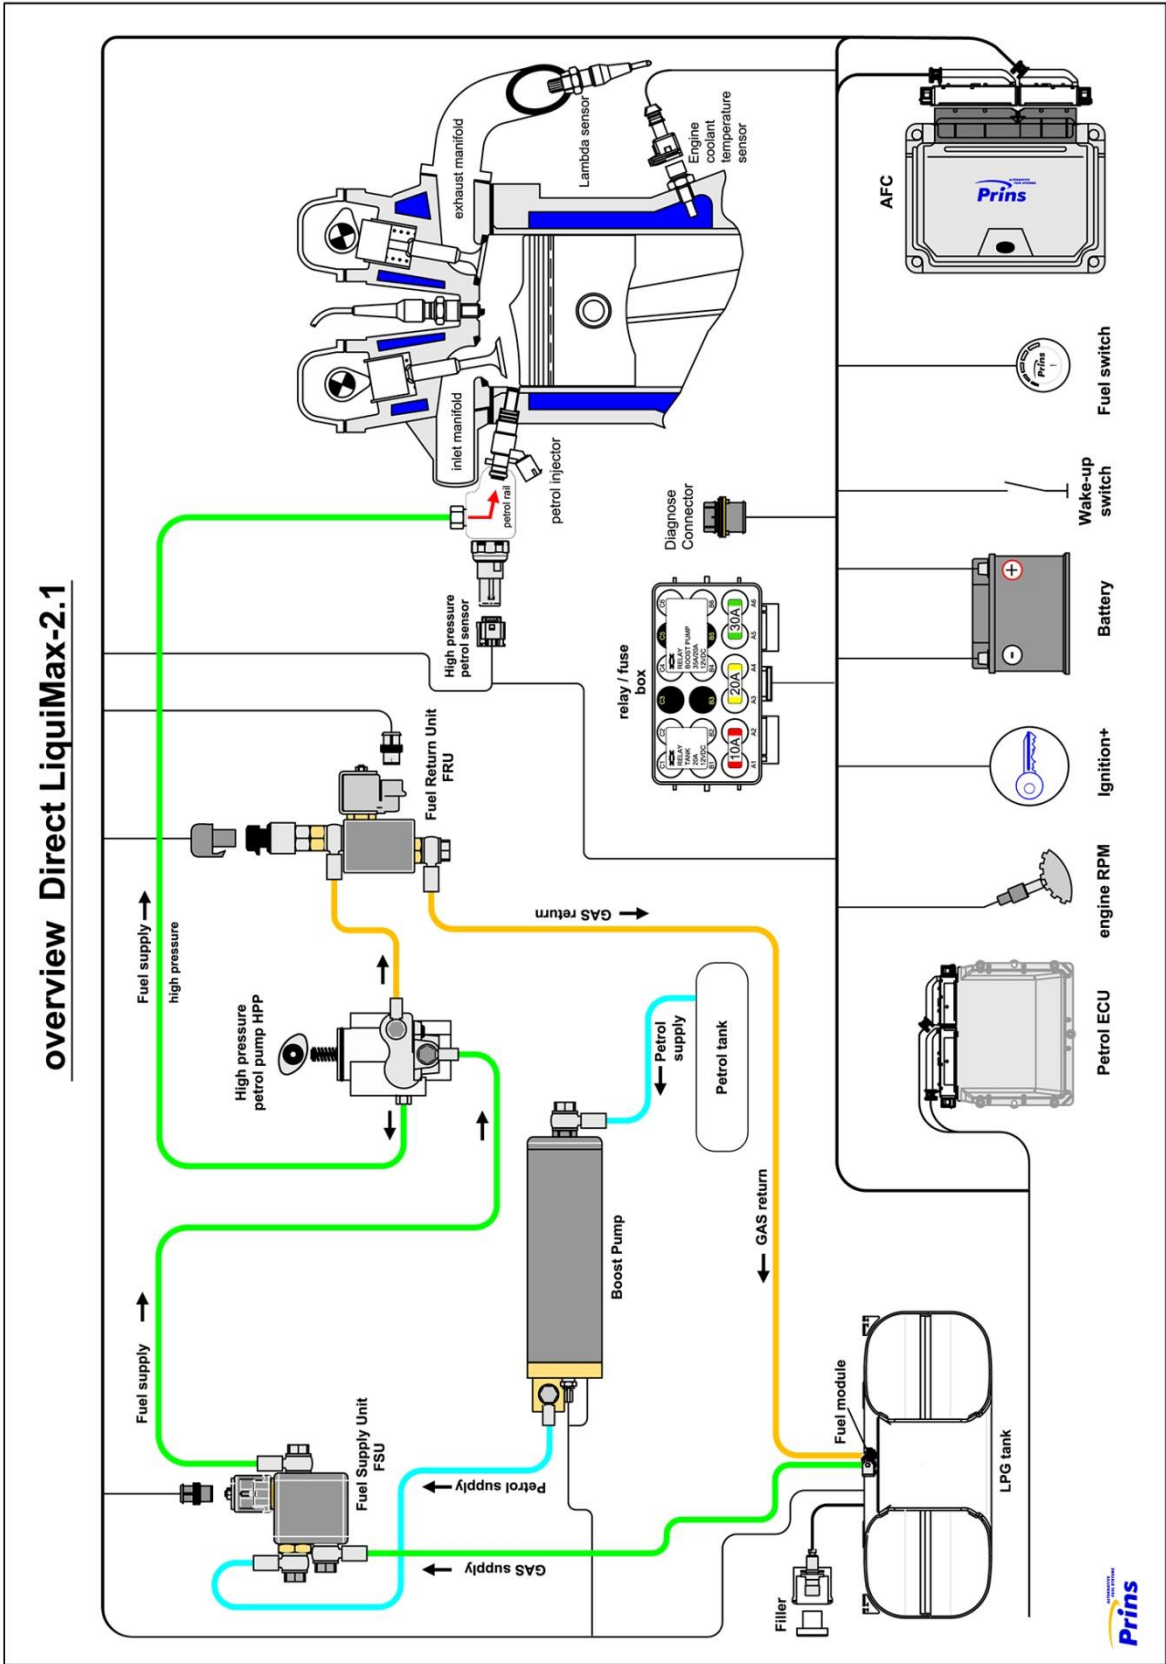



Direct LiquiMax-2.0 diagram, AFC-2.1




Direct LiquiMax parts / approval numbers

 <p>1st generation</p>  <p>2nd generation</p>	 <p>1st generation</p>  <p>2nd generation</p>
<p>Fuel Supply Unit : E4-67R-010269</p>	<p>Fuel Return Unit : E4-67R-010270 Pressure Sensor : E4-67R-010051</p>
	
<p>Boost pump</p>	<p>High Pressure Pump : E4-67R-010266 High Pressure Rail : E4-67R-010267 High Pressure Injectors : E4-67R-010309</p>
	 <p>XD-3 LPG</p>  <p>XD-4 LPG</p>
<p>Prins AFC: E4-67R-010098 E4-10R-030507</p>	<p>Fuel lines series XD : E4-67R-010247 XD3 E4-67R-010247 XD4</p>

DLM component location overview
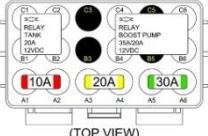
<div>HPP pump</div> 		<div>Petrol ECU</div> 
<div>FSU</div> 		<div>AFC</div> 
<div>FRU</div> 		<div>Fuse / relay box</div> 
<div>Boost pump</div> 		

	<div>R115 approval sticker : Right side centre door post</div>
---	--

Removal of the Bosch High Pressure Petrol Pump

REMOVAL-

WARNING-


In case of removing the high pressure fuel pump, high pressure fuel pipe, delivery pipe, there may be injury caused by leakage of the high pressure fuel.

Don't do any repair work right after engine stops (HOT engine).

- Turn the ignition switch OFF and disconnect the battery negative (-) cable.
- Wear safety goggles.
- Disconnect the fuel pressure regulator valve connector
- Disconnect the High Pressure fuel feed pipe (B)
- Remove the Low Pressure fuel pipe / hose (A).
- Remove the installation bolts (E), and then remove the high pressure fuel pump from the cylinder head assembly.

CAUTION:

Unscrew in turn the two bolts in small steps (0.5 turns). In case of fully unscrewing one of the two bolts with the other bolt installed, the housing surface of the cylinder head may break because of tension of the pump spring.

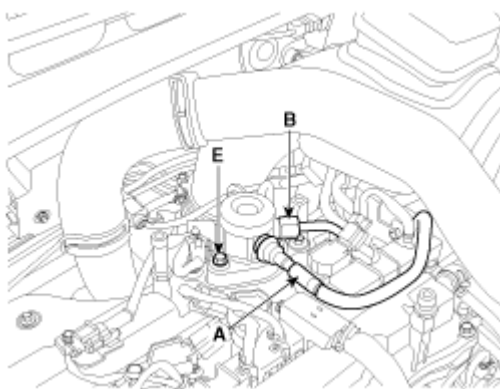


CAREFULLY store the removed petrol pump. Make sure no pollution can come into the pump.

Installation of the Bosch High Pressure Petrol Pump

INSTALLATION-

Before installing the high pressure fuel pump, position the roller tappet (**B&C**) in the lowest position by rotating the crankshaft. Otherwise the installation bolts may be broken because of tension of the pump spring.

Apply engine oil to the O-ring (**A**) of the high pressure fuel pump, the roller tappet (**B**), and the protrusion (**C**). (roller tappet, only if removed from cylinder head)
Also apply engine oil to the groove on the location where the protrusion (**C**) is installed.

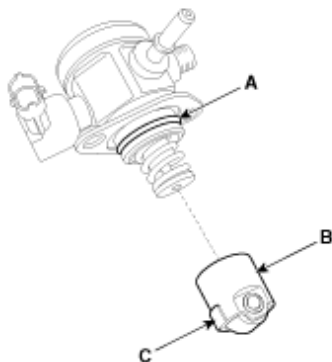

Installation bolts:

When tightening the installation bolts of the high pressure fuel pump, tighten and turn the bolts in small step (0.5 turns) after tightening them with hand-screwed torque.

High pressure petrol pump installation bolt: 12.8 ~ 14.7 N.m

Petrol pipe:

First hand-tighten the nut(s) fully until they are not fastened any more in order to have them inserted in place and then completely tighten to the specified torque using a torque wrench.

If not tightening the bolts or nuts in a straight line with the mating bolt holes or fittings, it may cause a fuel leak due to broken threads.

High pressure petrol pump installation nut: 26.5 ~ 32.4 N.m

Installation is reverse of removal.

High pressure petrol pump installation



Replace the original high pressure petrol pump for the adapted high pressure petrol pump.
(Follow the workshop manual of the car)

Remove the high pressure pump



Exchange, the high pressure pump for the custom high pressure pump.


High pressure petrol pump LPG return



Install the return line before the high pressure pump mounted.



Boost pump

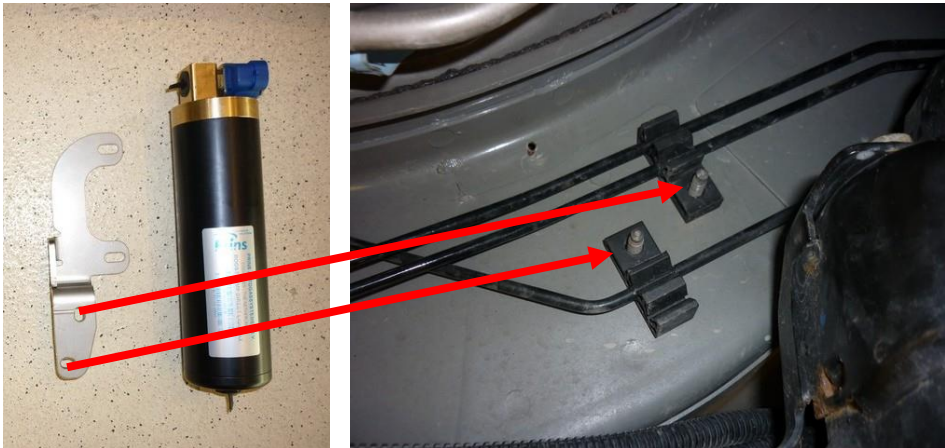

MAP-SENSOR



Install a vacuum coupling into inlet manifold.
Drill Ø5mm
Cut thread 6x1
Install coupling with a lock compound and connect the hose.

Connect MAP wiring to:		<i>Analog in (sensor side) MAP sensor in</i> Connect the 3-pole connector to the Prins MAP sensor. Sensor location: Right side behind the throttle body
9	+5V	MAP wiring: Red (Red-blue +5V FRU return pressure sensor) Blue Brown (Brown ground FRU return pressure sensor)
18	AD 1	
35	Ground	
AFC wiring:		
Red-blue		
Blue-white		
Brown		







Connection of the fuel hose to the boost pump.



Mount LPG flex line with quick release into original petrol supply connector.
The other side with banjo eye goes to the boost pump.



Fuel Supply Unit / Fuel Return Unit

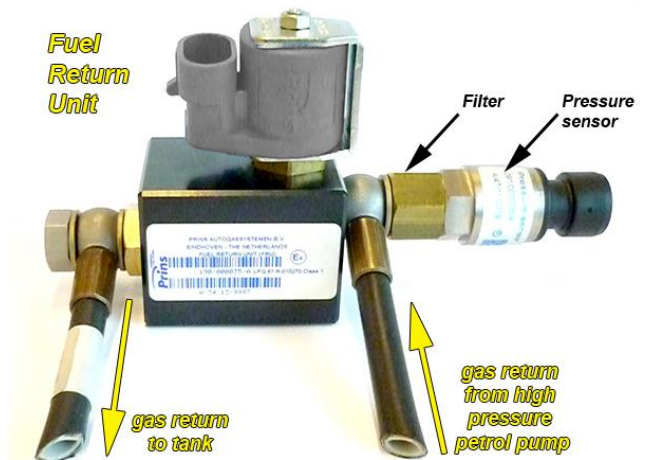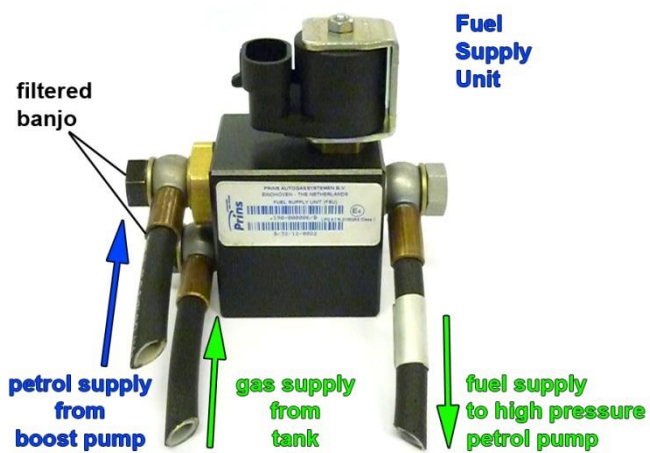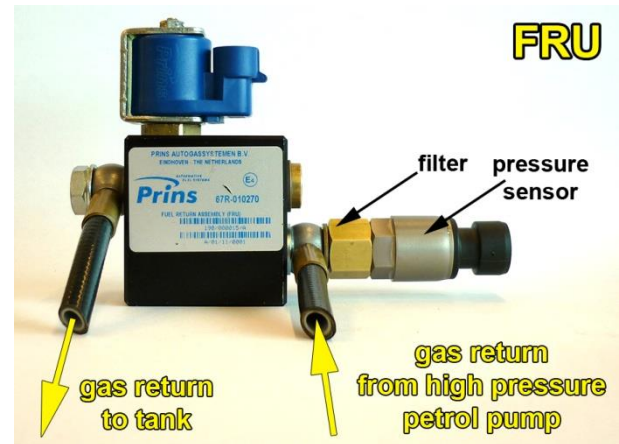
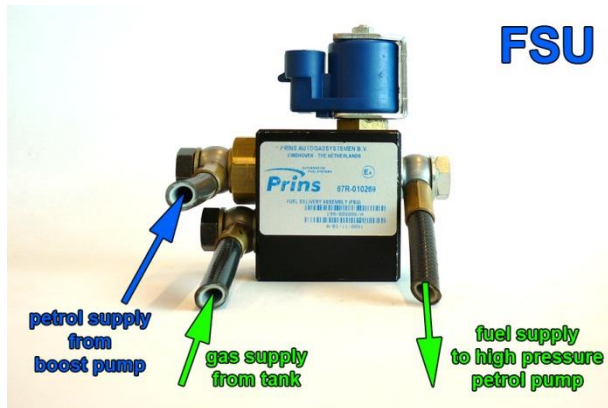


Black filtered banjo will only be used on inlet connections !




Filter inside sensor banjo



Mounting the Fuel Units

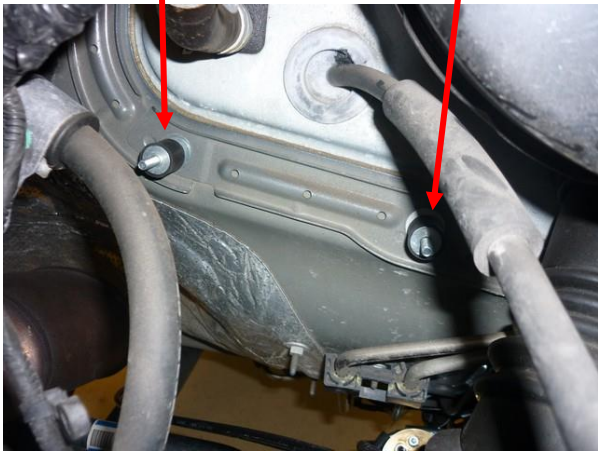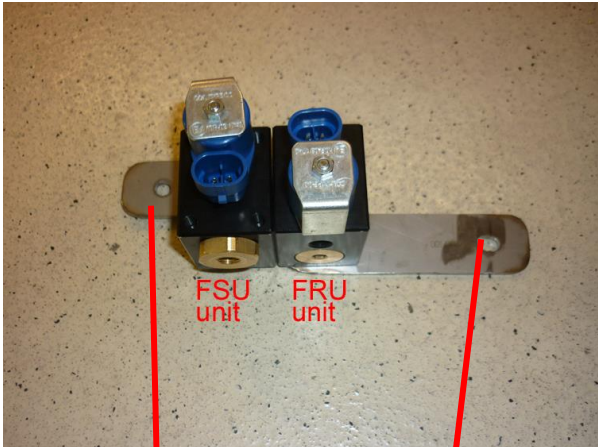

Screw two vibration dampers (25x15) on the M6 studs.

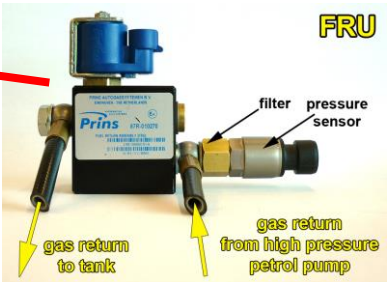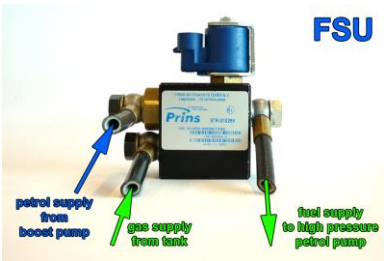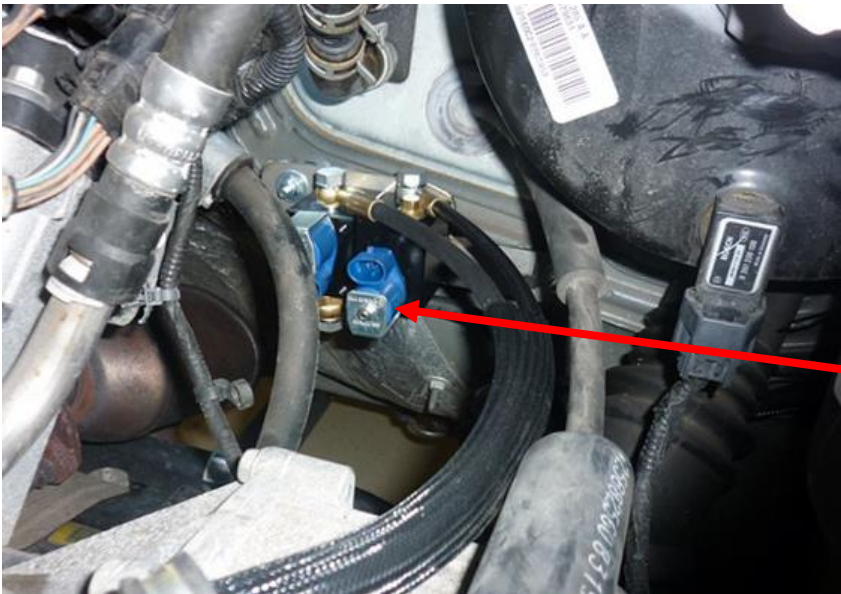


Different position coil FRU !

LPG / petrol fuel lines

	Hose	from	to	Length (cm)
1	XD	Adapter original petrol hose	Petrol boost pump	65
2	XD	Fuel supply unit	High pressure petrol pump	50
3	XD	Petrol boost pump	Fuel supply unit	35
4	XD	Fuel return unit	High pressure petrol pump	65



Install the fuel line using two bonded seal washers and banjo bolt :

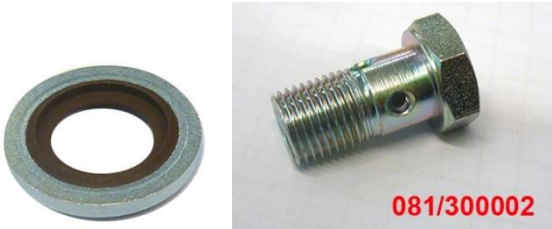


Filtered banjo: (FSU supply inlets / boost pump inlet / HPP pump inlet : black filtered banjo) :



Supply hose – Return hose – Tank wiring - PWM wiring

Protect the supply- and return hose together with tank-wiring using the Ø16 split tube.
Mount the “hose assembly “ with clamps, with a maximum distance of 40cm.


!!! do not forget the PWM extension wire set (191/080005/B) see page 23 !!!

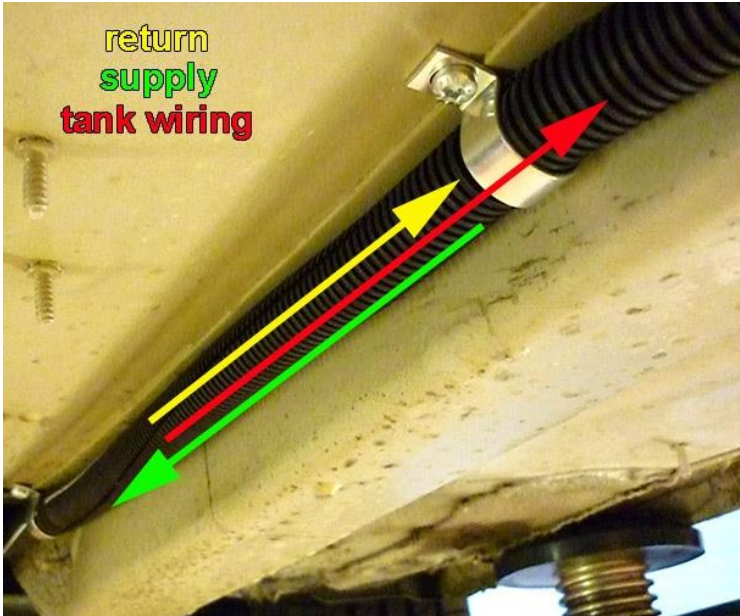

Demo photo

17&10			Low pressure petrol sensor signal interruption Wire colour : purple Wire location :Fuel pump flow control module Located above rear differential Connector X308 pin 10
17	AD 2	Blue-green	Sensor side
10	DAC 2	Green	ECU side
56	DI 2	Yellow-green	Petrol fuel pump driver (PWM in) Wire colour :Grey Wire location : Fuel pump flow control module Located above rear differential. Connector X 308 Pin 47

Hose routing

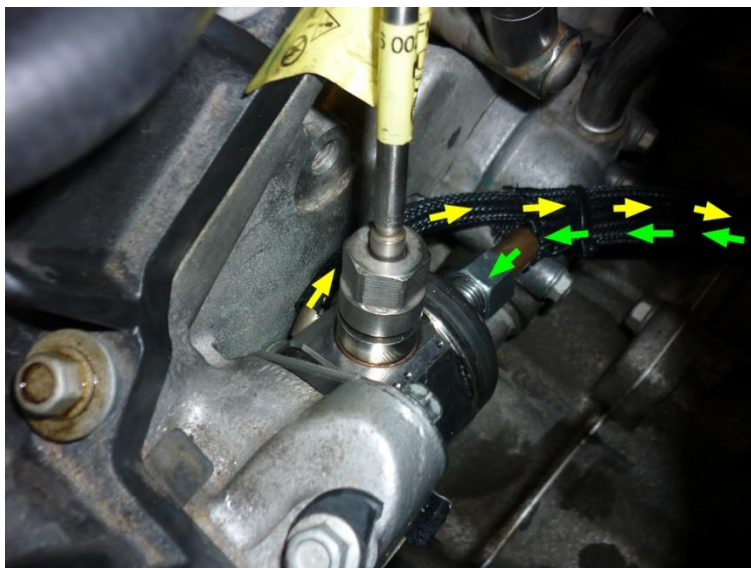

Lines from FSU and FRU unit to High pressure pump. (pic: FRU 1st Gen ! / 2nd Gen= coil grey and sensor side)

Mounting the AFC-2.1



Remove the plastic cover over the radiator grill. Place the AFC bracket under the two M6 bolts.



Wiring AFC



Battery +30



Ground

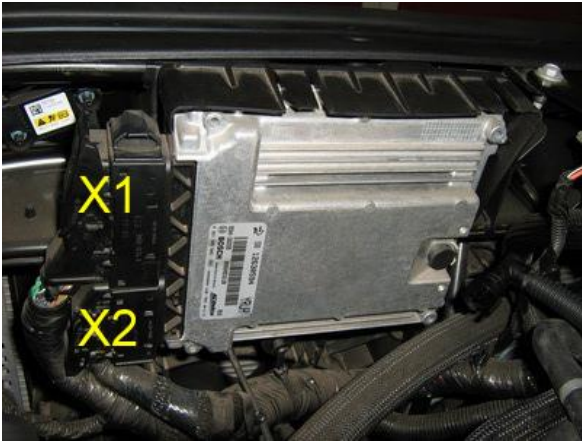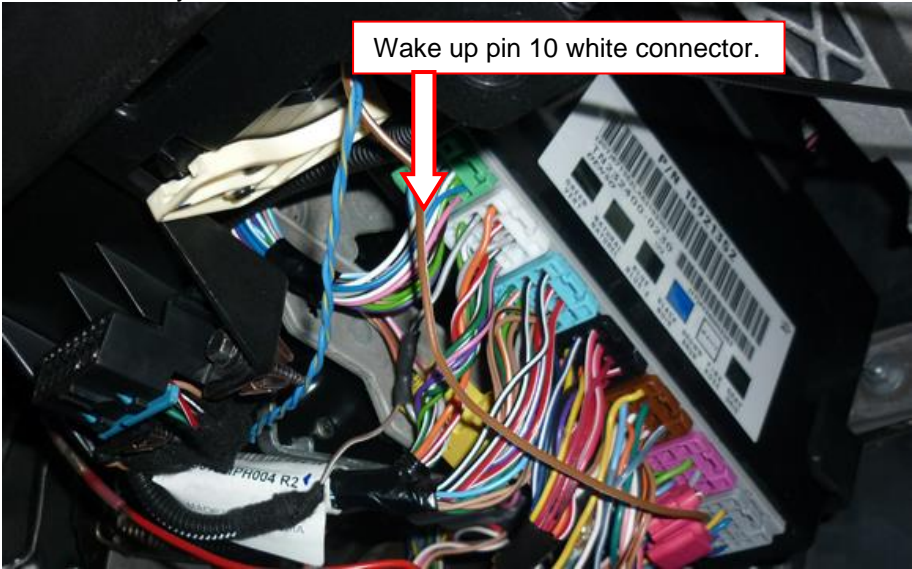

Connection Petrol ecu



Mount the switch, drill Ø8,2mm.

Mounting the fuel selection switch



CHEVROLET TRAVERSE



GMC ACADIA

Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.




Insulate not used wires.

Wire number / code		Wire colour	Connection
22	LSS 1	Purple-white	
23	LSS 2	Purple-green	
42	Digital out pull up 2	Red-purple	
58	+12V switched	Red-white	
60	DI 3	Yellow-pink	
20	AD 3	Blue-pink	
19	AD 4	Blue	
21	AD 9	Blue-purple	
74	DAC 3	Green-pink	

Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Driver room

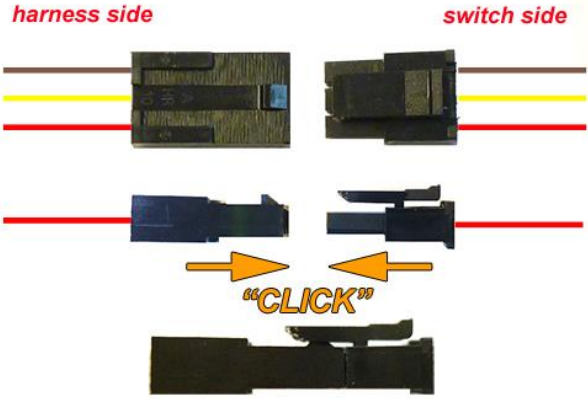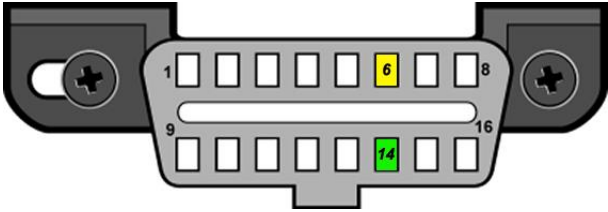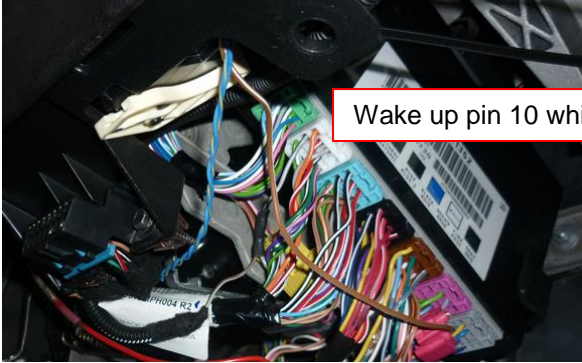
Wire number / code		Wire colour	Connection
3-pole micro connector			
66	Ground fuel switch	Brown-black	Connect the 3-pole connector to the Prins fuel selection switch.
3	+12V fuel switch	Red-white	
49	LIN fuel switch	Yellow	
			
51	CAN-High	Yellow	EOBD connector pin 6
70	CAN-Low	Green	EOBD connector pin 14
			
40	Wake-up	Grey-red	<p>car wake-up Wire colour : Grey-black Wire location : left-side dashboard Body Control Module locking behind the EOBD connector. White connector pin 10, grey-black</p>  <div>Wake up pin 10 white connector.</div>

Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Wire number / code	Wire colour	Connection
--------------------	-------------	------------

PWM extension wire set (191/080005/B) : underneath vehicle together with tank wiring:

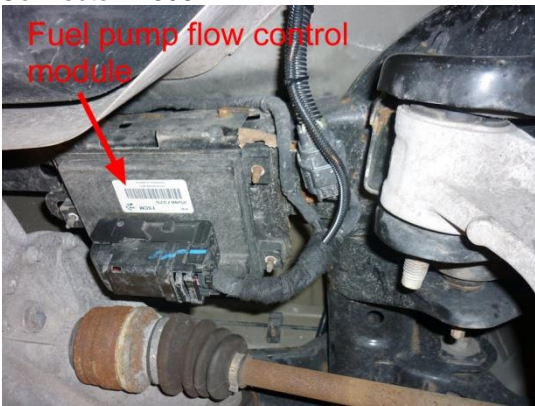17&10		<p>Low pressure petrol sensor signal interruption Wire colour : purple Wire location : Fuel pump flow control module Located above rear differential Connector X308 pin 10</p>
17 AD 2	Blue-green	Sensor side
10 DAC 2	Green	ECU side
56 DI 2	Yellow-green	<p>Petrol fuel pump driver (PWM in) Wire colour : Grey Wire location : Fuel pump flow control module Located above rear differential. Connector X 308 Pin 47</p> 

Electrical connections

2-connector ECU

Check and measure the wiring in case of changes in the cars wiring colours.


36&25		High pressure petrol sensor signal interruption Wire colour :Yellow Wire location :Petrol ecu X1 pin 36
36 AD 6	Blue-brown	Sensor side
25 DAC 1	Green-white	Petrol ecu side
61 DI 4	Yellow-blue	High pressure petrol sensor 5Volt supply Wire colour :Grey Wire location : Petrol ecu X1pin 38
63 Ground Shift	Blue-orange	High pressure petrol sensor ground Wire colour :Tan Wire location : Petrol ecu X1 pin 42
Connect MAP wiring to: 9 +5V 18 AD 1 35 Ground	AFC wiring: Red-blue Blue-white Brown	Analog in (sensor side) MAP sensor in Connect the 3-pole connector to the Prins MAP sensor. Sensor location: Right side behind the throttle body MAP wiring: Red (Red-blue +5V FRU return pressure sensor) Blue Brown (Brown ground FRU return pressure sensor)
8 RPM engine speed	Purple-white	For measuring the engine speed signal. Wire colour :Yellow Wire location :Petrol ecu X1 pin 35
15 T-ect	Grey	For measuring the engine coolant temperature. Wire colour : Yellow Wire location :Petrol ecu X1 pin 82
23 & 60		Digital Airflow signal sensor (MAF) Wire colour :Yellow sensor side Wire colour :Yellow ecu side Wire location : Petrol ecu X2 pin 13
23 LSS2	Purple-green	ECU side
60 Digital input 3	Yellow-pink	Sensor side

Electrical connections

2-connector ECU

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.


1-32 MAIN GND ecu MAIN GROUND SENSE	Brown	Connect to the '-' of the battery (-31) ; use a ring terminal. Wire colour : brown Wire location : under air-filter original M6 ground position.
4 – 13 +12V BATT sense +12V BATT fused +12V BATT boost pump +12V BATT pump driver	Red	Connect to the '+' of the battery (+30) ; use a ring terminal. Do not place the fuses before having completed the installation of the lpg system. Wire location : Right-side fuse box
7 +12V IGNITION	Grey - white	Make a connection to +ignition / contact+ (+15). Do not place the fuses in the holder before having completed the installation of the lpg system. Wire colour : pink Wire location : ecu connector, X2, pin 54

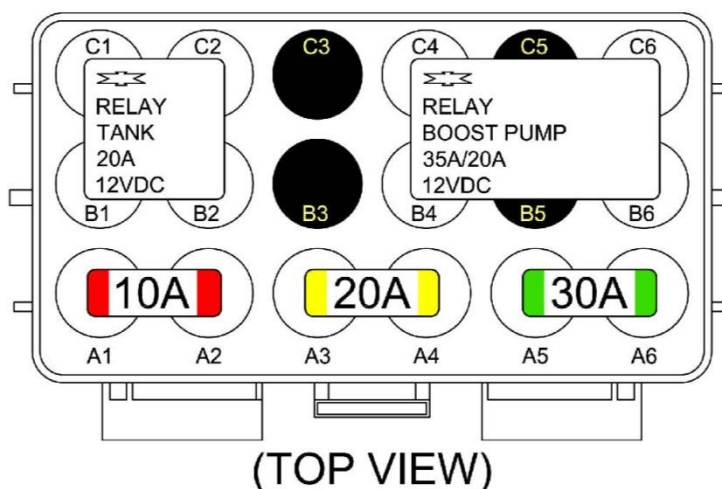

Electrical connections

3-connector ECU 2012-

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

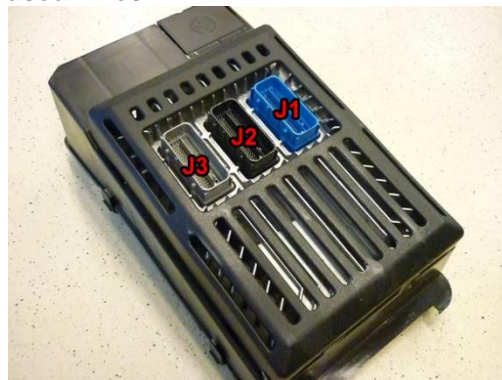

7	+12V IGNITION	Grey - white	Make a connection to ignition + / contact + (+15). Do not place the fuse in the holder before having completed the installation of the lpg system. Wire colour : Pink Wire location : petrol ecu J1, blue connector, Pin 51
36 25	AD 6 DAC 1	Blue-brown Green-white	High pressure petrol sensor signal interruption Sensor side. ECU side. Wire colour : Yellow Wire location : petrol ecu J2, black connector, Pin 19
63	ground shift	Blue-orange	High pressure petrol sensor ground Wire colour : Tan Wire location : petrol ecu J2, black connector, Pin 3
61	DI 4	Yellow-blue	High pressure petrol sensor 5Volt supply Wire colour : Grey Wire location : petrol ecu J2, black connector, Pin 18
60 23	DI 3 LSS 2	Yellow-pink Purple-green	Digital Airflow sensor signal interruption Sensor side Ecu side Wire colour : Yellow Wire location : Petrol ecu J2, black connector, pin 52
18	AD1	Blue-white	For measuring the inlet manifold pressure from the engine MAP sensor. Wire colour : Light-green Wire location : Petrol ecu J2, black connector, Pin 43
8	RPM	Purple-white	For measuring the engine speed signal. Wire colour : White-black Wire location : Petrol ecu J3, grey connector, Pin 26
15	T-ect	Grey	For measuring the engine coolant temperature. Wire colour : Yellow Wire location : Petrol ecu J3, grey connector, Pin 8


Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Engine room

Wire number / code	Wire colour	Connection
3-pole connector		
35 Ground Psys pin A	Brown	Connect the 3-pole connector to the Psys sensor positioned into the Fuel Return Unit.
9 +5V sensor pin B	Red-blue	Sensor wire pin A
16 Psys pin C	Green	Sensor wire pin B
		Sensor wire pin C
2-pole connector FSU, black		
24 + Lock-off FSU	Yellow-green	Connect the 2-pole connector to the lock-off valve of the Fuel Supply Unit
31 C Ground	Brown-black	
2-pole connector FRU, grey		
43 + Lock-off FRU	Red-white	Connect the 2-pole connector to the lock-off valve of the Fuel Return Unit
34 C Ground	Brown-black	
4-pole diagnose connector		
46 Service TxD	Grey	Diagnose connector for service / diagnosis
65 Service RxD	Grey	Connector pin 1
68 C Ground	Brown-black	Connector pin 2
		Connector pin 4
Boost pump relay		
2 + relay boost pump	Red-white	Pin 86 of the boost pump relay C4
26 Ground BP relay	Purple-blue	Pin 85 of the boost pump relay B6
+12V fused BATT	Red 2.5mm2	Pin 30 of the boost pump relay C6-A5
+12V Boost pump	Red 2.5mm2	Pin 87 of the boost pump relay B4
Wiring tank pump driver relay		
57 + driver relay	Red-white	Pin 86 of the driver relay C1
73 LSS 4 tank relay	Purple-blue	Pin 85 of the driver relay B2
+12V BATT fused	Red 2.5mm2	Pin 30 of the driver relay C2-A4
+12V driver	Red 2.5mm2	Pin 87 of the driver relay B1

Boost pump connection options:

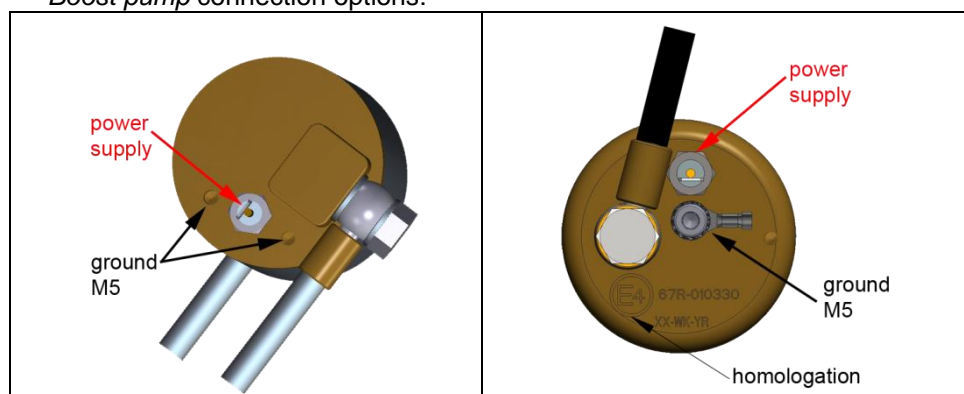


Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Lpg tank housing

Wire number / code	Wire colour	Connection
3-pole tank level connector 33 Ground tank gauge 12 Tank level in 11 + tank level supply	Brown-black Blue Red-blue	Connect the 3-pole connector to the tank level sensor.
2-pole driver connector 71 LSS 3 PWM driver 64 AD 5 driver diagnose	Purple-pink Blue-grey	Connect the 2-pole connector to the pump driver (4).
1. 2-pole connector tank lock-off	Green-yellow Brown	From tank pump driver From tank pump driver
2. 3-pole connector tank pump	Red 2.5mm ² Brown 2.5mm ²	From tank pump driver From tank pump driver
3. 2-pole connector power driver	Red 2.5mm ² Brown 2.5mm ²	From tank pump relay 87 From main ground
4. 2-pole connector driver	Green Grey	From AFC pin 71 pwm From AFC pin 64 diagnose

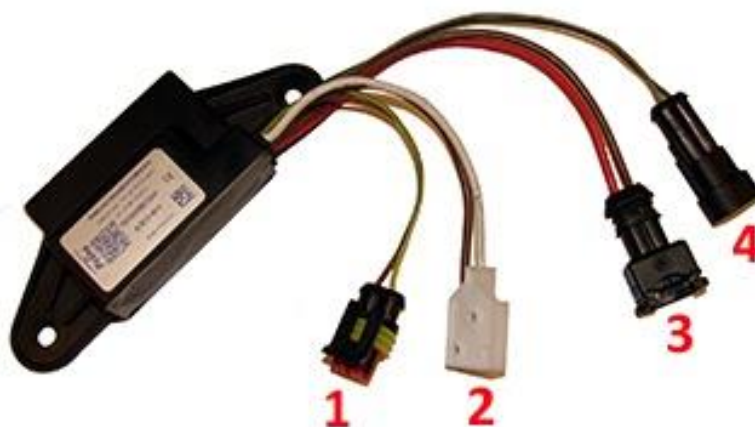

Checklist after installation

1. Install the system fuses.
Turn on ignition.
Connect the Prins interface wire and run the Prins diagnosis program.
When working on the car, beware of moving and rotating parts in the engine compartment (even when the engine is not running !!).
2. When commissioning the LPG system, you must activate the AFC with the diagnosis software.
3. Check whether the program in the AFC matches with the car (dedicated engine set):
See "Identification" in the diagnosis program.
4. Check all components and connections for any LPG leakage, use a LPG leak detector device or a fluid detection like soap. Also check for petrol leakage. Make sure the solenoid valves are in open position.
No evidence of leakage is permitted.
Caution for moving and rotating parts in the engine compartment !
5. Use the diagnosis software to check again all input and output signals.
6. Check the system for error codes and solve these, if required.
Check the petrol MMS for EOBD error codes.
Place the protection connector back on the diagnose connector.
7. Make a test drive and check the cars drivability on LPG and petrol.