



Quality, innovation and customer care, it's in our nature



Installation manual



MAKE OF AUTOMOBILE:
TYPE:
PISTON DISPLACEMENT:
NUMBER OF VALVES:
ENGINE NUMBER:
TYPE VSI INJECTOR (COLOR)
MODEL YEAR:
ENGINE SET NUMBER

Kia
Carens
2000
16
G4KA
ORANGE
2007
349/7000000.07

Copyright © Prins Autogassystemen B.V. 2009

NUMBER : 076/2800301
DATE : 2009-09-16
VERSION NR : 2009-06-24 B

TABLE OF CONTENTS

Required equipment / tools / materials for installing a complete system.....	2
Vehicle check	2
Base diagram	3
Mounting the Valve Care unit	4
Installing the Valve Care valve	5
Valve Care nylon hose routing.....	6
Electrical connections.....	7


Required equipment / tools / materials for installing a complete system

- Complete workshop toolbox (wrenches, screwdrivers, cutters, pliers, ratchet, sockets)
- Portable computer : operating on Windows 98, W2000 or XP.
 - Internal memory : 16 Mb or more
 - Memory HD space : 5MB
 - Screen : 256 colours, advise colours 16 bits or more
 - Com port : 1 free COM port 1 or COM port 2 with a 9 or 25 pins connector
- Vehicle fuel system scan tool or OBD scan tool Prins (part nr. 099/99928)
- Valve care interface cable
- Valve care software
- Valve care air-breather pipe
- Multimeter
- Prins VSI diagnostic software
- Prins VSI serial interface
- Prins VSI break out box (part nr. 080/70090)
- Portable light
- Assortment drill bits 4 to 12 mm
- Portable drill or pneumatic drill
- Threading device (male M6x1)
- Air gun
- Soldering iron, soldering tin
- Wire-stripping pliers
- Adhesive tape
- Adhesive sealant
- Thread locking compound

Vehicle check

- Check the vehicle drivability on petrol
- Check the fuel system for error codes (scan tool)
- Check if the catalytic converter is in good condition (exhaust gas analyzer)


Base diagram

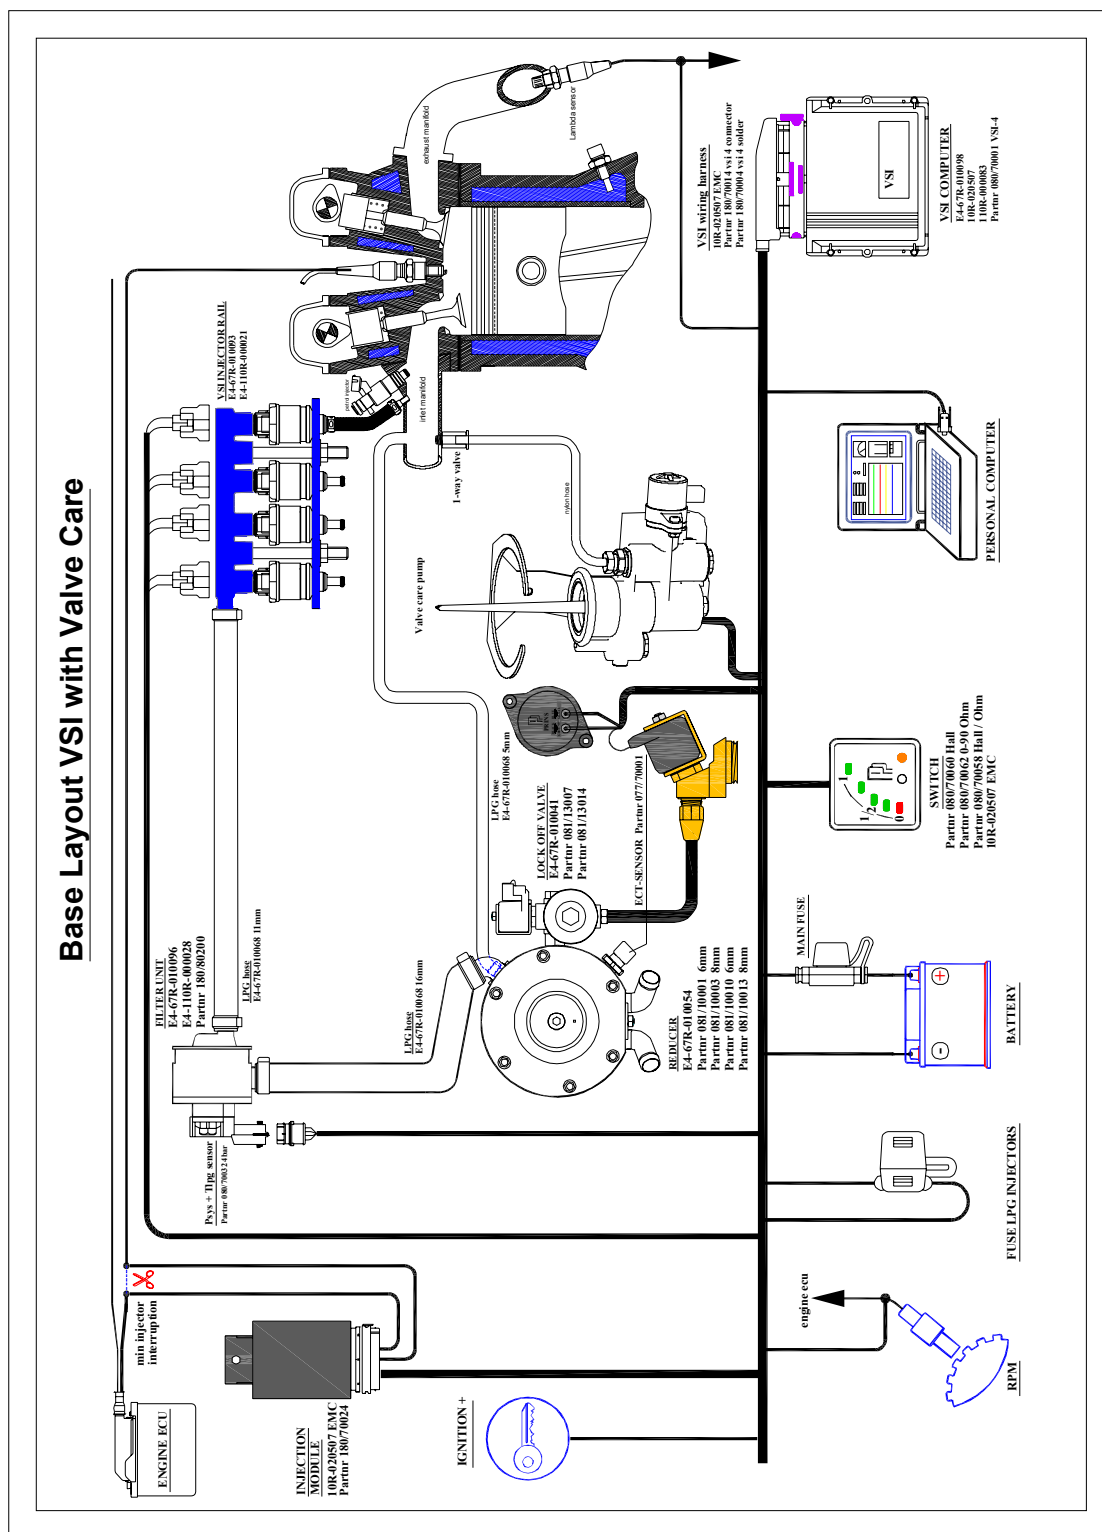

Mounting the Valve Care unit



remove bolt from engine support for installation of the VC bracket

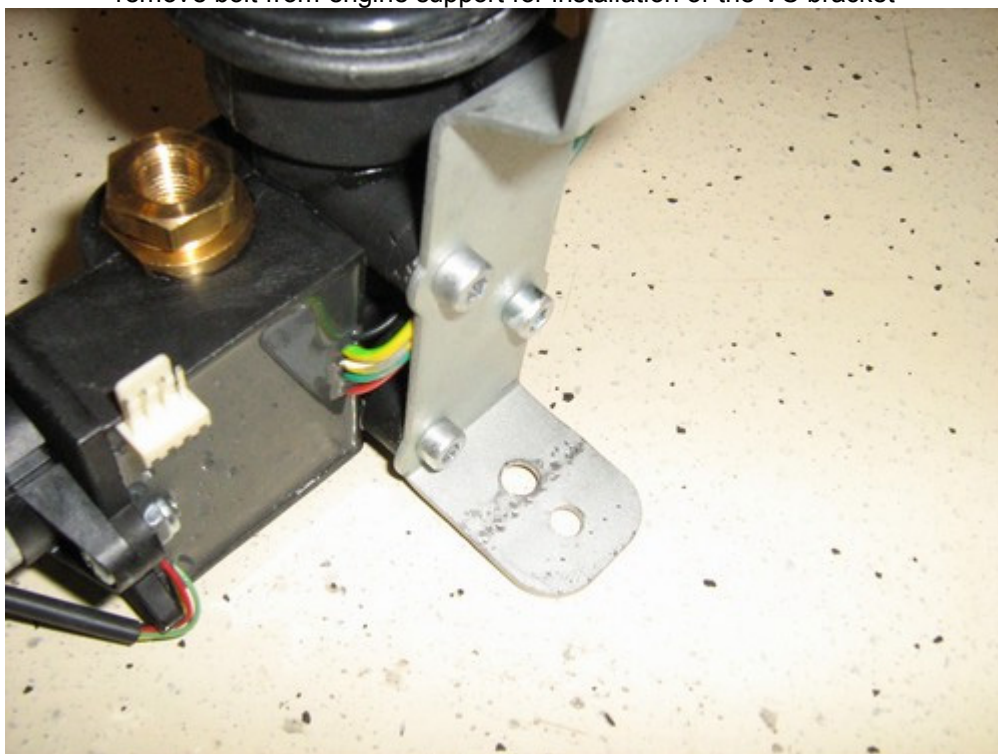


straighten and drill an extra hole:Ø7mm, to bolt on the bracket onto the engine support

Installing the Valve Care valve



Drill a hole of Ø5mm and tap M6x1 thread into the manifold.
Install the valve with a lock compound.
Install the hose into the self-locking valve.

Valve Care nylon hose routing

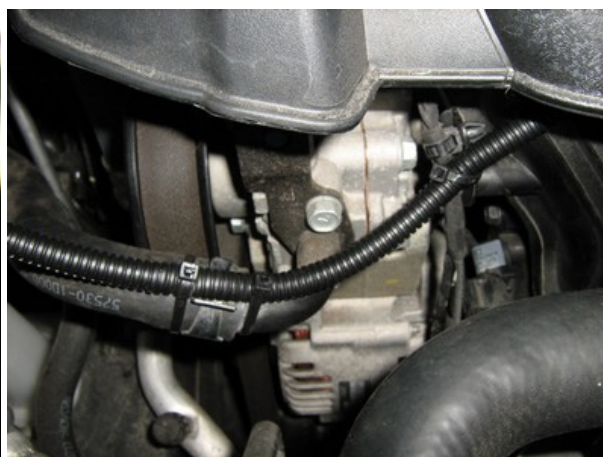

Length of hose, Ø 6 mm	Valve care pump -> 1 way valve	= ± 100cm
------------------------	--------------------------------	-----------

Please observe that there is no damage or fouling to the hoses.

Electrical connections

Check and measure the wiring in case of changes in the cars wiring colors.

Valve care cable	Connection
Green	Wire color : green Wire location : VSI ecu pin. 44
White-yellow	Wire color : white-yellow Wire location : VSI ecu pin. 39
Brown	Wire color : brown Wire location : VSI ecu pin. 50
Green-yellow	Wire color : green-yellow Wire location : VSI ecu pin. 53
Red	Wire color : grey-white Wire location : VSI ecu pin. 13

