



Quality, innovation and customer care, it's in our nature



Installation manual Dedicated PART 2/2

MANUFACTURER
TYPE
ENGINE DISPLACEMENT
NUMBER OF VALVES
ENGINE CODE / NUMBER
VEHICLE CATEGORIES
TRANSMISSION
VERSION
PETROL ECU MANUFACTURER / CODE
HIGH PRESSURE PETROL PUMP
HIGH PRESSURE PETROL INJECTOR
MODEL YEAR:
SYSTEM APPROVAL NUMBER (R115)
LOCATION SYSTEM STICKER
ENGINE SET NUMBER
MANUAL NUMBER
DATE

Audi
A4 / **A5**
1800cc
16v
CJEB
M1
MT(6)
Direct LiquiMax-2.0
Continental Simos 12.1
Bosch 0.261.523.113
x
2013
E4-115R-000010 / DLM-LPG 03
right side, centre door post
366/070012/A / **366/070016/A**
076/2612000
2012-11-20



TABLE OF CONTENTS

General instructions	2
Required equipment / tools / materials for installing a complete system	3
Vehicle check	3
Tightening moments.....	4
Direct LiquiMax.....	5
Overview Direct LiquiMax.....	6
Direct LiquiMax parts / approval numbers.....	7
Mounting and connection points.....	8
High pressure pump adaption	9
Boost pump	10
Boost pump	11
Connection of the fuel hoses to the boost pump and low pressure fuel rail - 1.....	12
Connection of the fuel hoses to the boost pump and low pressure fuel rail - 2.....	13
Fuel Supply Unit	14
Fuel Return Unit	15
Mounting the FSU / FRU	16
Lpg / petrol fuel lines	17
Hose routing - 1	18
Hose routing - 2.....	19
Supply hose – Return hose – Tank wiring.....	20
Hose / wiring routing to tank - 1.....	21
Hose / wiring routing to tank - 2.....	22
Mounting the AFC Audi A4.....	23
Mounting the AFC Audi A5.....	24
Fuses / relay location Audi A4.....	25
Fuses / relay location Audi A5.....	26
Petrol ECU / wiring routing.....	27
Mounting the fuel selection switch.....	28
Mounting the fuel selection switch Optional	29
Mounting the fuel selection switch Optional	29
Electrical connections.....	30
Electrical connections.....	31
Electrical connections.....	32
Electrical connections.....	32
Electrical connections.....	33
Checklist after installation.....	34

FOR EXPLANATION AND CIRCUIT DIAGRAMS SEE : INSTALLATION MANUAL GENERAL PART 1 / 2



General instructions

- The installation of the system shall be done in accordance with the installation manual provided by Prins Autogassystemen.
- This manual is based on Dutch regulations, always install the system in accordance to the local regulations.
- For an optimal functioning of the Direct LiquiMax system, maintain a clean and organized work environment during installation and maintenance to prevent pollution of the LPG components.
- Always download the "general manual 1/2 " from our website for basic instructions and diagrams.
- Always disconnect the battery when installing the lpg system. Make sure the ignition key is outside the car.
Be aware of central door locking, radio / telephone memory code, alarm system.
- Wear safety goggles when working on petrol filled system / connections (pressurized petrol)
- Do not place the main fuse into the fuse holder before having completed the installation of the system.
- The AFC has to be activated by means of the Prins diagnosis software.
- Never disconnect the AFC connector, unless you have removed the main fuse.
- When installing the wiring harness, ensure that it does not run near any of the ignition components.

Solder and insulate all electrical connections.

The wires in the loom are provided with numbers and text. The text on the wire explains the function of the wire.

The wire harness is not model specific, therefore it may be necessary to adjust the length of the wires.

Ensure maximum care is taken when connecting wiring.

Make professional joints using solder and shrink sleeve. Do not stretch the wiring harness.

- No component of the LPG-system shall be located within 100 mm of the exhaust or similar heat source, unless such components are adequately shielded against heat.
- If holes have to be drilled (wear safety glasses) for installing brackets, etc., the drilled holes must always be treated with an anti-corrosion agent, after the chips have been removed (especially when mounting a exterior filler into body work).
- After having completed the installation, check the whole system for lpg leakage; use a lpg leak detection device. Also check for leak of engine coolant, petrol and air.
- Fitting and maintenance is only allowed by Prins Autogassystemen selected LPG engineers.
- Failure to follow the instructions in this manual can result in a poor or non-working lpg installation or a dangerous situation.
- For maintenance instructions and filter registration see owner manual.
- Prins Autogassystemen is not responsible for any damages to people or objects as a result of changes to Prins products.
- Check our website regularly for diagrams, certificates, updates, info-bulletins and product information.

Register (warranty card) the system on the Prins warranty portal .



Required equipment / tools / materials for installing a complete system

- Complete workshop toolbox (wrenches, screwdrivers, cutters, pliers, ratchet, sockets)
- Car lift
- Portable computer : operating on Windows 98, W2000 or XP.
 - Internal memory : 16 Mb or more
 - Memory HD space : 5MB
 - Screen : 256 colours, advise colours 16 bits or more
 - Com port : 1 free COM port 1 or COM port 2 with a 9 or 25 pins connector
- Vehicle fuel system scan tool or OBD scan tool Prins (part nr. 099/99928)
- Exhaust gas analyser
- Multimeter
- Oscilloscope
- Prins diagnostic software
- Prins serial interface
- Torque wrench (10Nm)
- Torque wrench (200-250Nm)
- Portable light
- Assortment drill bits 4 to 12 mm
- Assortment cutters (ø 20, 30, 50, 70 mm)
- Portable drill or pneumatic drill
- Thread cutting device (male M6x1, M8x1, M10x1)
- Socket 46mm
- Air gun
- Vacuum cleaner
- Safety goggles
- Hot air gun
- Soldering iron, soldering tin
- Wire-stripping pliers
- Adhesive tape
- Adhesive sealant
- Thread locking compound
- Anti-corrosion agent / black body coating
- Gas leak detection device or foam leak spray
- Shrink sleeves
- Engine coolant

Vehicle check

- Check the vehicle drivability on petrol
- Check the fuel system for error codes (scan tool)
- Check if the catalytic converter is in good condition (exhaust gas analyzer)
- Check the condition of the ignition system (spark plugs, cables, coil)



Tightening moments

	Nm	SW
M 4 x 0,7	3.3	7
M 5 x 0,8	6.5	8
M 6 x 1,0	11.3	10
M 7 x 1,0	14.5	11
M 8 x 1	24.5	13
M 8 x 1,25	27.3	13
M 10 x 1	52	15-16-17
M 10 x 1,5	54	15-16-17
(filtered)Banjo bolt	10	14
Supply line connection	15	13
Fuel module Allen bolts	20	7
Filler hose connection	50	22

EXPLANATION OF SYMBOLS :




= IMPORTANT, CAUTION



= WEAR SAFETY GOGGLES




Direct LiquiMax

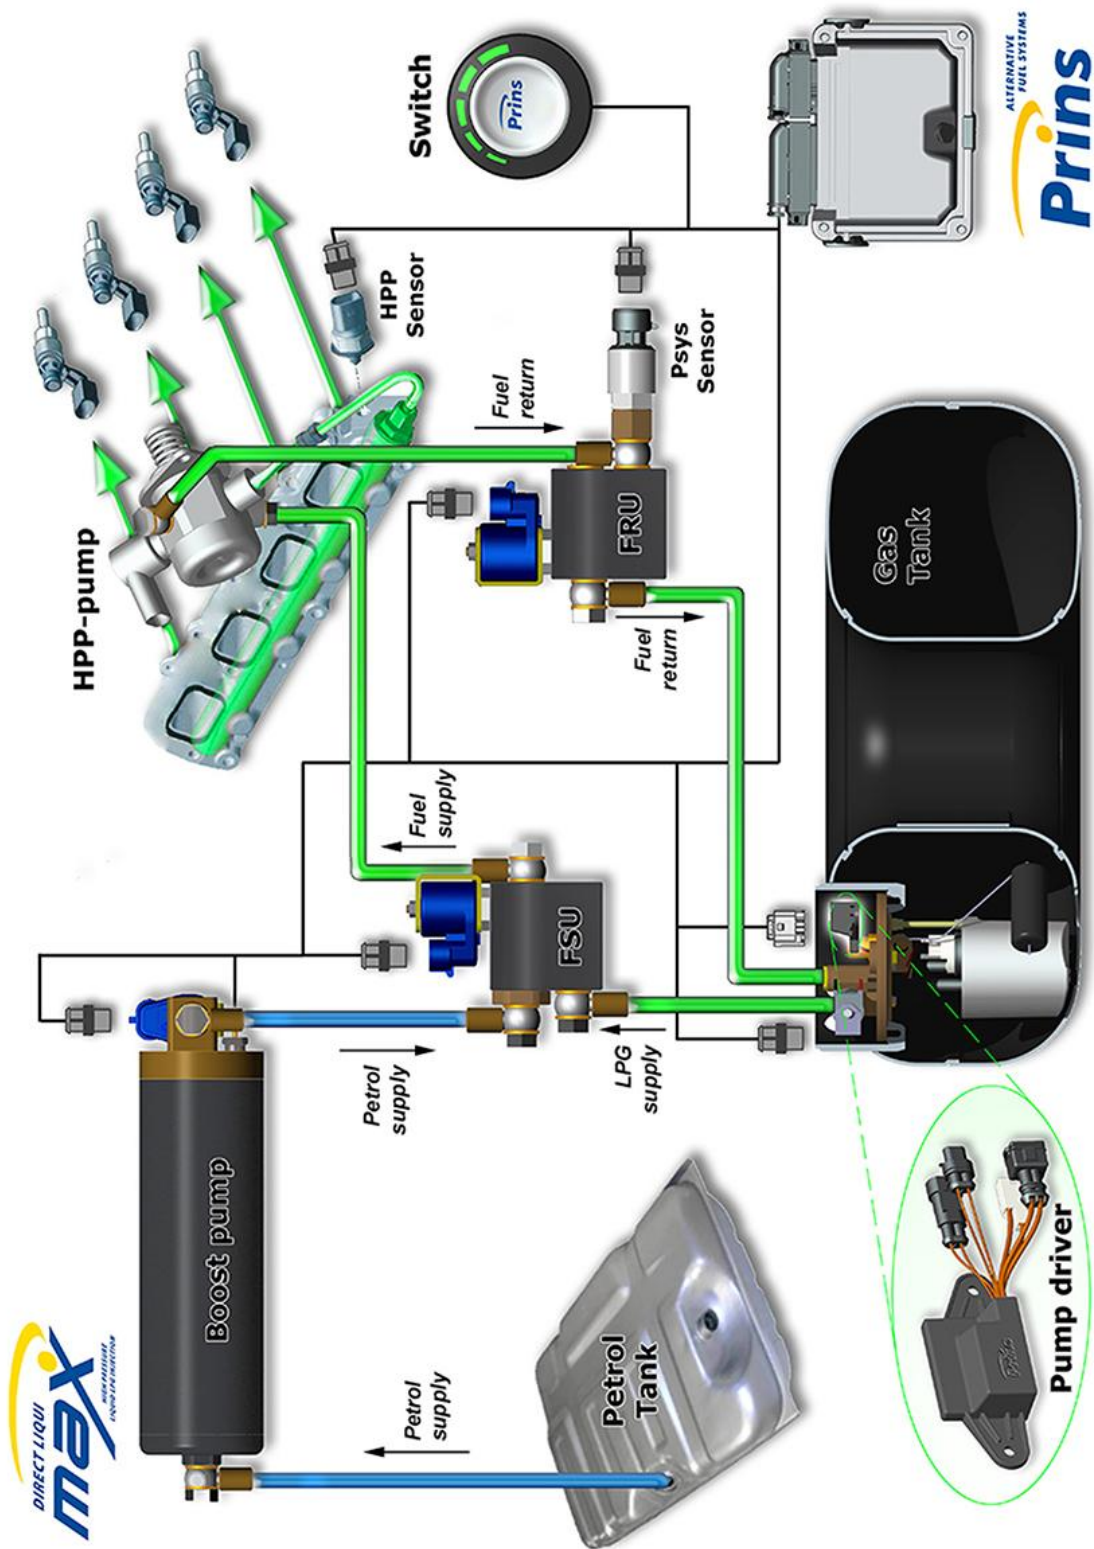

Overview Direct LiquiMax

overview Direct Liqui Max

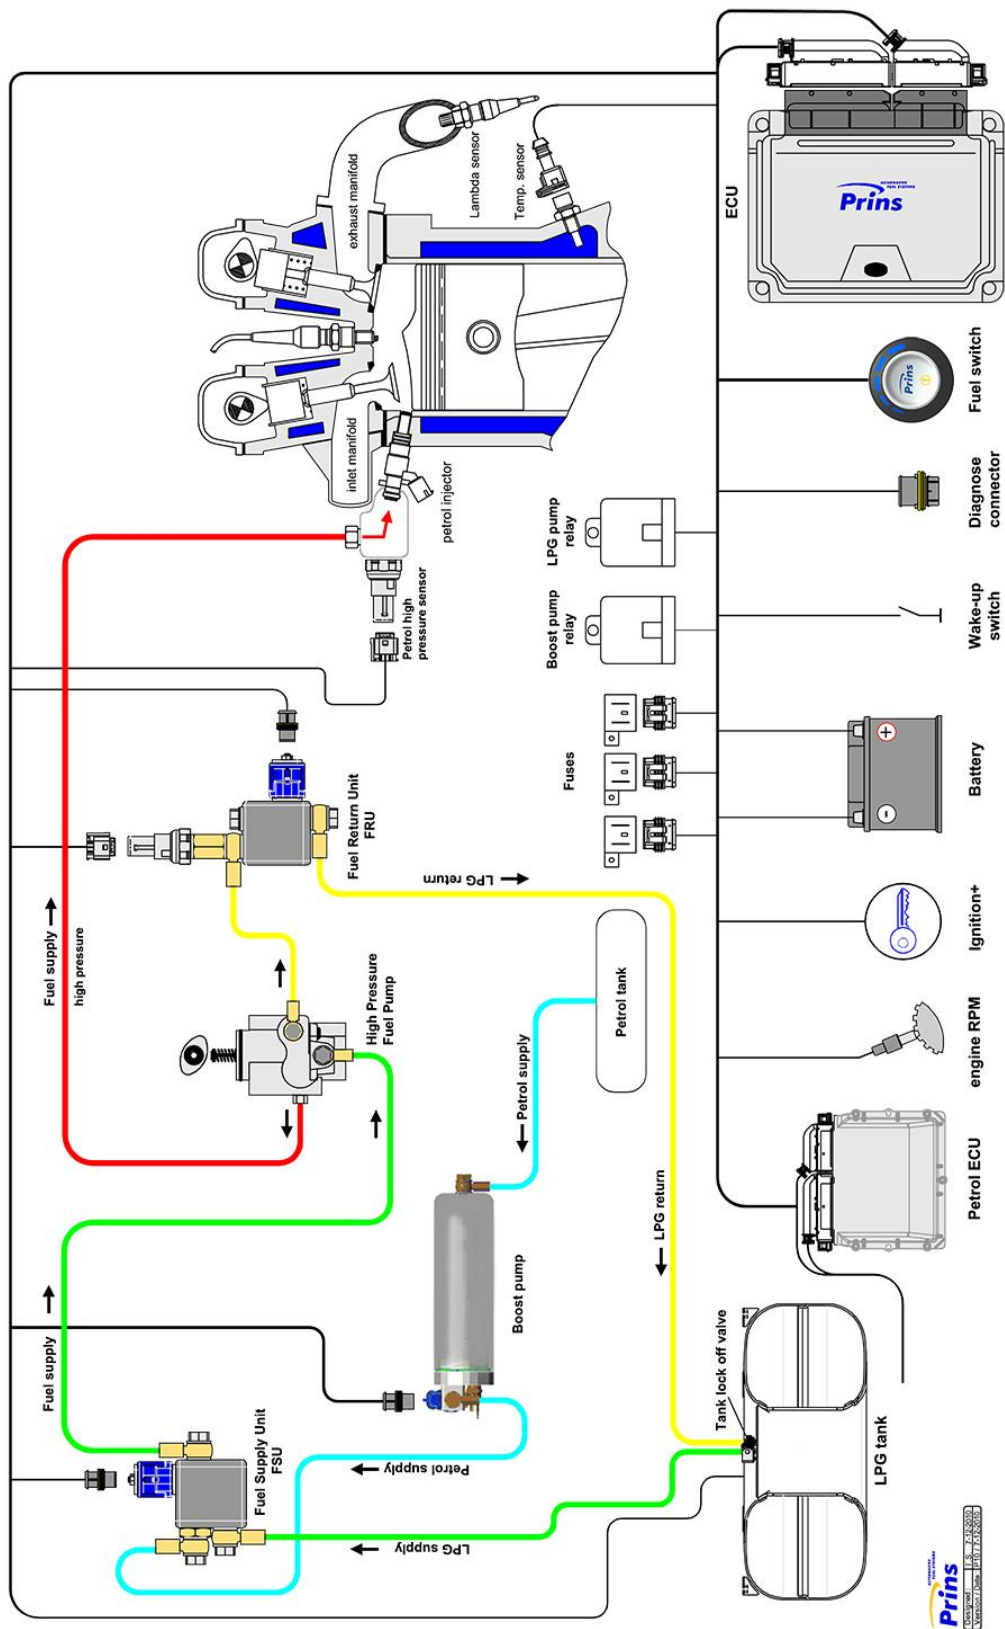


Direct LiquiMax parts / approval numbers

 <p>1st generation</p>  <p>2nd generation</p>	 <p>1st generation</p>  <p>2nd generation</p>
<p>Fuel Supply Unit : E4-67R-010269</p>	<p>Fuel Return Unit : E4-67R-010270 Pressure Sensor : E4-67R-010051</p>
	
<p>Boost pump</p>	<p>High Pressure Pump : E4-67R-010266 High Pressure Rail : E4-67R-010267 High Pressure Injectors : E4-67R-010309</p>
	 <p>XD-3 LPG</p>  <p>XD-4 LPG</p>
<p>Prins ECU : E4-67R-010098 E4-10R-030507</p>	<p>Fuel lines series XD : E4-67R-010247 XD3 E4-67R-010247 XD4</p>



Mounting and connection points

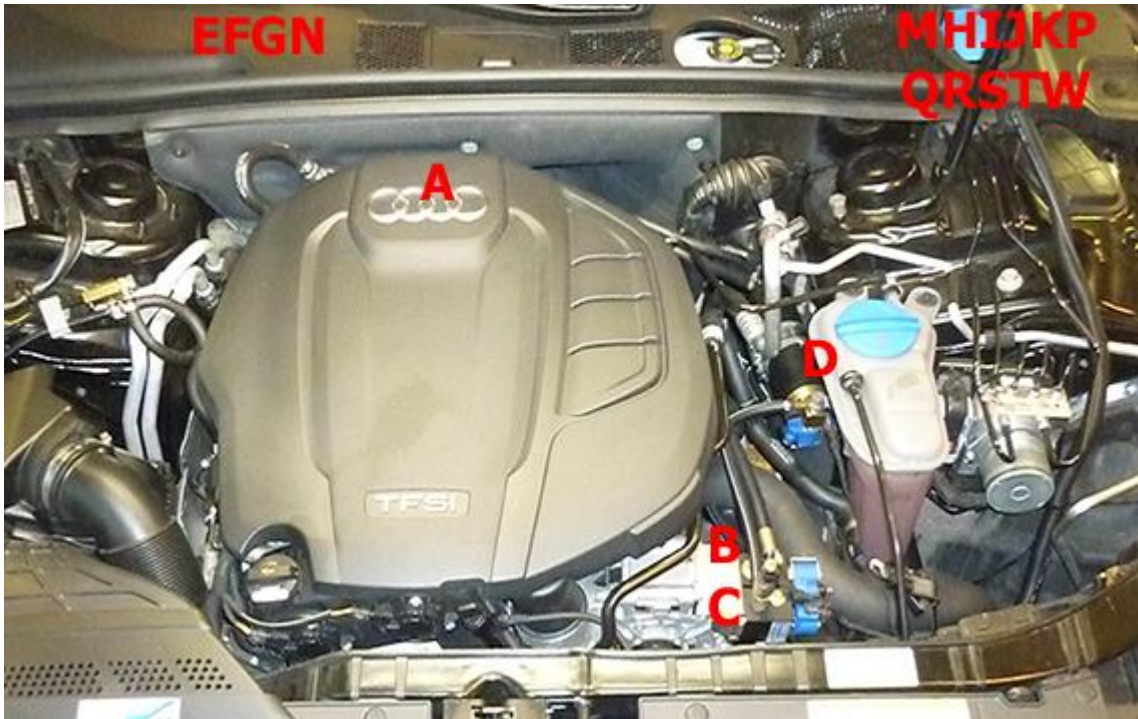


A : High pressure petrol pump	L : R115 Approval sticker
B : Fuel Supply Unit : FSU	M : Grommet
C : Fuel Return Unit : FRU	N : Gas system fuses
D : Boost pump	P : T-ect
E : AFC	Q : Low pressure signal
F : Boost pump relay	R : MAP, Analog 3
G : Tank relay	S : Analog 2
H : Petrol ECU	T : Analog 4
I : Engine speed signal RPM	V : Digital input 3
J : "+" ignition	W : Wake-Up
K : High pressure signal Analog 1	X : Digital input



L:
R115 approval sticker :
Right side centre door post


High pressure pump adaption

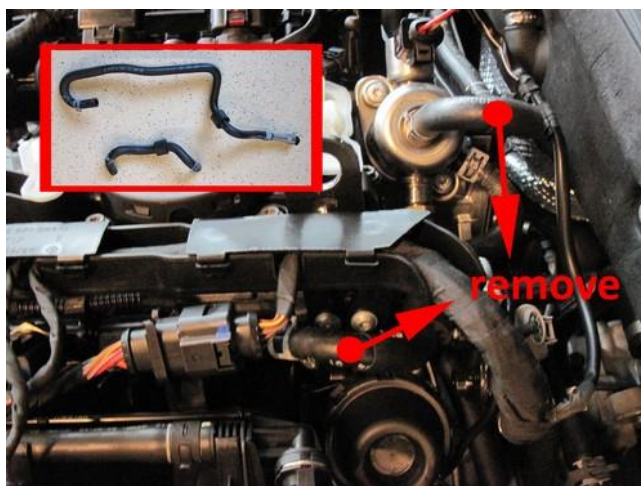

Remove fuel hoses




Remove original fuel connection

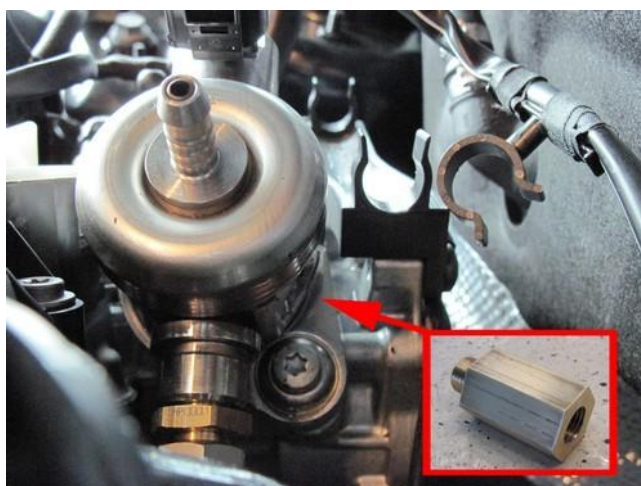


Mount new fuel connection



Boost pump

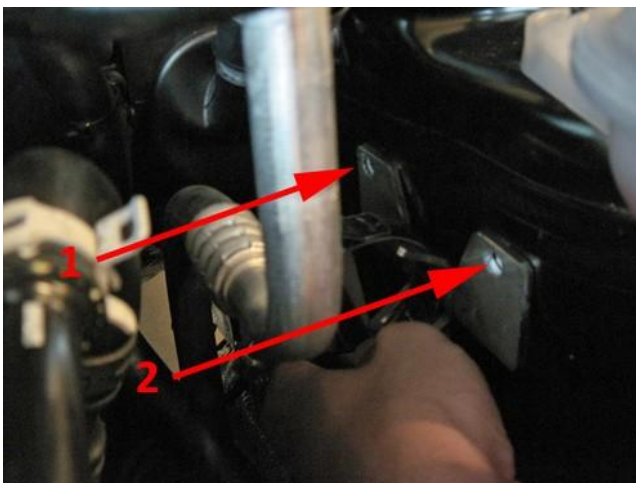

Mark holes for drilling.

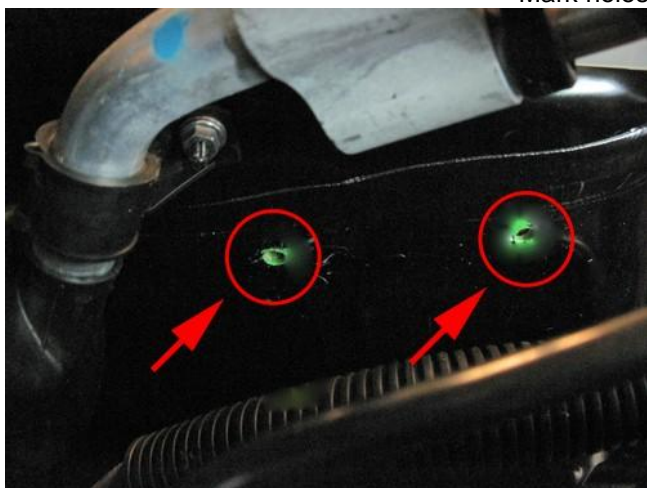



Drill holes Ø6,5mm for mounting boost pump bracket.



Mount boost pump clamp to bracket.





Boost pump

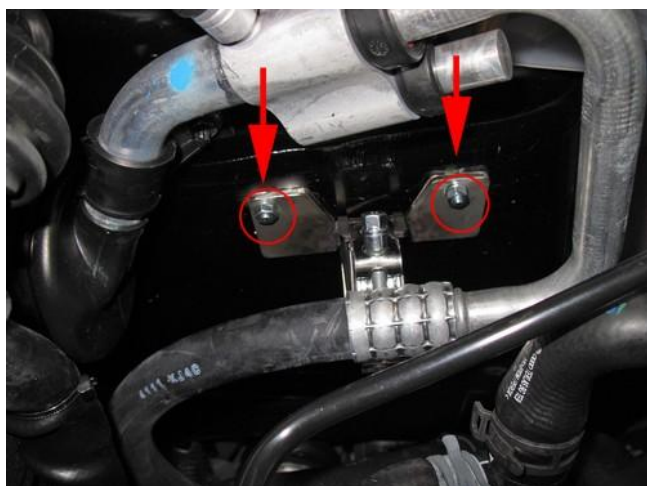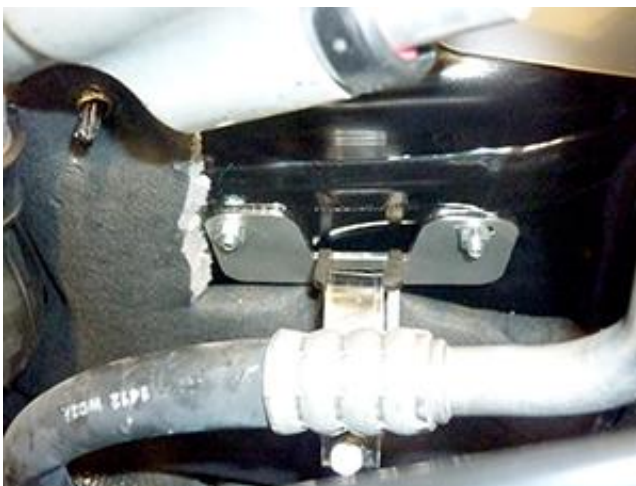



Mount bracket with clamp with 2x M6 bolts, (spring)washers & nuts.
Mount boost pump to bracket with rubber protection ring around boost pump.





Connection of the fuel hoses to the boost pump and low pressure fuel rail - 1

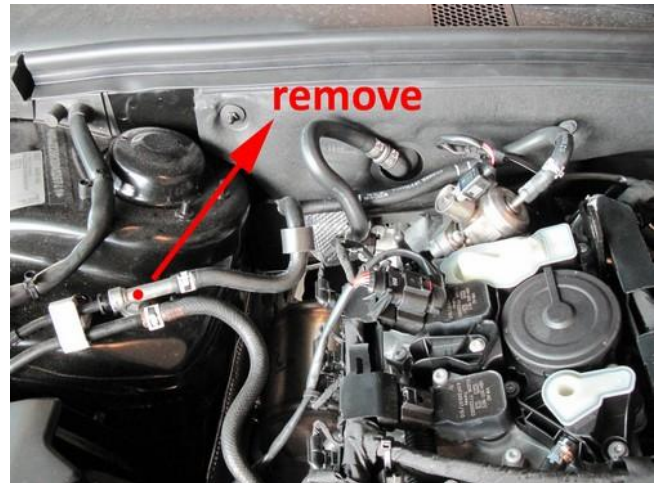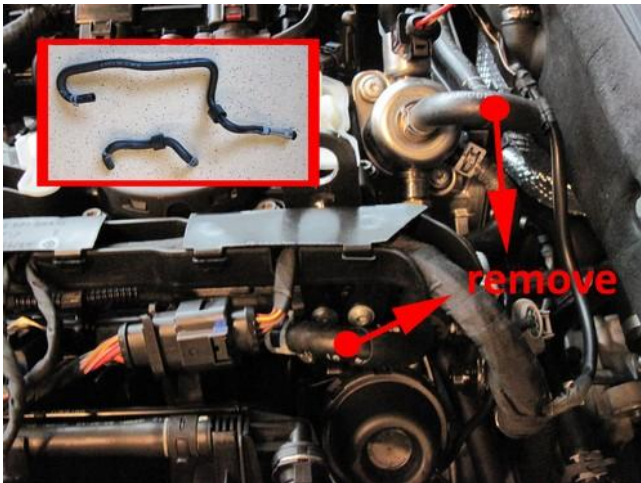

Remove both hoses from fuel pump and low pressure fuel rail. Remove the complete supply fuel hose.

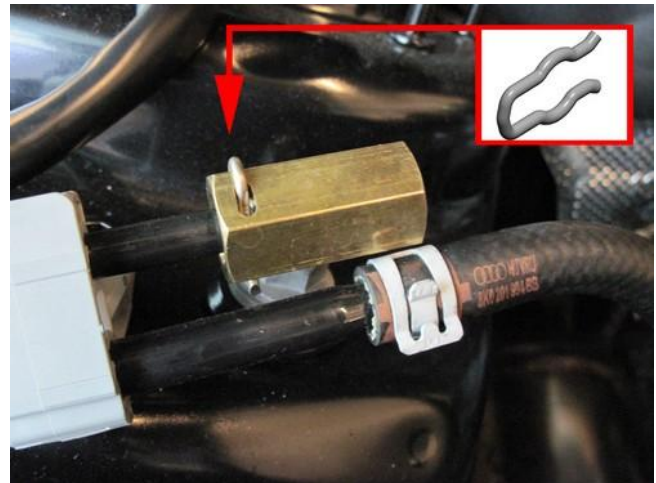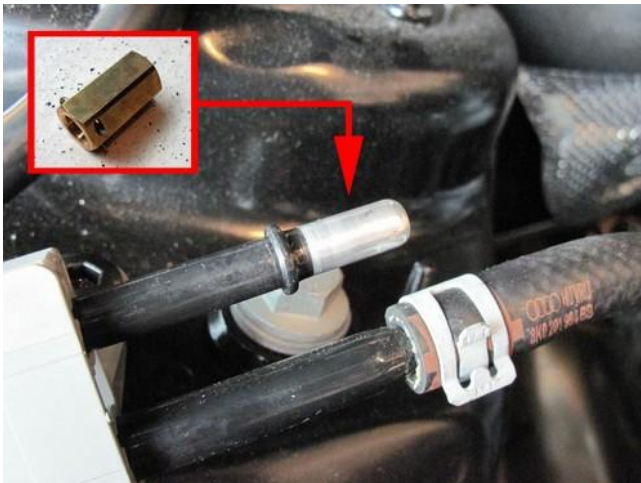

Mount a quick release onto the petrol supply line, don't forget the locking clip.

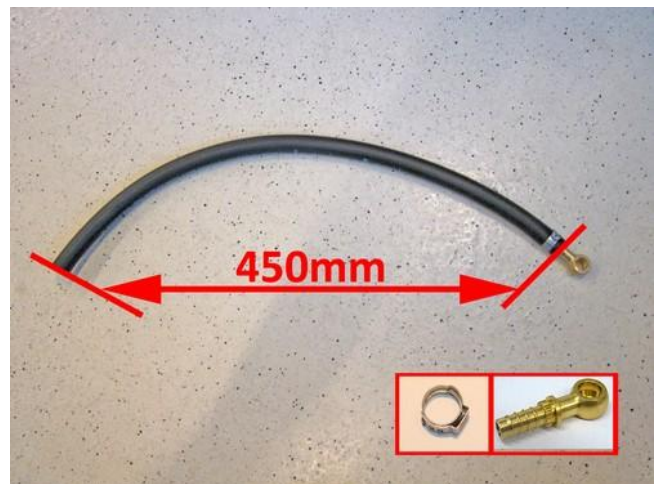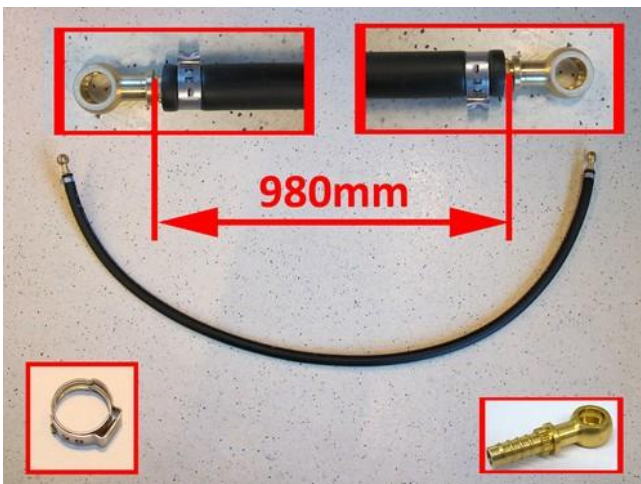



Mount the banjo eyes with clamps to the Special "Barricade" 8mm petrol hoses as shown on pictures.



Connection of the fuel hoses to the boost pump and low pressure fuel rail - 2



Connect the 2 fuel hoses to the boost pump with a double (filtered) banjo bolt.

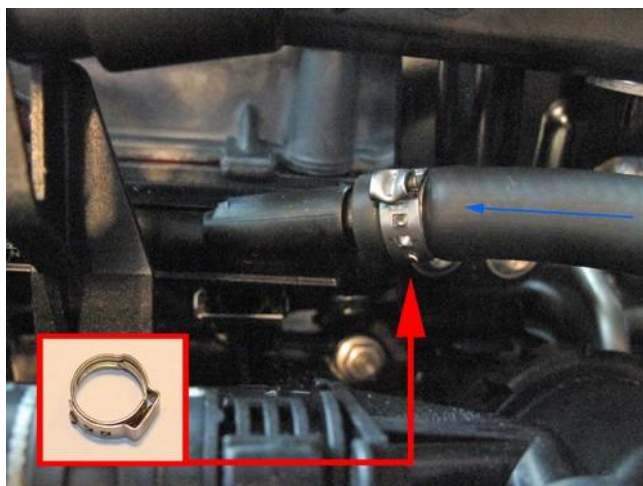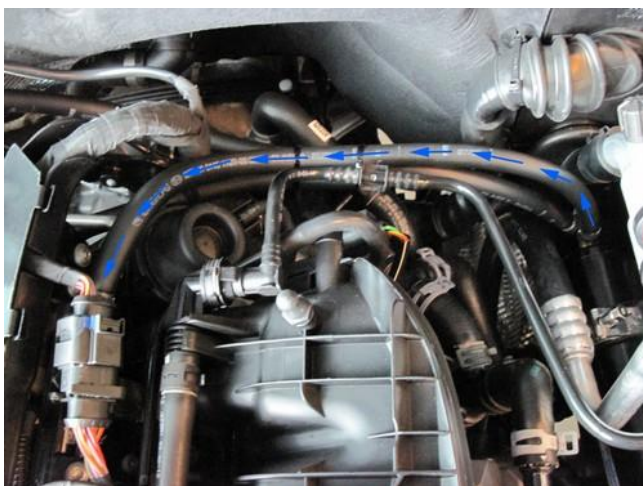



Connect short fuel hose to low pressure fuel rail with clamp 15,3mm.



Connect long fuel hose to the just fitted quick release adapter, petrol supply connection.




Fuel Supply Unit

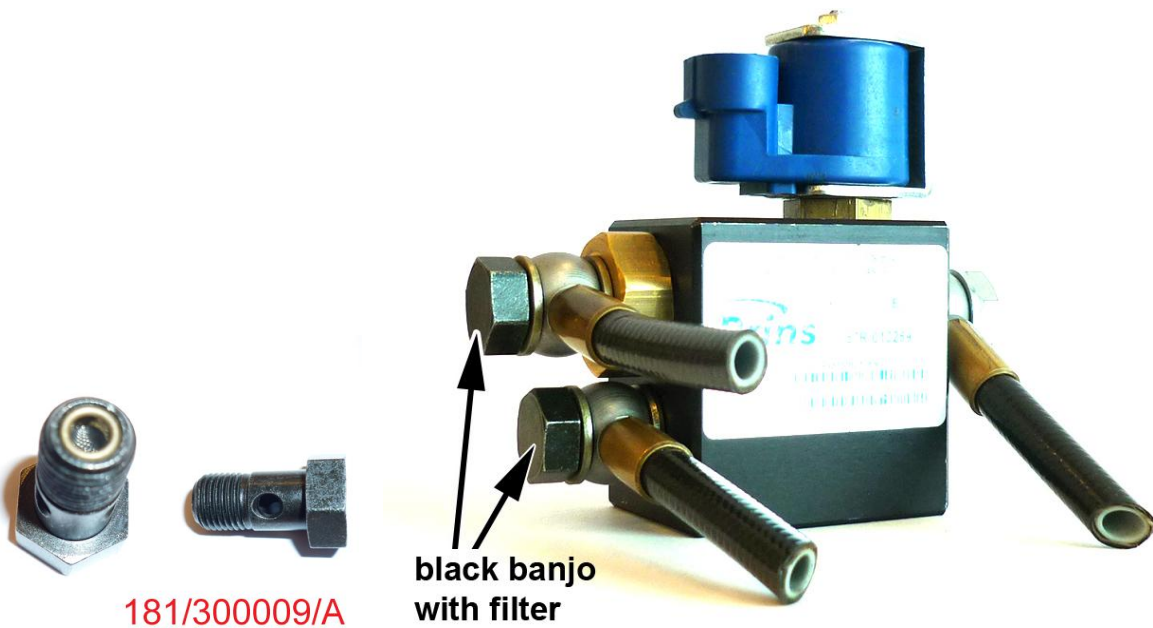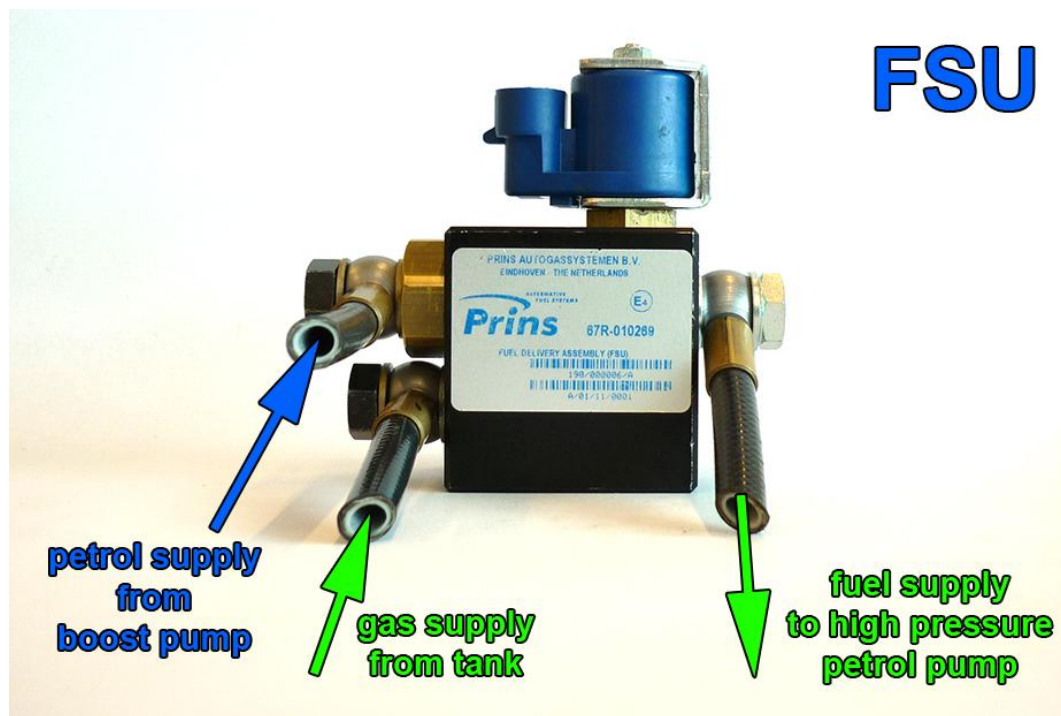



Black filtered banjo will only be used on inlet connections !





Fuel Return Unit

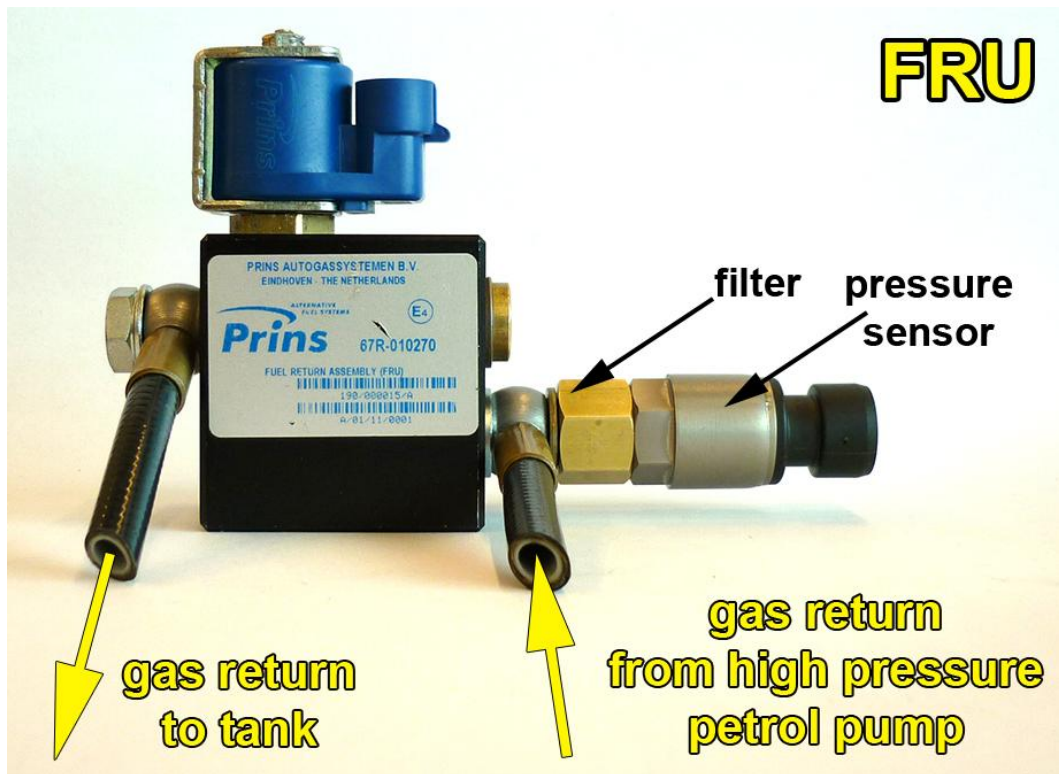

Mounting the FSU / FRU

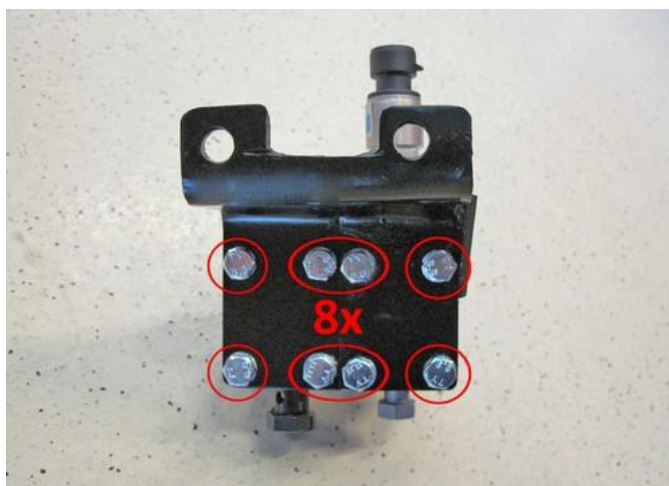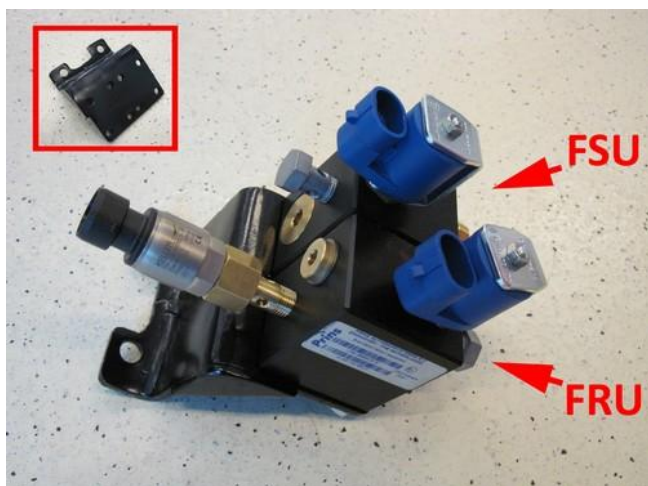

Mount the FSU & FRU to bracket with 8x M6x12 bolts and spring washers.

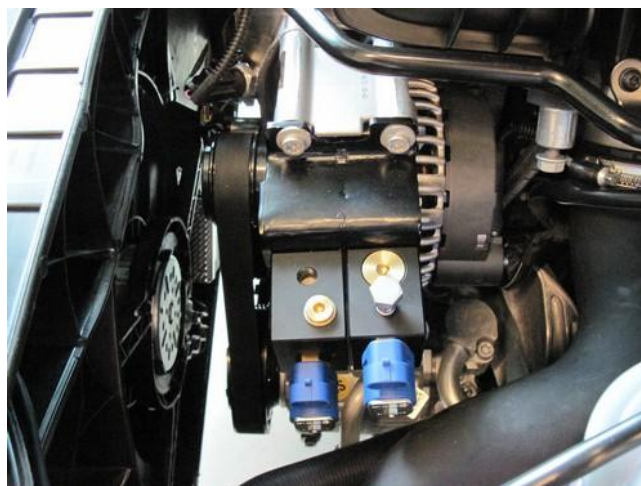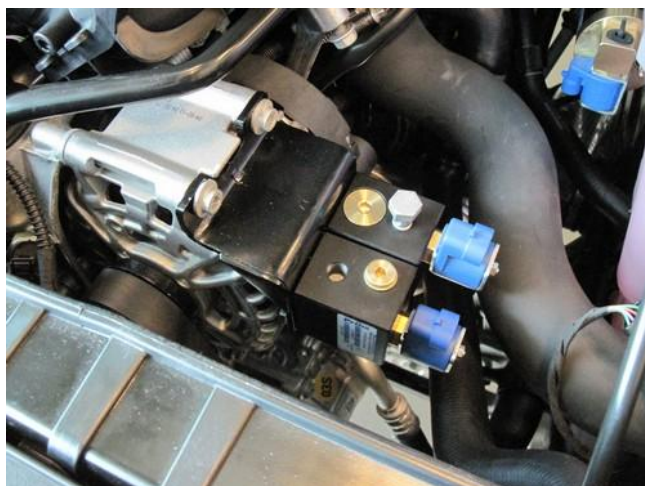


Lpg / petrol fuel lines


Hose	from	to	Length (cm)
8mm w/ banjo	Adapter original petrol hose	Petrol boost pump	98
8mm w/ banjo	Petrol boost pump inlet	Low pressure fuel rail	45
XD-5	Fuel supply unit	High pressure petrol pump	85
XD-3	Petrol boost pump	Fuel supply unit	35
XD-3	High pressure petrol pump	Fuel return unit	85





Install the fuel line using two bonded seal washers and banjo bolt :

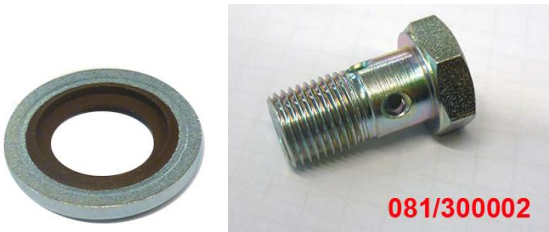

Filtered banjo: (FSU supply inlets / boost pump inlet : black filtered banjo) :

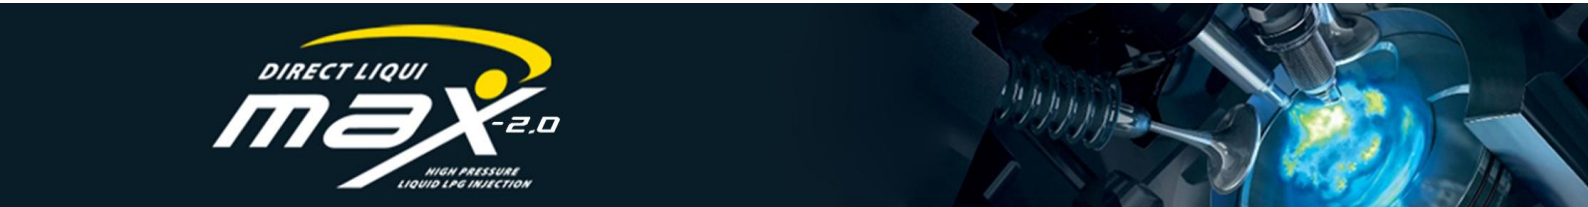

Hose routing - 1

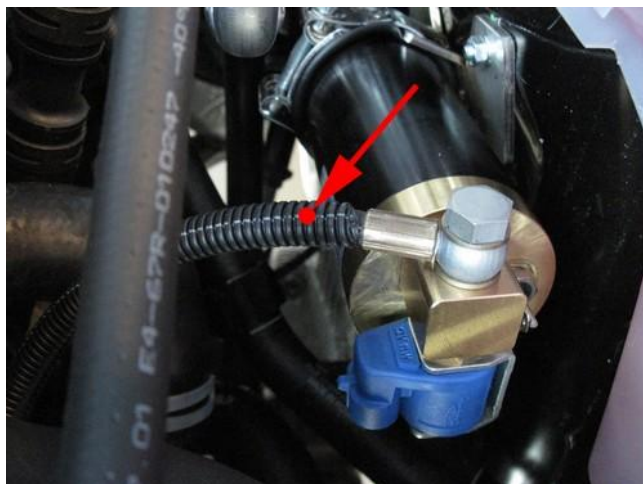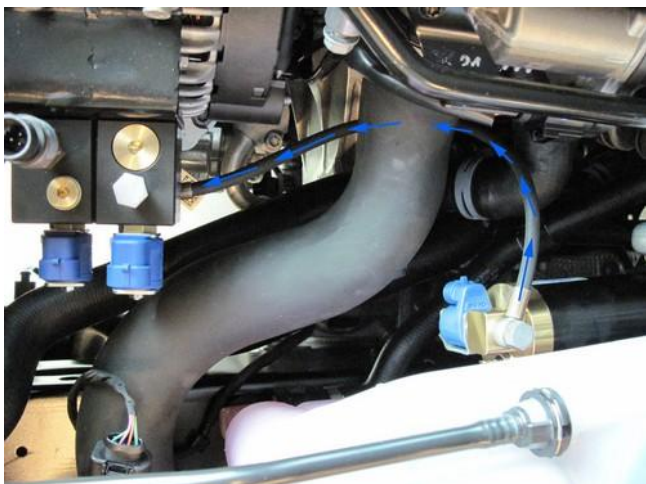


Connect XD-3 hose from boost pump to FSU. Mount protection tube onto hose.



Mount XD-5 hose with banjo bolt to FSU. Mount open end to HPP pump with a 12,8 mm clamp.



Hose routing - 2

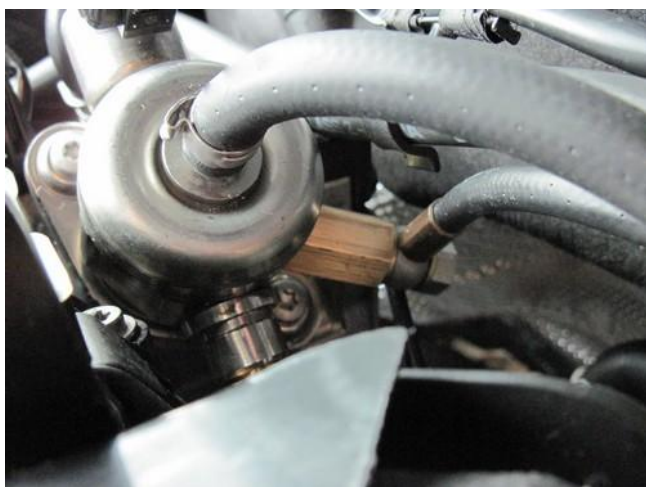

Mount XD-3 hose from HPP pump to FRU. Hose routing.




Mount protection tube around the hoses from FSU / FRU to HP pump.





Supply hose – Return hose – Tank wiring

Protect the supply- and return hose together with tank-wiring using the Ø16 split tube.
Mount the “hose assembly “ with clamps, with a maximum distance of 40cm.

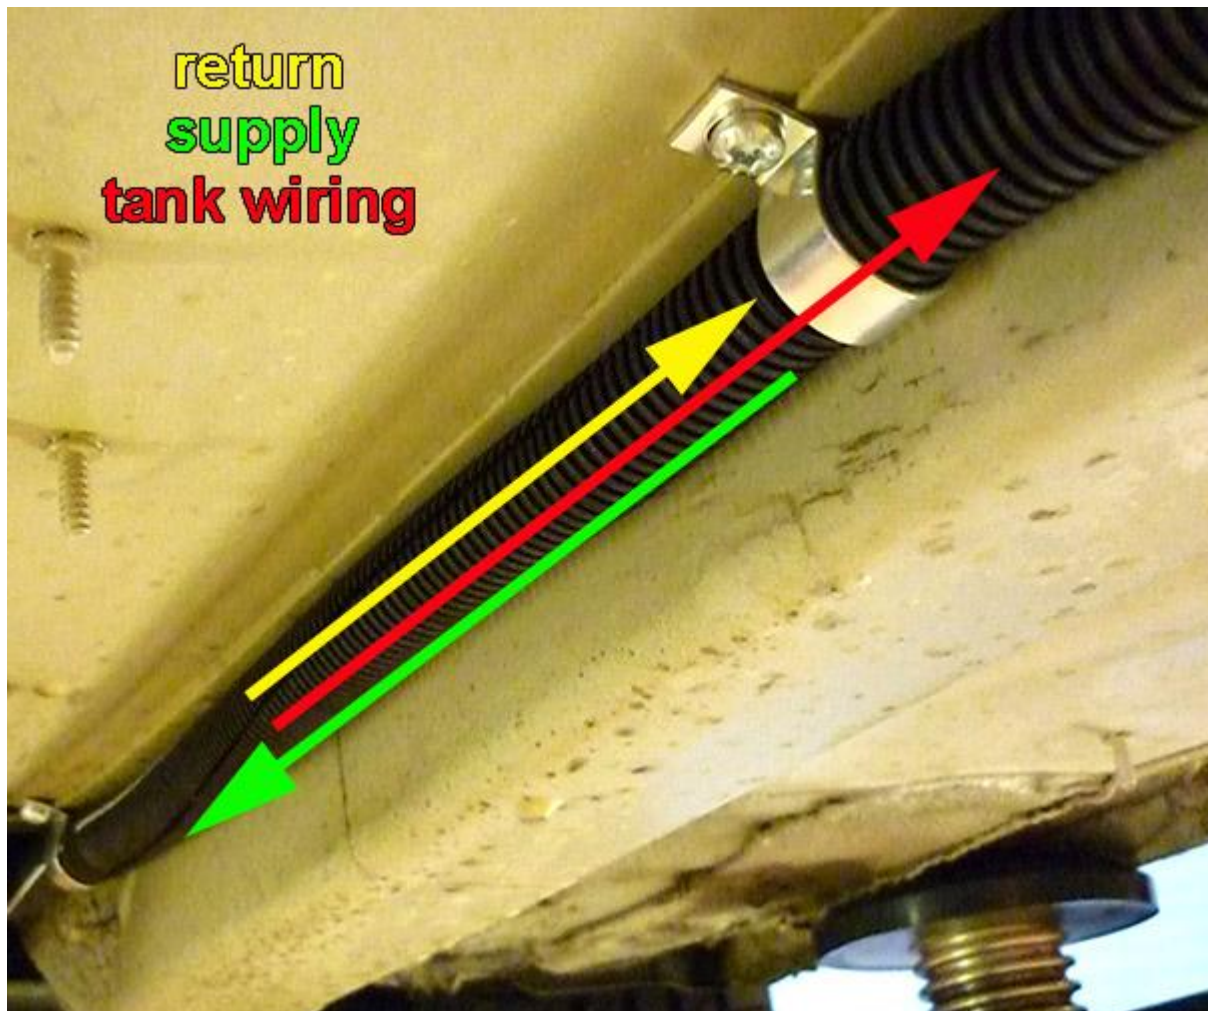



Hose / wiring routing to tank - 1

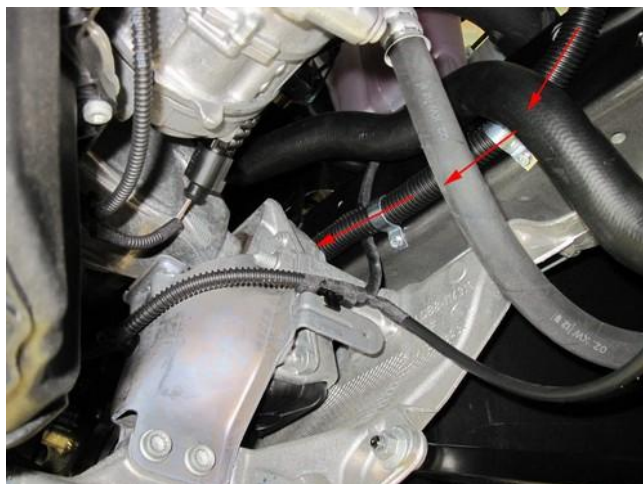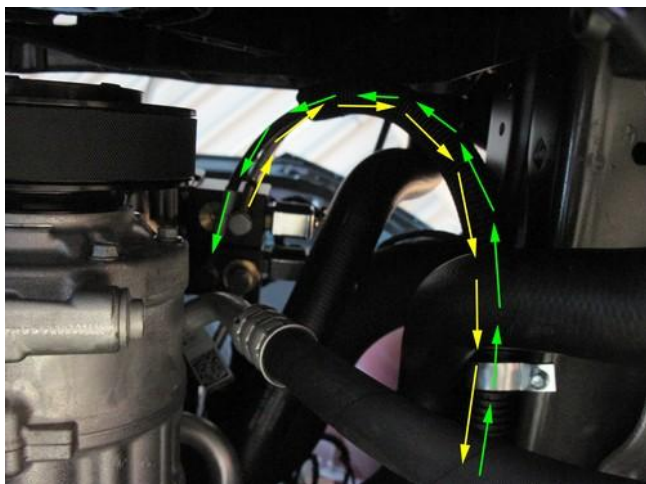

Mount hoses to FSU / FRU with protection around hoses.




At this point the wiring is bundled with the hoses

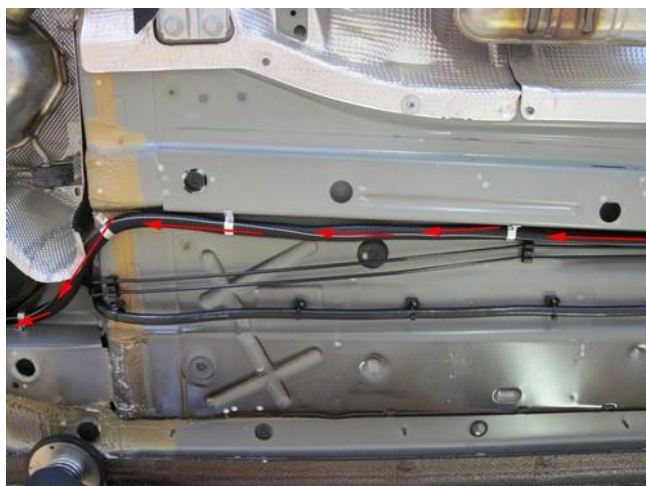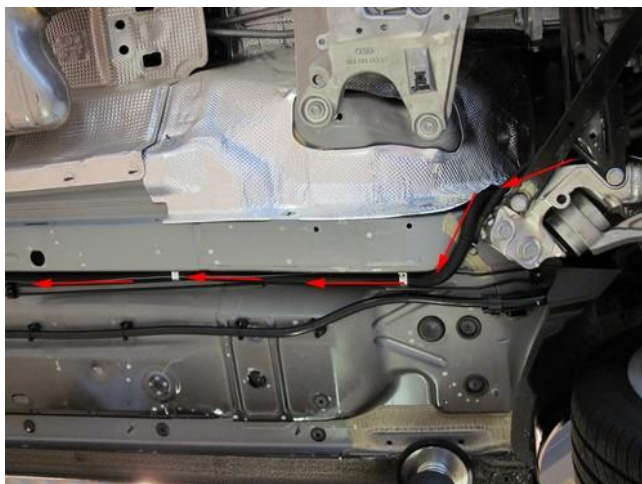


Hose / wiring routing to tank - 2




Mounting the AFC Audi A4

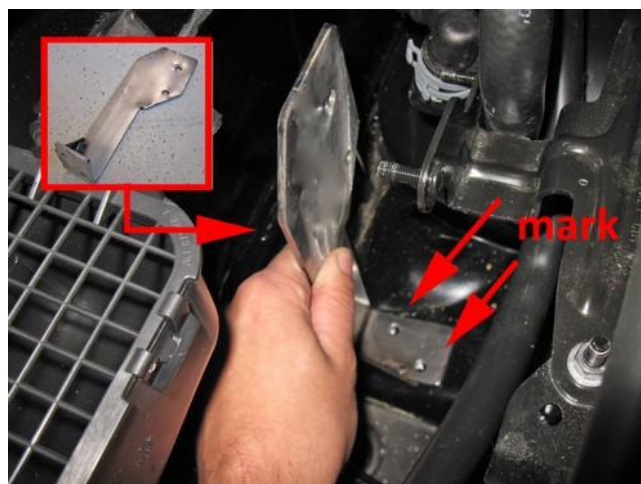

Remove wiper box cover. Use AFC bracket to mark holes for drilling.

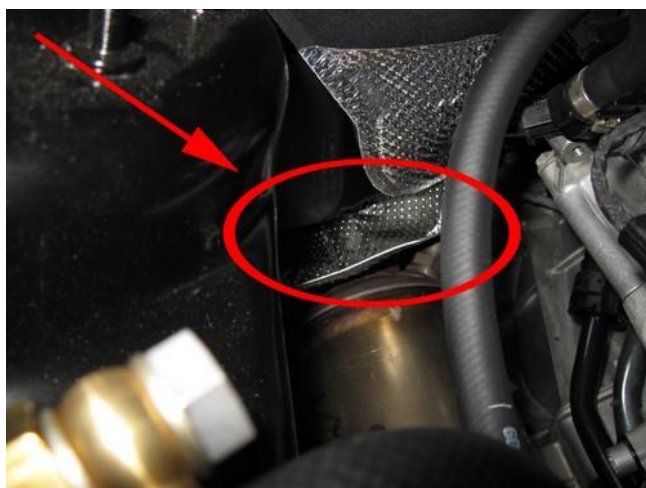


Lower heat shield before drilling. Drill holes $\varnothing 6,5\text{mm}$.

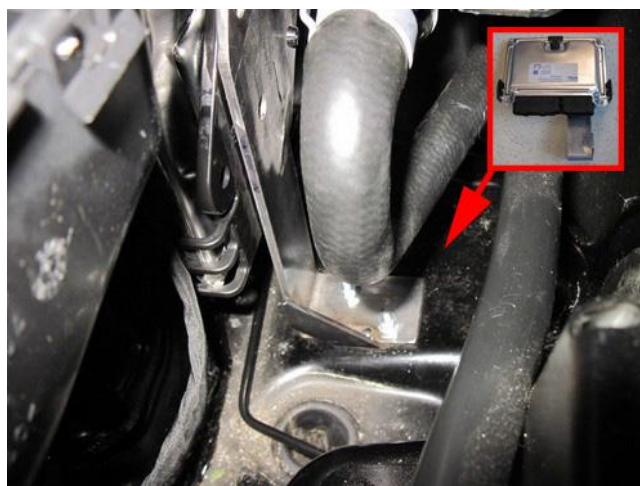


Mount plastic AFC clip to bracket with quick clips. Mount AFC bracket complete with AFC to plenum chamber with M6 bolts, (spring)washers and nuts. Mount back heat shield again.



Mounting the AFC Audi A5

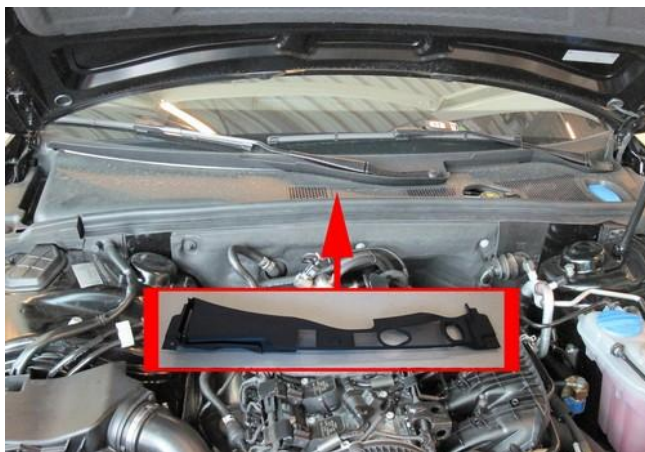

Remove wiper box cover. Use AFC bracket to mark holes for drilling.

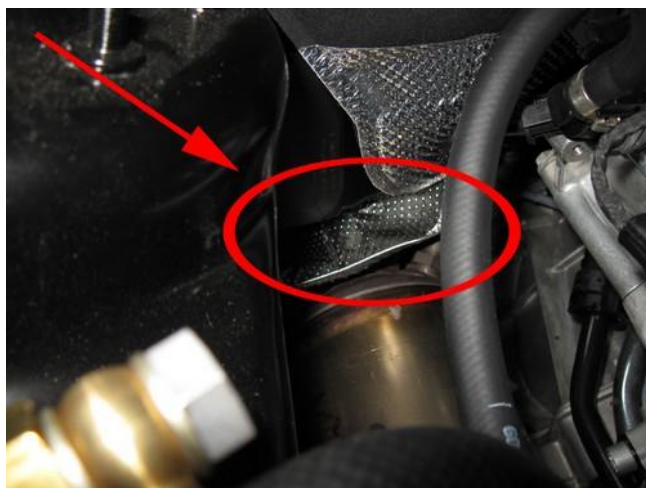



Lower heat shield before drilling. Drill holes Ø6,5mm.




Mount plastic AFC clip to bracket with quick clips. Mount AFC bracket complete with AFC to plenum chamber with M6 bolts, (spring) washers and nuts. Mount heat shield back.




Fuses / relay location Audi A4

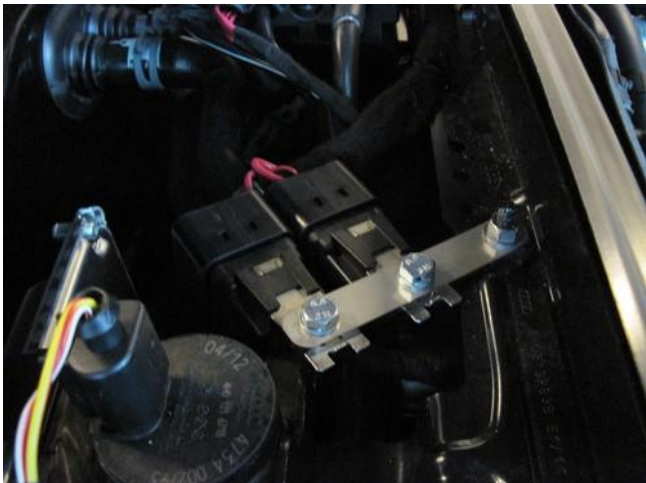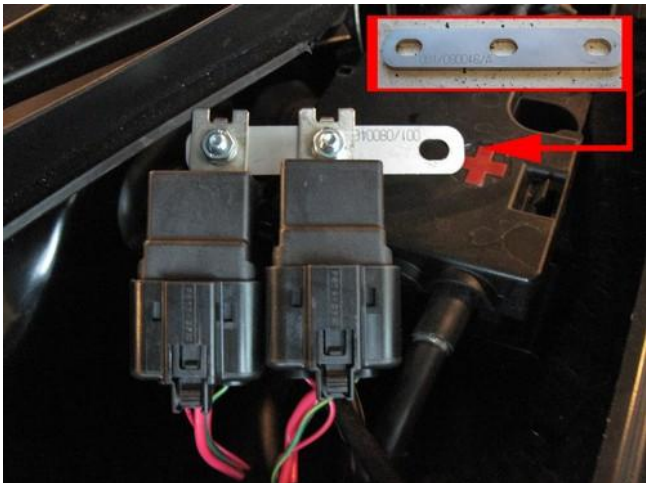

Mount relays to bracket with M6 bolts (spring)washers and nuts. Mount bracket in plenum chamber to threaded rod.

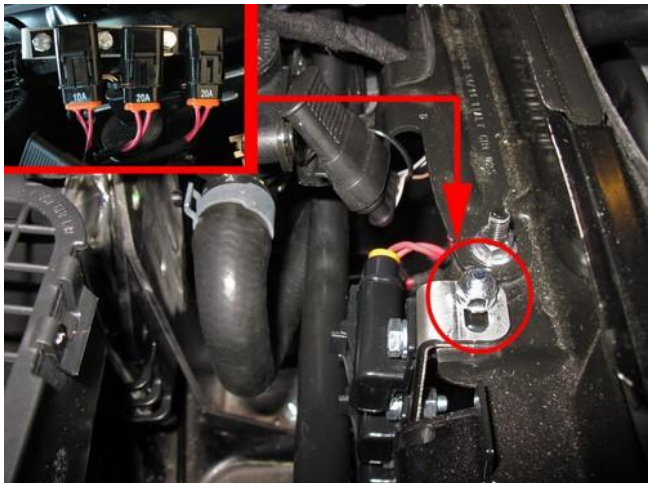


Mount fuse holders to bracket with M6 bolts & spring washers. Mount bracket to threaded rod.

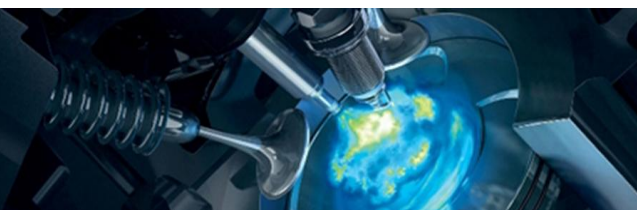

Fuses / relay location Audi A5



Mount relays onto threaded rods.

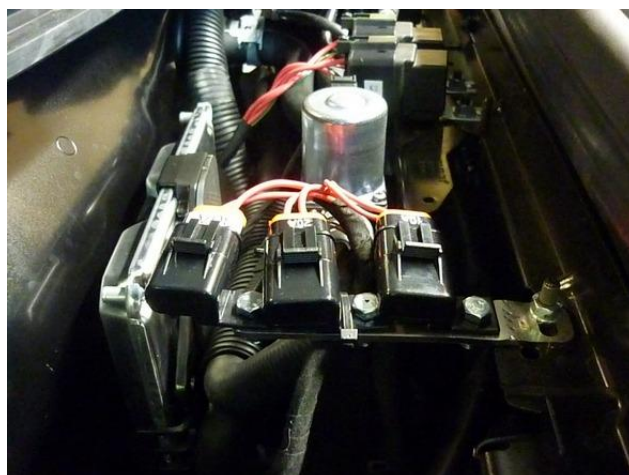

Straighten the fuse bracket.

Mount fuse holders onto bracket with M6 bolts & spring washers. Mount bracket to threaded rod.




Petrol ECU / wiring routing



Remove top end of washer fluid tank. Remove top cover of petrol ECU.



Petrol ECU wiring, remove for connections. Drill hole Ø20mm for transit wiring from plenum chambers to engine room.

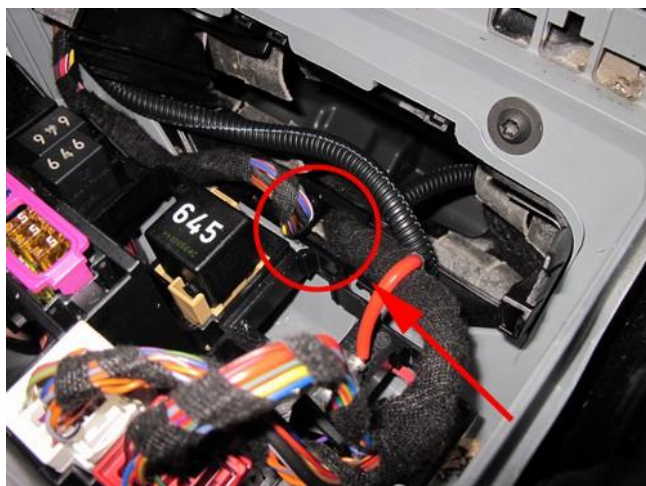

Wire transit from plenum chamber to inside of the car. The transit is below the petrol ECU. Wiring routing.



Mounting the fuel selection switch


See next page for optional switch position




Mark hole for drilling on the right side of the light switch.

Drill hole Ø8,3mm for mounting switch. Mount switch with the double sided adhesive tape.

Driver room

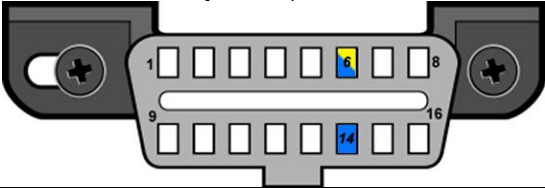


Wire number / code	Wire colour	Connection
3-pole micro connector		
66 Ground fuel switch	Brown	Connect the 3-pole connector to the Prins fuel selection switch.
3 +12V fuel switch	Red	
49 LIN fuel switch	Yellow	
51 CAN-High	Blue-yellow	EOBD connector pin 6 (for location of EOBD connector, see pictures)
70 CAN-Low	Blue	EOBD connector pin 14 (for location of EOBD connector, see pictures)
		
7 +12V IGNITION	Grey-white	See page 30

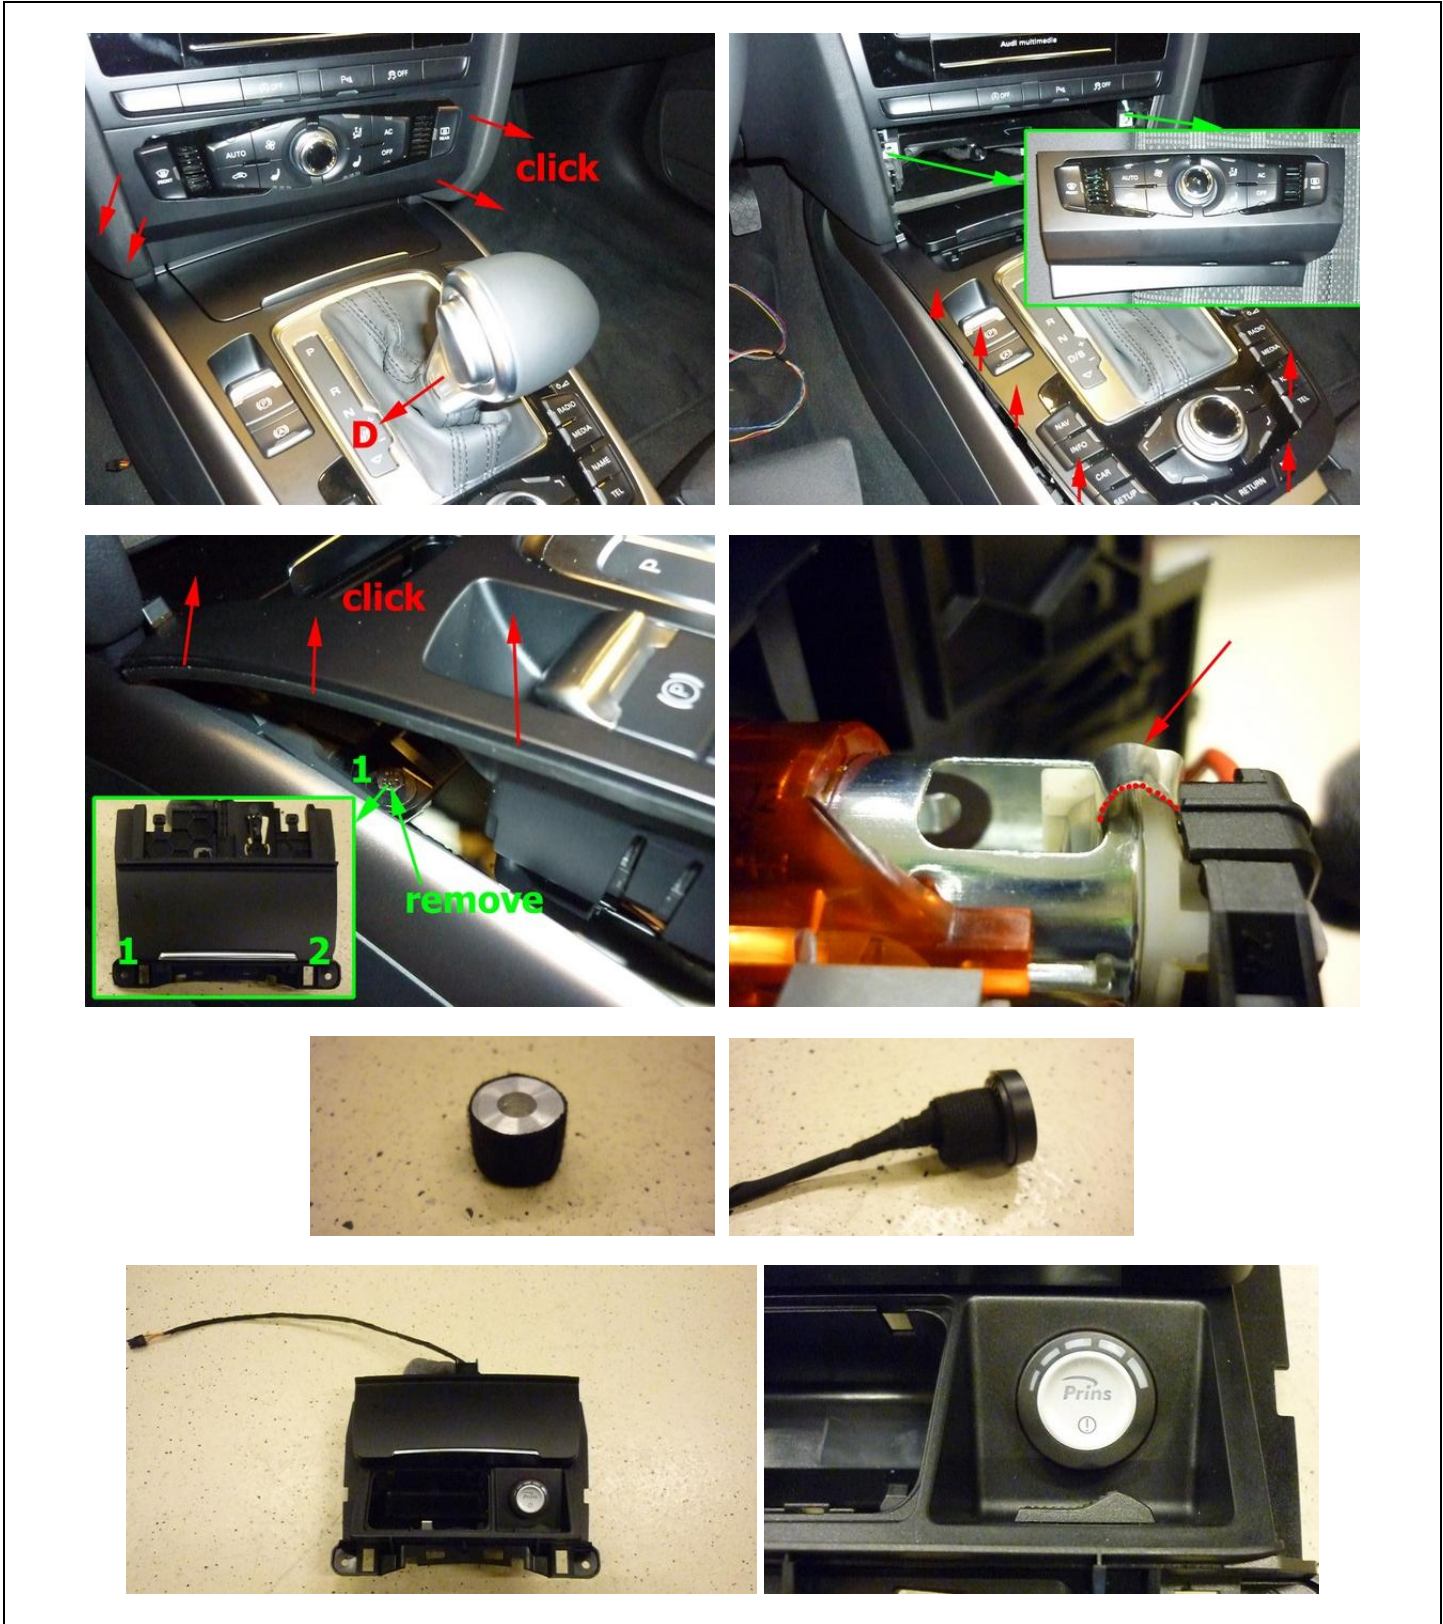Mounting the fuel selection switch **Optional**



Electrical connections

**Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.**

Wire number / code	Wire colour	Connection
1-32 MAIN GND ecu MAIN GROUND SENSE MAIN GND pump driver MAIN GND boost pump	Brown	Connect to the '-' of the battery (-31) ; use ring terminals. Wire location: On left suspension strut, original grounding point 
4 – 13 – 44 +12V BATT sense +12V BATT fused +12V BATT boost pump +12V BATT pump driver	Red	Connect to the '+' of the battery (+30) ; Use ring terminals. Do not place the fuse in the holder before having completed the installation of the lpg system. Wire location: In the middle of the plenum chamber at +Batt point. 
7 +12V IGNITION <i>inside</i>	Grey-white	Make a connection to ignition + / contact + (+15). Do not place the fuse in the holder before having completed the installation of the lpg system. Wire colour : black-blue Wire location : back side fuse box, driver side, fuse 15 



Electrical connections

**Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.**

Wire number / code	Wire colour	Connection
18 Analog 1 25 Simulation 1	Blue-red Green-grey	High pressure petrol sensor signal interruption Sensor side. ECU side. Wire colour : black-grey Wire location : T105 / 49 (petrol ECU connector)
121 Wake-up	Red-grey	High petrol pressure sensor 5V supply Wire colour : green-yellow Wire location : T105 / 35 (petrol ECU connector)
19 Analog 4	Blue-white	High pressure petrol sensor ground Wire colour : brown-green Wire location : T105 / 33 (petrol ECU connector)
17 Analog 2 10 Simulation 2	Blue-black Green-black	Low pressure petrol sensor signal interruption Sensor side. ECU side. Wire colour : brown Wire location : T105 / 50 (petrol ECU connector)
27 +5V sensor 37 C ground 20 Analog 3 MAP Cut-off connector	Red:insulate Brown:insulate Blue	For measuring the inlet manifold pressure from the engine MAP sensor. Wire colour : yellow Wire location : T105 / 52 (petrol ECU connector)
8 RPM	Purple-white	For measuring the engine speed signal. Wire colour : brown Wire location : T105/70 (petrol ECU connector)
15 T-ect	Grey	For measuring the engine coolant temperature. Wire colour : black-blue Wire location : T105 / 40 (petrol ECU connector)
6 Lambda1 WB	Orange	Insulate
42 Lambda2 WB 10KΩ	Orange-white	insulate
23 Digital Simulation	Green-red	Insulate
115 Digital input 4	Yellow-red	Insulate
117 Digital input 3	Yellow-black	Insulate
119 Digital input 2	Yellow-grey	insulate
97 Digital input 5	Yellow-orange	insulate
113 Digital input 6	Yellow-purple	insulate



Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Engine room

Wire number / code	Wire colour	Connection
<i>3-pole connector</i>		Connect the 3-pole connector to the Psys sensor positioned into the Fuel Return Unit.
35 C Ground pin A	Brown	Sensor wire pin A
9 +5V sensor pin B	Red	Sensor wire pin B
16 Psys pin C	Green	Sensor wire pin C
14 T-LPG	Grey	Not used, insulate.
<i>2-pole connector Boost Pump</i>		
106 + Lock-off Boost Pump	Red	Connect the 2-pole connector to the lock-off valve of the Boost Pump.
98 Ground lock-off	White-yellow	
<i>2-pole connector FSU</i>		
108 + Lock-off FSU	Red	Connect the 2-pole connector to the lock-off valve of the Fuel Supply Unit
100 Ground lock off	Pink-yellow	
<i>2-pole connector FRU</i>		
90 + Lock-off FRU	Red	Connect the 2-pole connector to the lock-off valve of the Fuel Return Unit
82 Ground lock off	Blue-yellow	
<i>4-pole diagnose connector</i>		Diagnose connector for service / diagnosis
46 Service TxD	Grey	Connector pin 1
65 Service RxD	Grey	Connector pin 2
68 C ground	Brown	Connector pin 4
<i>Boost pump relay</i>		
107 + relay boost pump	Red	Pin 86 of the boost pump relay
99 GND relay boost pump	Green-yellow	Pin 85 of the boost pump relay
+12V fused BATT	Red	Pin 30 of the boost pump relay
+12V Boost pump	Red	Pin 87 of the boost pump relay
<i>Wiring tank pump driver relay</i>		
2 + driver relay	Red	Pin 86 of the driver relay
26 Ground driver relay	Green-yellow	Pin 85 of the driver relay
+12V BATT fused	Red 2.5mm2	Pin 30 of the driver relay
+12V driver	Red 2.5mm2	Pin 87 of the driver relay




Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Lpg tank housing

Wire number / code	Wire colour	Connection
3-pole tank level connector 40 Ground tank gauge 12 Tank level in 11 + tank level supply	Brown Blue Red	Connect the 3-pole connector to the tank level sensor.
1. 2-pole connector tank lock-off	Green-yellow Brown	From tank pump driver From tank pump driver
2. 3-pole connector tank pump	Red 2.5mm ² Brown 2.5mm ²	From tank pump driver From tank pump driver
3. 2-pole connector driver	Red 2.5mm ² Brown 2.5mm ²	From tank pump relay 87 From main ground
4. 2-pole connector driver	Green Grey	From AFC pin 22 pwm From AFC pin 64 diagnose

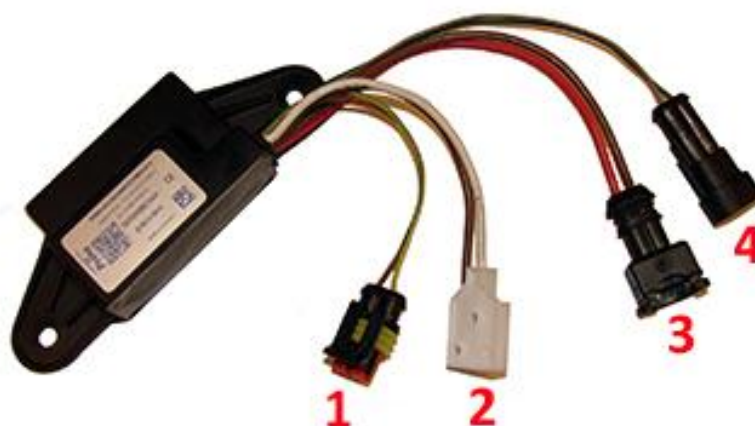

Checklist after installation

1. Install the system fuses.
Turn on ignition.
Connect the Prins interface wire and run the Prins diagnosis program.
When working on the car, beware of moving and rotating parts in the engine compartment (even when the engine is not running !!).
2. When commissioning the LPG system, you must activate the AFC with the diagnosis software.
3. Check whether the program in the AFC matches with the car (dedicated engine set):
See "Identification" in the diagnosis program.
4. Check all components and connections for any LPG leakage, use a LPG leak detector device or a fluid detection like soap. Also check for petrol leakage. Make sure the solenoid valves are in open position.
No evidence of leakage is permitted.
Caution for moving and rotating parts in the engine compartment !
5. Use the diagnosis software to check again all input and output signals.
6. Check the system for error codes and solve these, if required.
Check the petrol MMS for EOBD error codes.
Place the protection connector back on the diagnose connector.
7. Make a test drive and check the cars drivability on LPG and petrol.

