

ALTERNATIVE
FUEL SYSTEMS

Prins

Quality, innovation and customer care, it's in our nature



Installation manual Dedicated PART 2/2



MANUFACTURER	Audi
TYPE	A6
ENGINE DISPLACEMENT	2800
NUMBER OF VALVES	24
ENGINE CODE / NUMBER	CHVA
VEHICLE CATEGORIES	M
TRANSMISSION	AT
VERSION	Direct LiquiMax-2.1
PETROL ECU MANUFACTURER / CODE	Simos 8.60
HIGH PRESSURE PETROL PUMP	Hitachi Gen-3
HIGH PRESSURE PETROL INJECTOR	Hitachi JSD7-41 06E-906036C
MODEL YEAR:	2013
SYSTEM APPROVAL NUMBER (R115)	E4-115R-000010 / DLM-LPG 03
LOCATION R115 SYSTEM STICKER	right side, centre door post
ENGINE SET NUMBER	366/070020/A
MANUAL NUMBER	076/2613200
DATE	2013-10-08

Copyright © Prins Autogassystemen B.V. 2013

Version 2013-09-28 D



TABLE OF CONTENTS

General instructions	2
Required equipment / tools / materials for installing a complete system	3
Vehicle check	3
Tightening moments.....	4
Direct LiquiMax-2.1	5
Direct LiquiMax-2.1 diagram	6
Direct LiquiMax parts / approval numbers.....	7
DLM-2.1 component location overview	8
Preparation.....	9
Fuel Supply Unit / Fuel Return Unit	10
Mounting the Fuel Units	11
High pressure petrol pump installation	12
High pressure petrol pump Supply hose	13
Units LPG return and supply hose	14
High pressure petrol pump LPG return	15
Boost pump	16
Connection of the fuel hose to the boost pump.....	17
Lpg / petrol fuel lines	18
Hose routing Supply and Return to tank	19
Mounting the AFC	20
Mounting the fuse / relay box	21
Grommet	22
Wiring	23
Wiring	24
Mounting the fuel selection switch.....	25
Electrical connections.....	26
Electrical connections.....	27
Electrical connections, not used wiring	28
Electrical connections.....	29
Electrical connections.....	30
Electrical connections.....	31
Checklist after installation.....	32

FOR EXPLANATION AND CIRCUIT DIAGRAMS SEE : INSTALLATION MANUAL GENERAL PART 1 / 2



General instructions

- The installation of the system shall be done in accordance with the installation manual provided by Prins Autogassystemen.
- This manual is based on Dutch regulations, always install the system in accordance to the local regulations.
- For an optimal functioning of the Direct LiquiMax-2.0 system, maintain a clean and organized work environment during installation and maintenance to prevent pollution of the LPG components.
- Always download the “general manual 1/2 “ from our website for basic instructions and diagrams.
- Always **disconnect the battery** when installing / servicing the LPG system. Make sure the ignition key is outside the car.
Be aware of central door locking, radio / telephone memory code, alarm system.
- Wear safety goggles when working on the petrol filled system / connections (pressurized petrol)
- Do not place the main fuse into the fuse holder before having completed the installation of the system.
- The AFC has to be activated by means of the Prins diagnosis software.
- Never disconnect the AFC connector, unless you have removed the main fuse.
- When installing the wiring harness, ensure that it does not run near any of the ignition components.

Solder and insulate all electrical connections.

The wires in the loom are provided with numbers and text. The text on the wire explains the function of the wire.

The wire harness is not model specific, therefore it may be necessary to adjust the length of the wires.

Ensure maximum care is taken when connecting wiring.

Make professional joints using solder and shrink sleeve. Do not stretch the wiring harness.

- No component of the LPG-system shall be located within 100 mm of the exhaust or similar heat source, unless such components are adequately shielded against heat.
- If holes have to be drilled (wear safety glasses) for installing brackets, etc., the drilled holes must always be treated with an anti-corrosion agent, after the chips have been removed (especially when mounting a exterior filler into body work).
- After having completed the installation, check the whole system for LPG leakage; use a LPG leak detection device. Also check for leak of engine coolant, petrol and air.
- Fitting and maintenance is only allowed by Prins Autogassystemen selected LPG engineers.
- Failure to follow the instructions in this manual can result in a poor or non-working LPG installation or a dangerous situation.
- For maintenance instructions see owner manual.
- Prins Autogassystemen is not responsible for any damages to people or objects as a result of changes to Prins products.
- Check our website regularly for diagrams, certificates, updates, info-bulletins and product information.

Register (warranty card) the system on the Prins warranty portal .



Required equipment / tools / materials for installing a complete system

- Complete workshop toolbox (wrenches, screwdrivers, cutters, pliers, ratchet, sockets)
- Car lift
- Portable computer : operating on Windows 98, W2000 or XP.
- Internal memory : 16 Mb or more
- Memory HD space : 5MB
- Screen : 256 colours, advise colours 16 bits or more
- Com port : 1 free COM port 1 or COM port 2 with a 9 or 25 pins connector
- Vehicle fuel system scan tool or OBD scan tool Prins (part nr. 099/99928)
- Exhaust gas analyser
- Multimeter
- Oscilloscope
- Prins diagnostic software
- Prins serial interface
- Torque wrench (5-50Nm)
- Torque wrench (200-250Nm)
- Portable light
- Assortment drill bits 4 to 12 mm
- Assortment cutters (ø 20, 30, 50, 70 mm)
- Portable drill or pneumatic drill
- Thread cutting device (male M6x1, M8x1, M10x1)
- Air gun
- Vacuum cleaner
- Safety goggles
- Hot air gun
- Soldering iron, soldering tin
- Wire-stripping pliers
- Adhesive tape
- Adhesive sealant
- Thread locking compound
- Anti-corrosion agent / black body coating
- Gas leak detection device or foam leak spray
- Shrink sleeves
- Engine coolant

Vehicle check

- Check the vehicle drivability on petrol
- Check the fuel system for error codes (scan tool)
- Check if the catalytic converter is in good condition (exhaust gas analyzer)
- Check the condition of the ignition system (spark plugs, cables, coil)

Tightening moments

	Nm	Spanner mm
M 4 x 0,7	3.3	7
M 5 x 0,8	6.5	8
M 6 x 1,0	11.3	10
M 7 x 1,0	14.5	11
M 8 x 1	24.5	13
M 8 x 1,25	27.3	13
M 10 x 1	52	15-16-17
M 10 x 1,5	54	15-16-17
(filtered) Banjo bolt	10	14
Supply line connection	15	13
Fuel module Allen bolts	20	7
Filler hose connection	50	22
Boost pump clamp	7	10


EXPLANATION OF SYMBOLS :




= IMPORTANT, CAUTION




= WEAR SAFETY GOGGLES

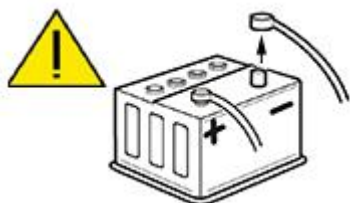

Direct LiquiMax-2.1

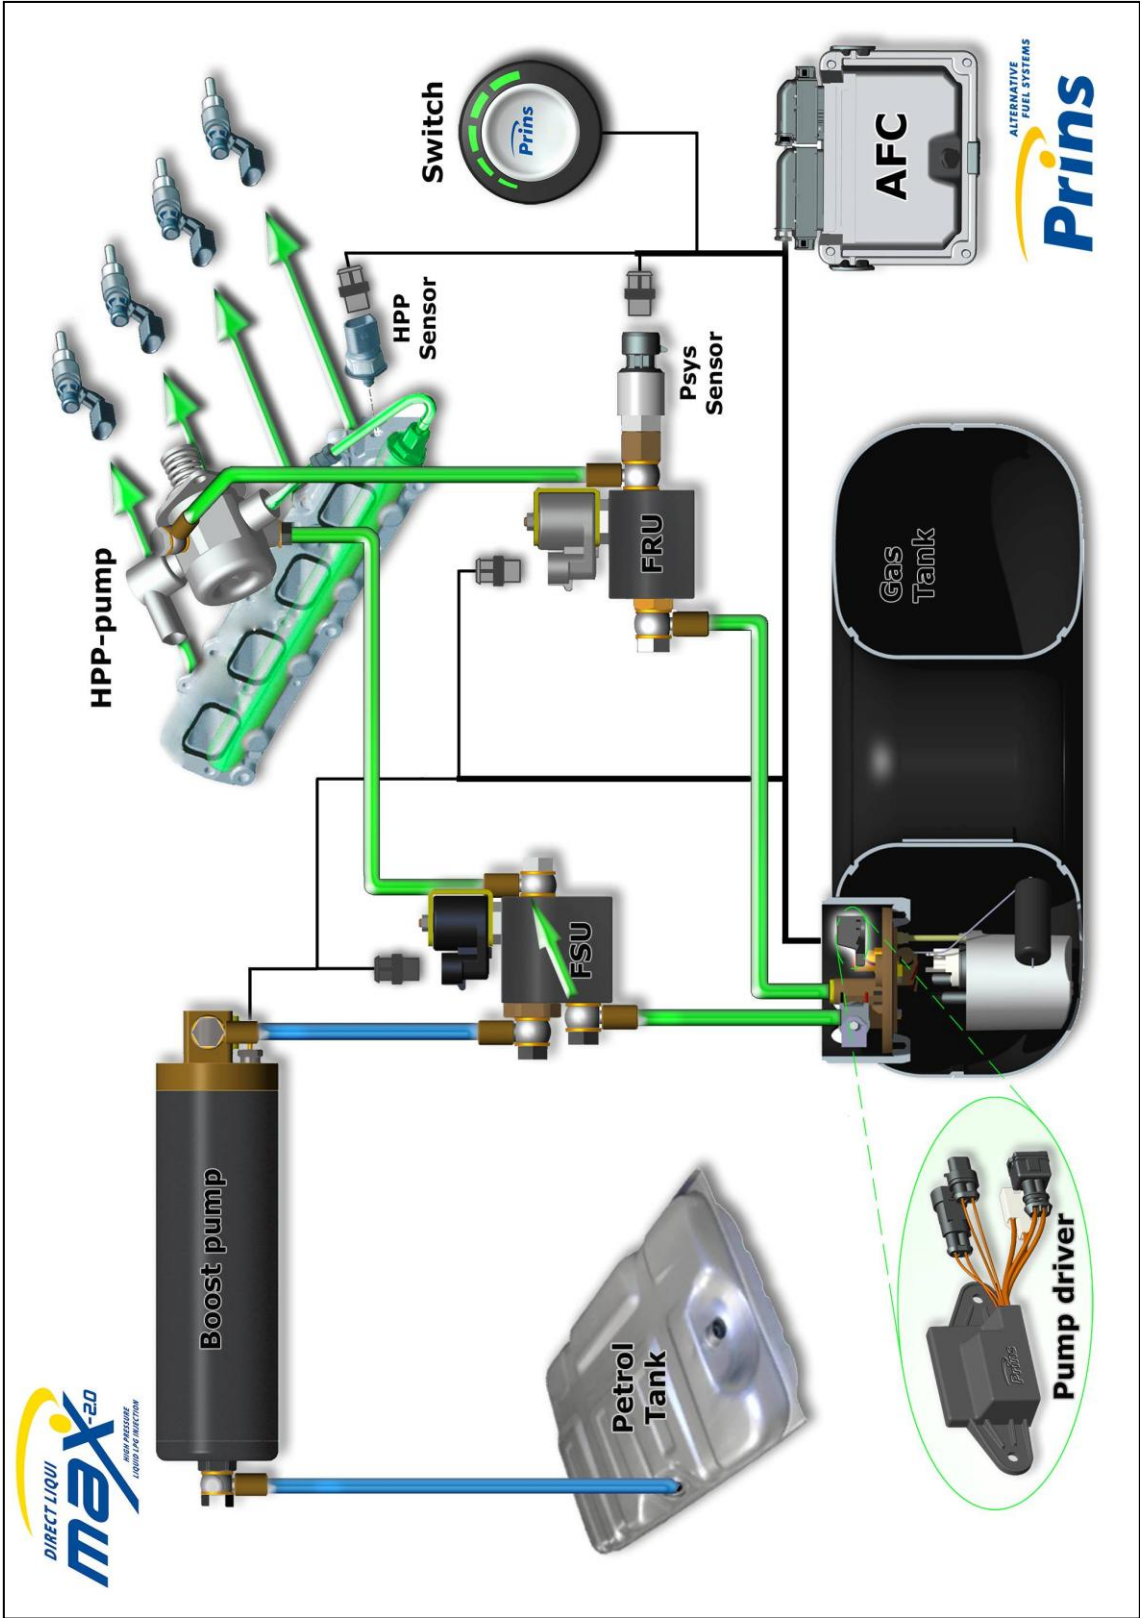


Direct LiquiMax-2.1 diagram

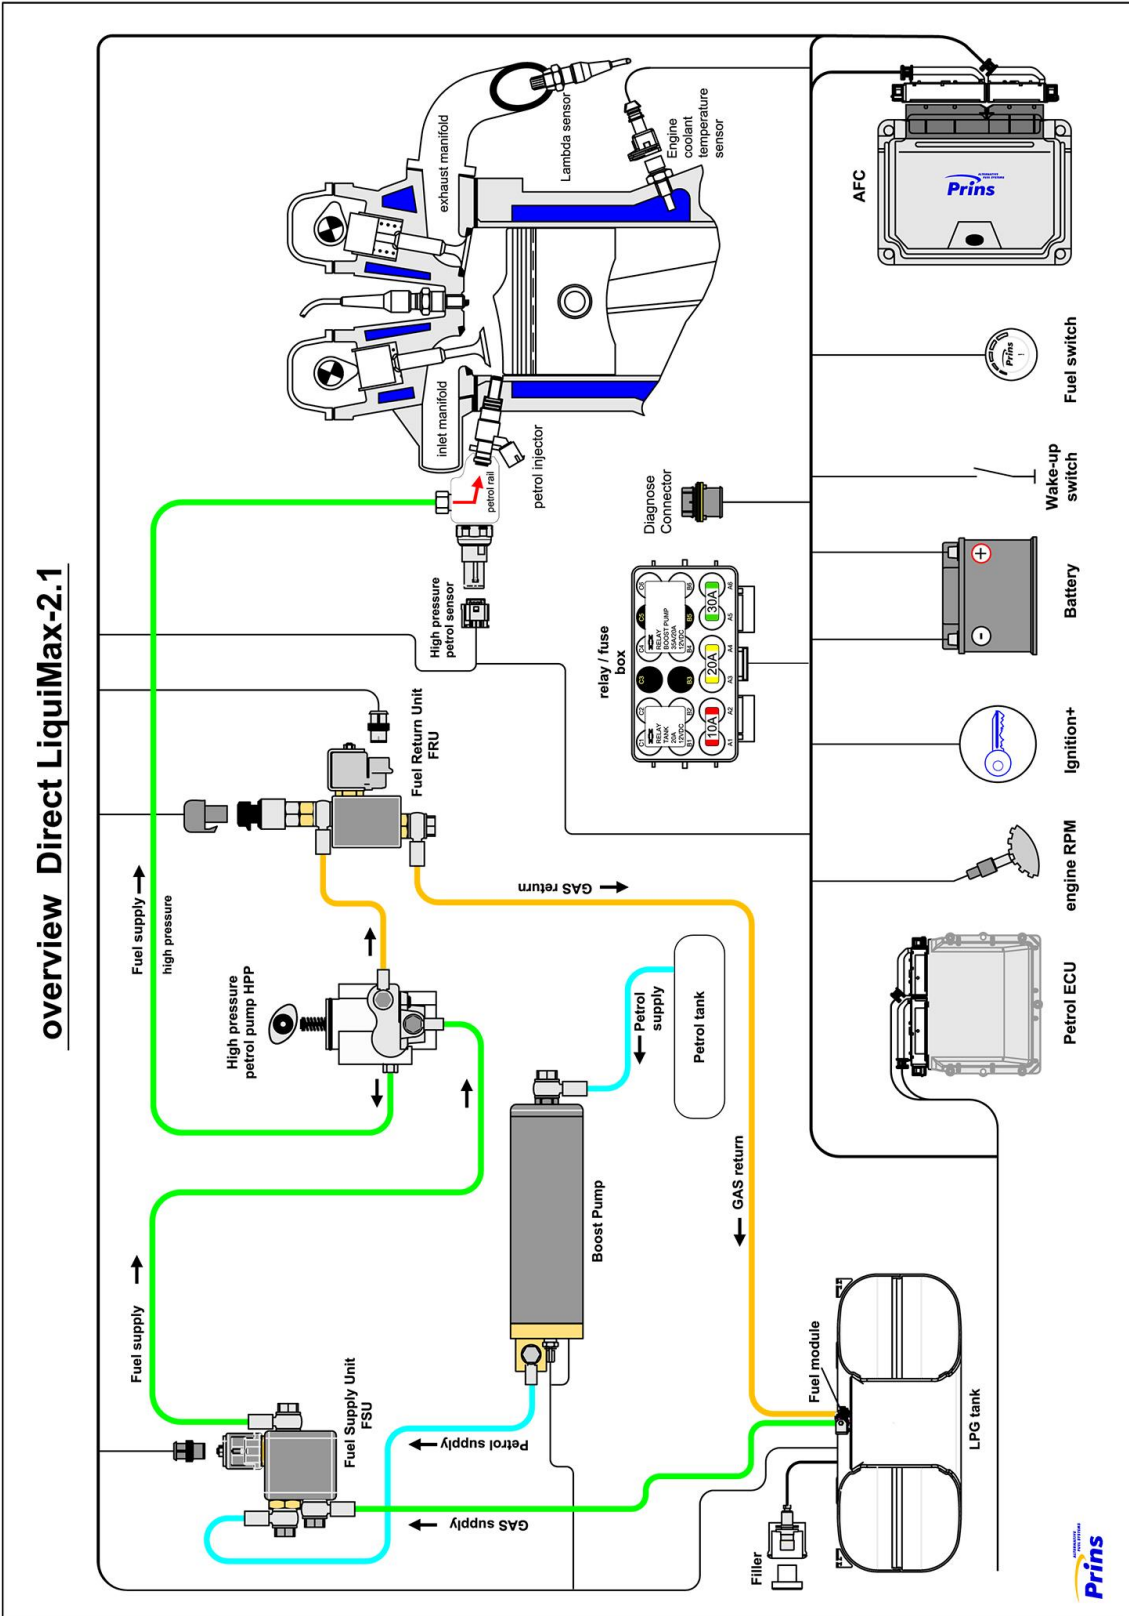

Direct LiquiMax parts / approval numbers

 <p>1st generation</p>  <p>2nd generation</p>	 <p>1st generation</p>  <p>2nd generation</p>
Fuel Supply Unit : E4-67R-010269	Fuel Return Unit : E4-67R-010270 Pressure Sensor : E4-67R-010051
	
Boost pump	High Pressure Pump : E4-67R-010266 High Pressure Rail : E4-67R-010267 High Pressure Injectors : E4-67R-010309
	 <p>XD-3 LPG</p>  <p>XD-4 LPG</p>
Prins AFC: E4-67R-010098 E4-10R-030507	Fuel lines series XD : E4-67R-010247 XD3 E4-67R-010247 XD4

DLM-2.1 component location overview


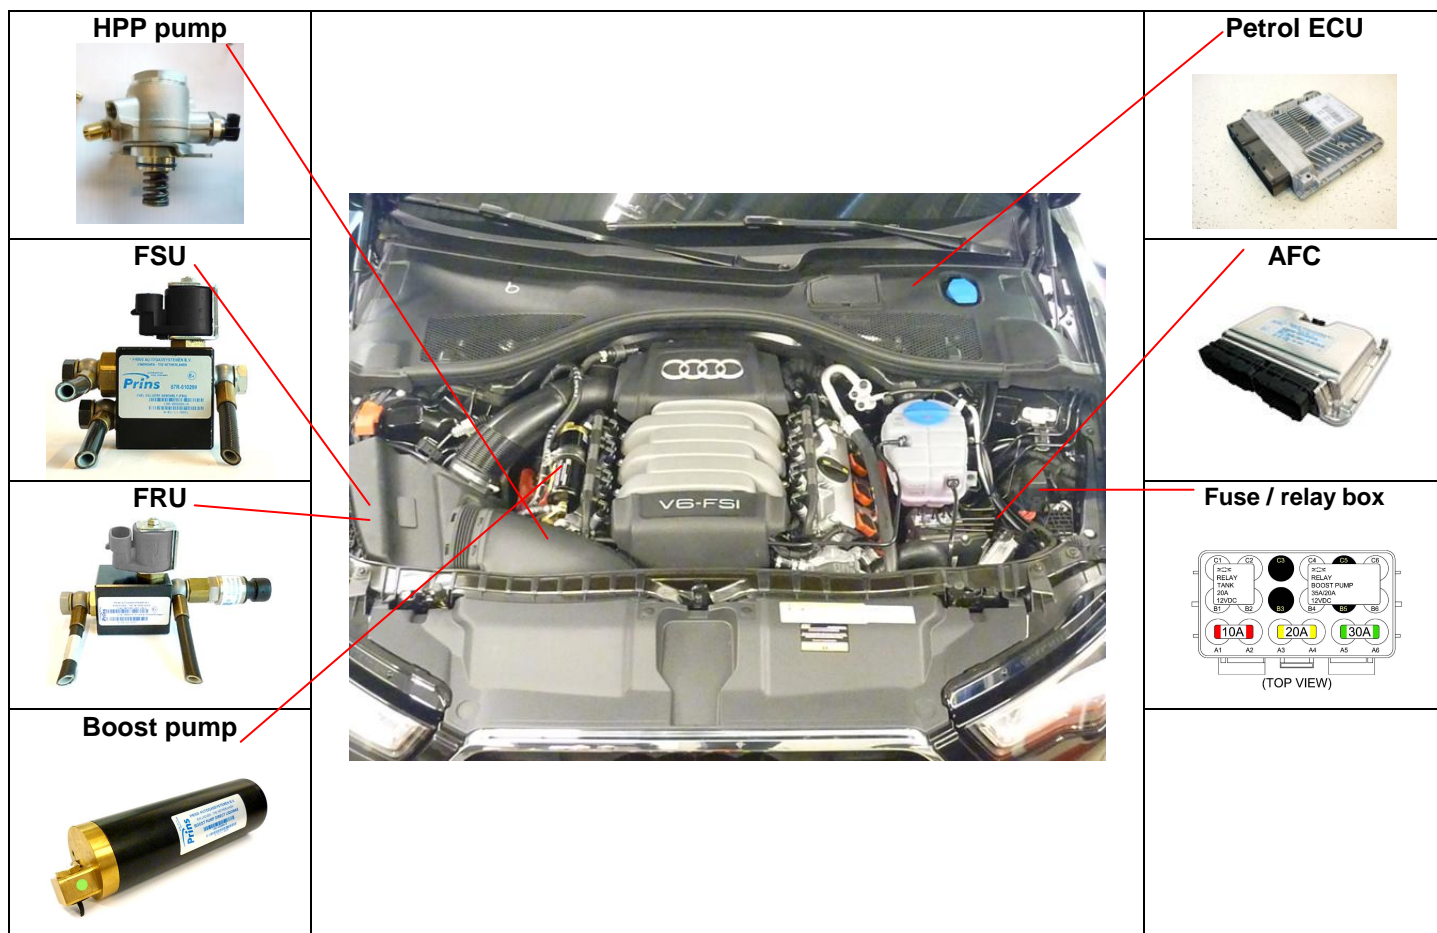


R115 approval sticker :
Right side centre door post

Preparation



Remove top cover and air intake



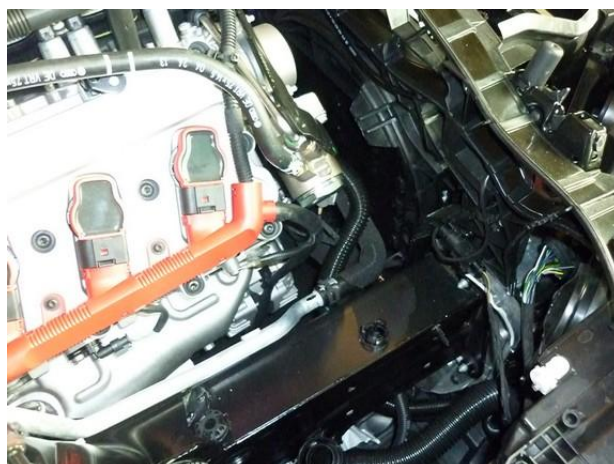
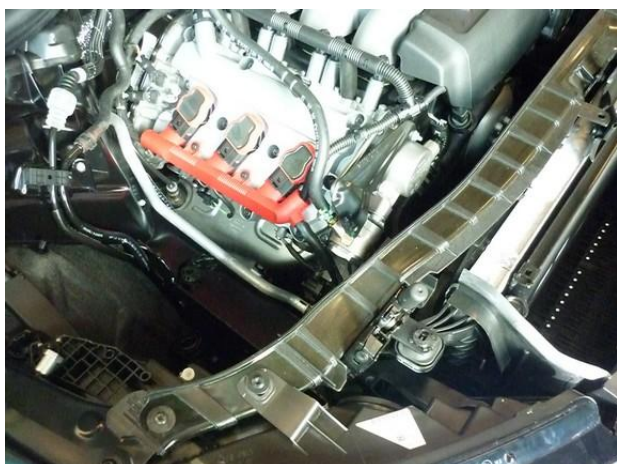


Remove the complete air filter box



Remove protection shield from HPP pump

Fuel Supply Unit / Fuel Return Unit

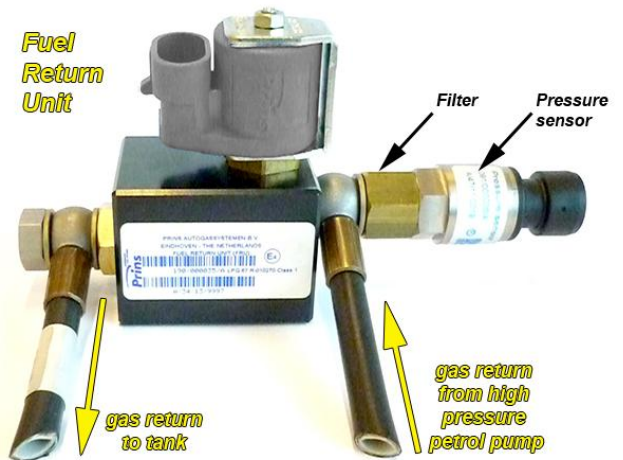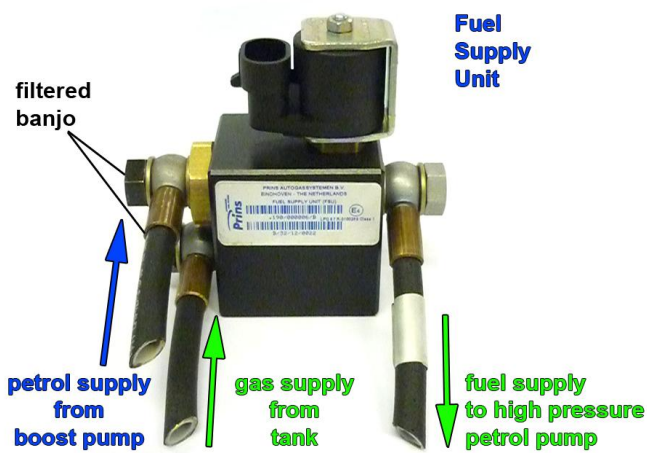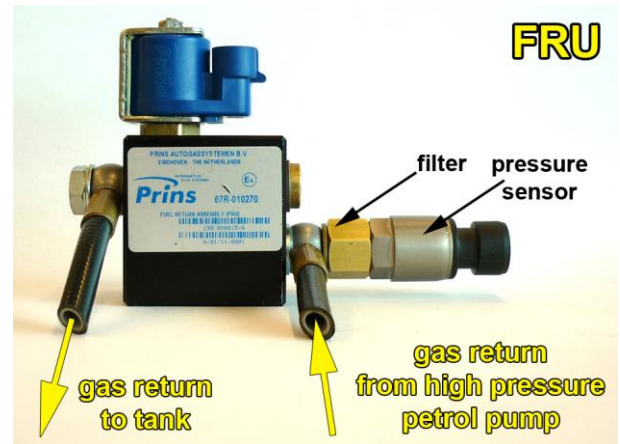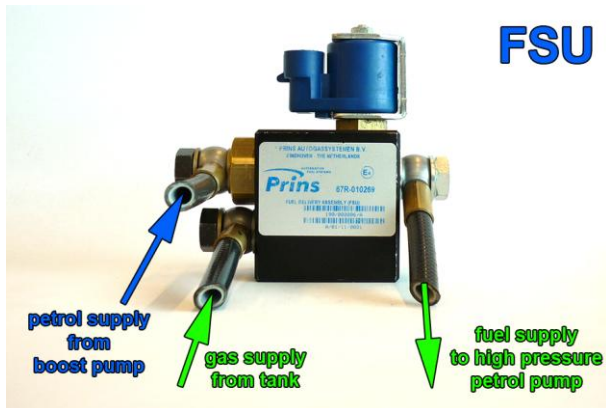


Black filtered banjo will only be used on inlet connections !

Filter inside sensor banjo



Mounting the Fuel Units

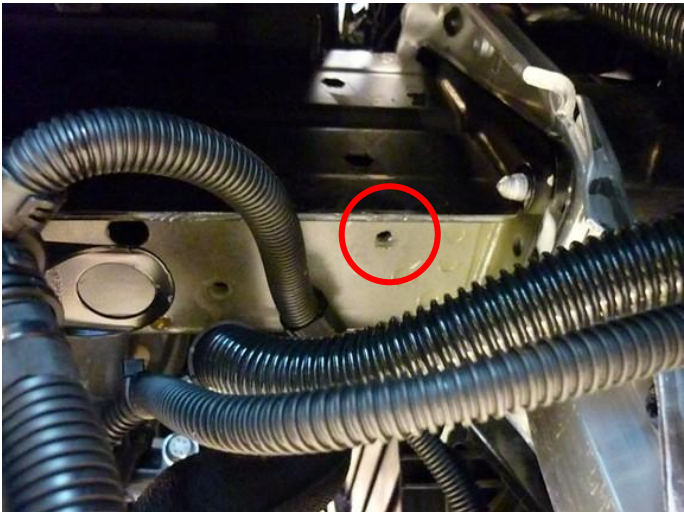

High pressure petrol pump installation





(Follow the workshop manual of the car)

Remove original petrol hose connection. Carefully remove the HPP pump.

Remove the pressure sensor from the high pressure pump (under side), sensor will be installed into the boost pump adaptor. Remove petrol pressure sensor (underside pump) : sensor will be installed onto the boost pump with the sensor adaptor.



Roller tappet can slide out of housing !!

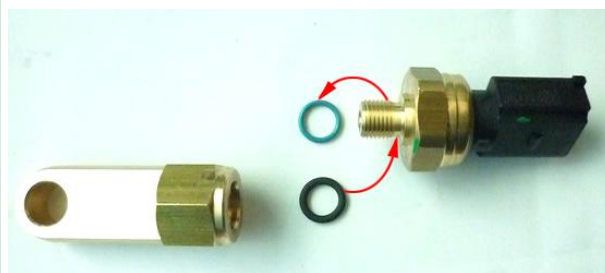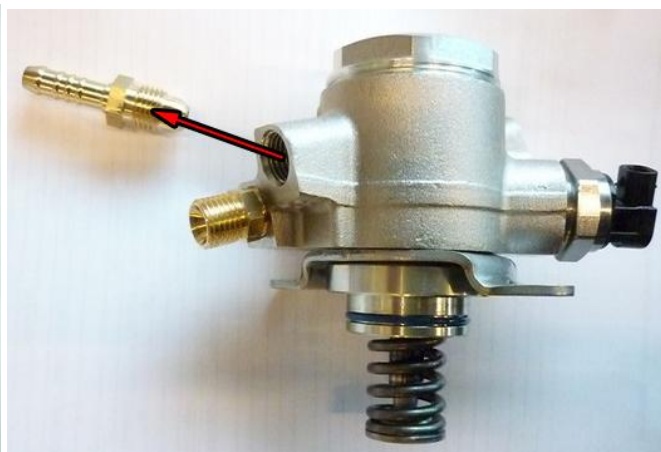

High pressure petrol pump Supply hose



70 cm HPP fuel hose supply, clamp on 18cm.



Units LPG return and supply hose





High pressure petrol pump LPG return



Return hose, banjo connection into sensor M10 hole



Boost pump

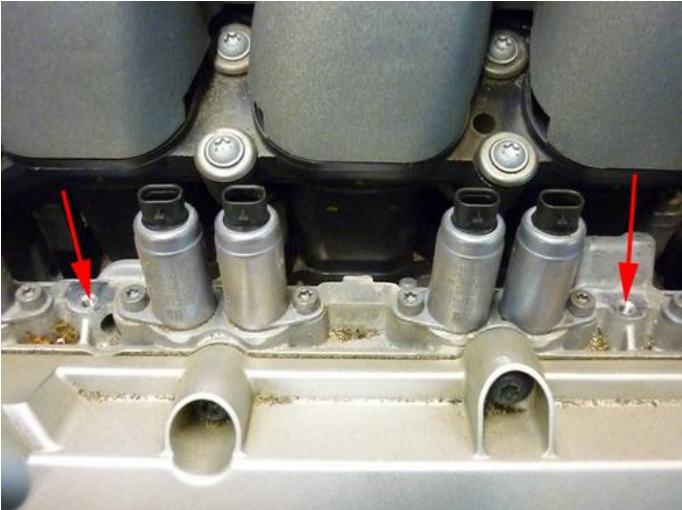
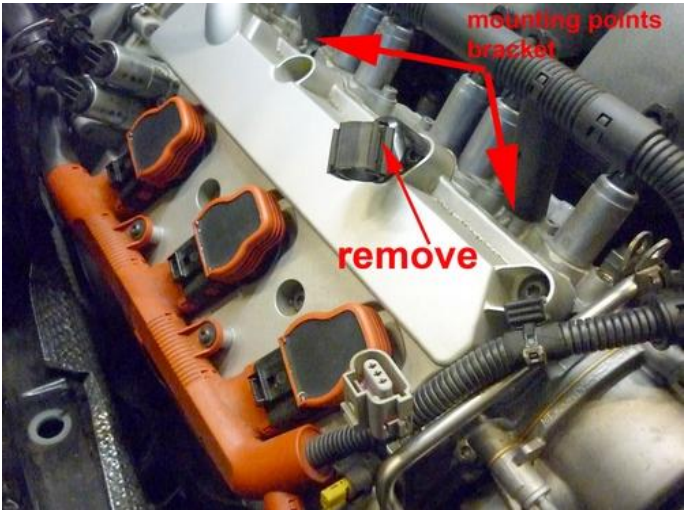


Mounting points bracket : underneath wiring loom pillars, use original bolts



Connection of the fuel hose to the boost pump.

Connect the fuel hose to the boost pump.

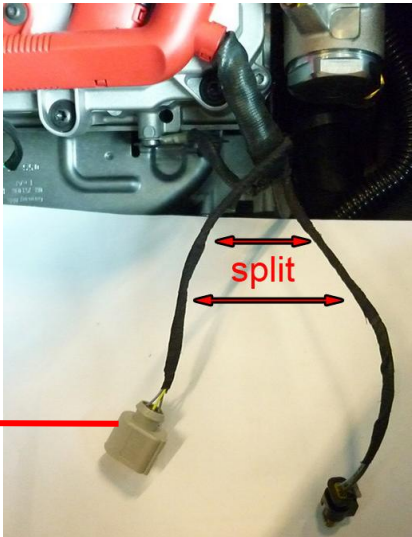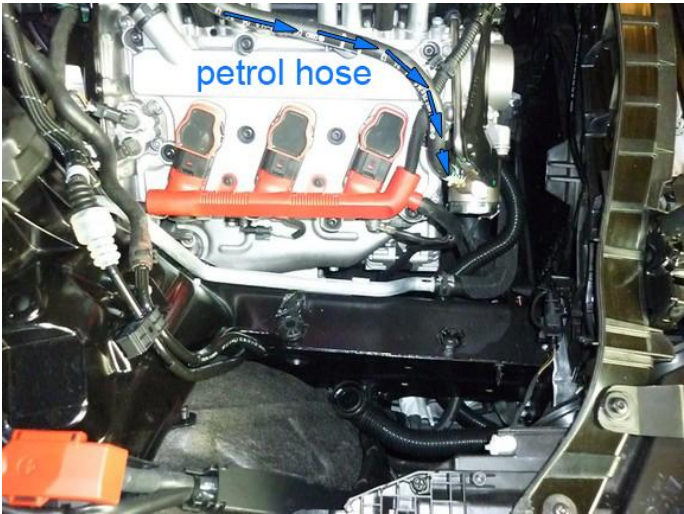


Lpg / petrol fuel lines

Hose		from	to	Length (cm)
1	XD-5 banjo eye	Adapter original petrol hose	Petrol boost pump	Original
2	XD-4	Fuel supply unit	High pressure petrol pump	70
3	XD-3	Petrol boost pump	Fuel supply unit	90
4	XD-3	Fuel return unit	High pressure petrol pump	45




Install the fuel line using two bonded seal washers and banjo bolt :

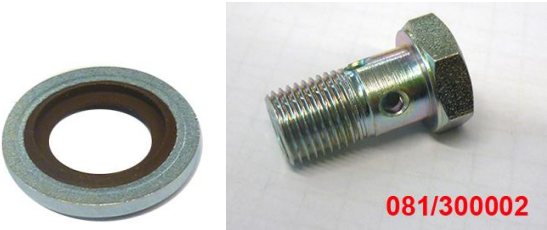

Filtered banjo: (FSU supply inlets / boost pump inlet : black filtered banjo) :




Hose routing Supply and Return to tank

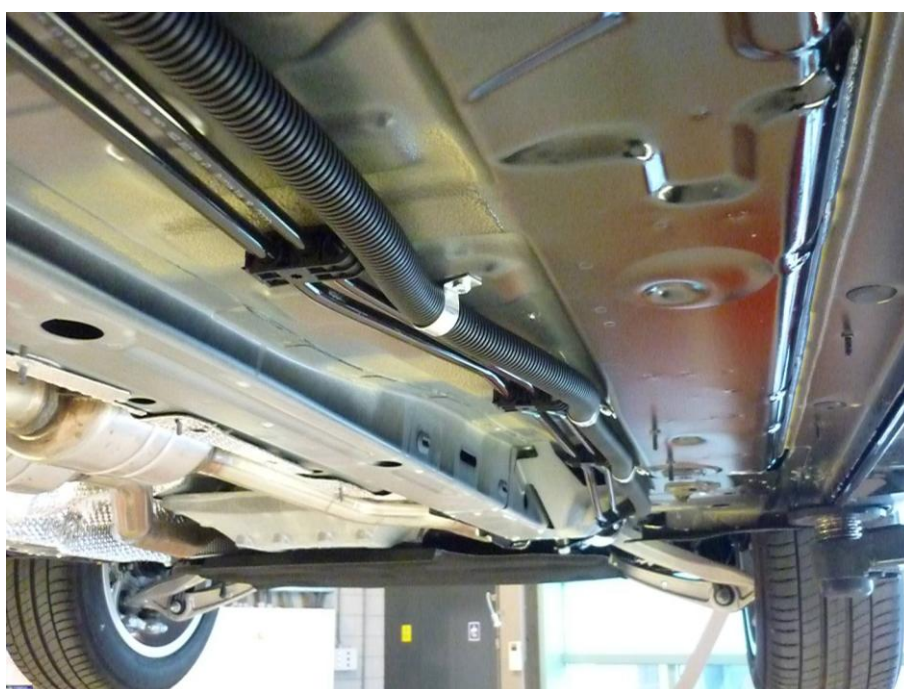

Wiring on other side, right side, next to the battery wiring.

Mounting the AFC

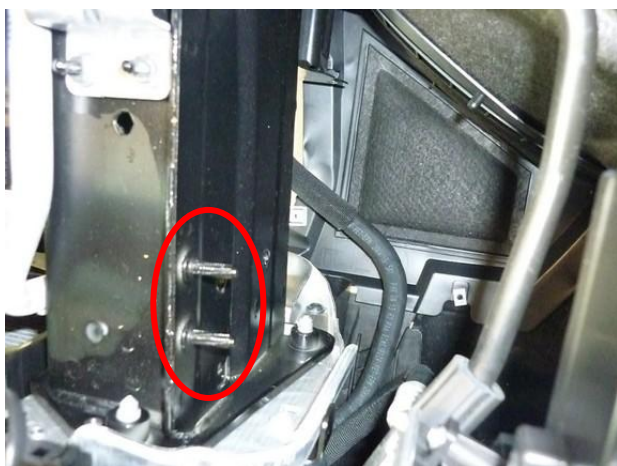

Mounting the fuse / relay box




Grommet




Wiring

Tank wiring: under car, left side, next to main battery cable

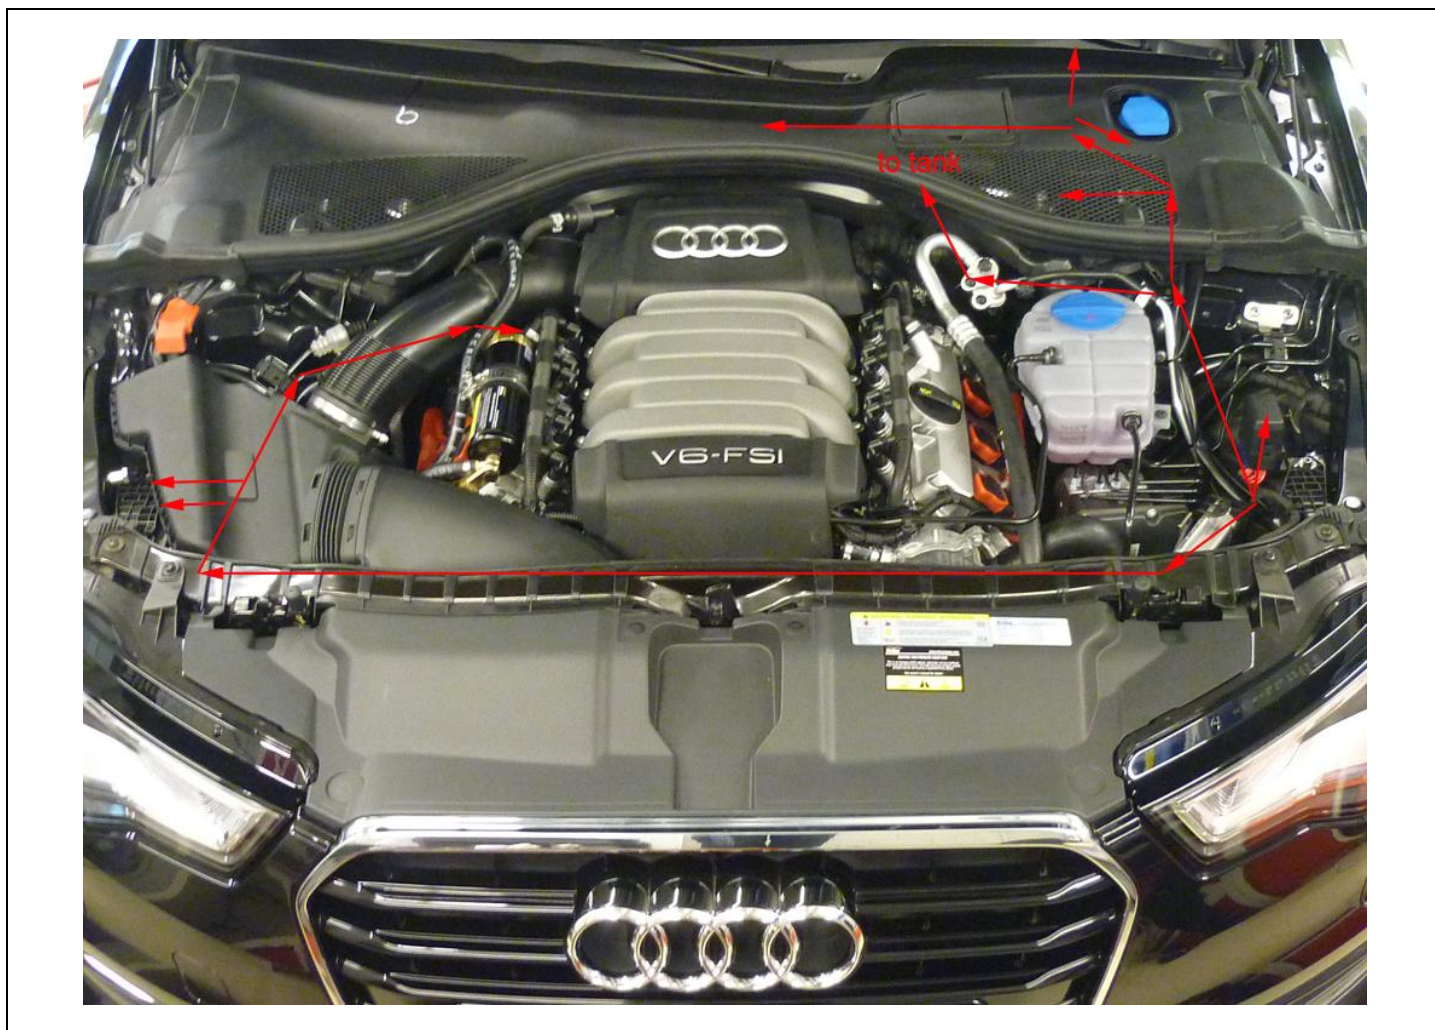

Wiring


Tank wiring: under car, left side, next to main battery cable

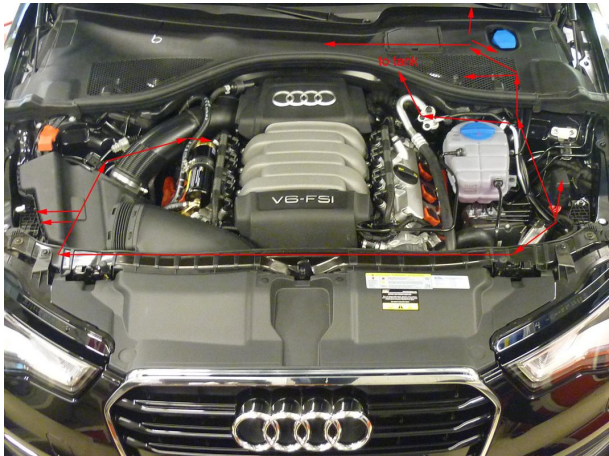

Ground



Battery+

 Mount the switch.

Mounting the fuel selection switch





Drill Ø8.2 mm for switch mounting

Electrical connections



Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

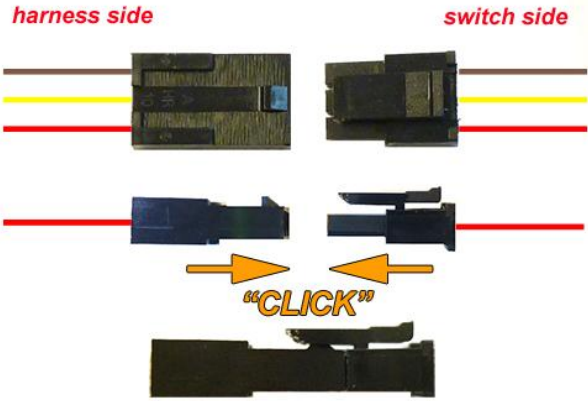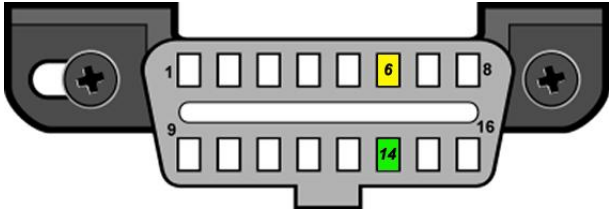
Driver room

Wire number / code		Wire colour	Connection
3-pole micro connector			
66	Ground fuel switch	Brown-black	Connect the 3-pole connector to the Prins fuel selection switch.
3	+12V fuel switch	Red-white	
49	LIN fuel switch	Yellow	
			
51	CAN-High	Yellow	EOBD connector pin 6
70	CAN-Low	Green	EOBD connector pin 14
			

Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

1-32 MAIN GND ecu MAIN GROUND SENSE	Brown	Connect to the '-' of the battery (-31) ; use a ring terminal. Wire location : left suspension strut 
4 – 13 +12V BATT sense +12V BATT fused +12V BATT boost pump +12V BATT pump driver	Red	Connect to the '+' of the battery (+30) ; use a ring terminal. Do not place the fuses before having completed the installation of the lpg system. Wire location : center wiper box 

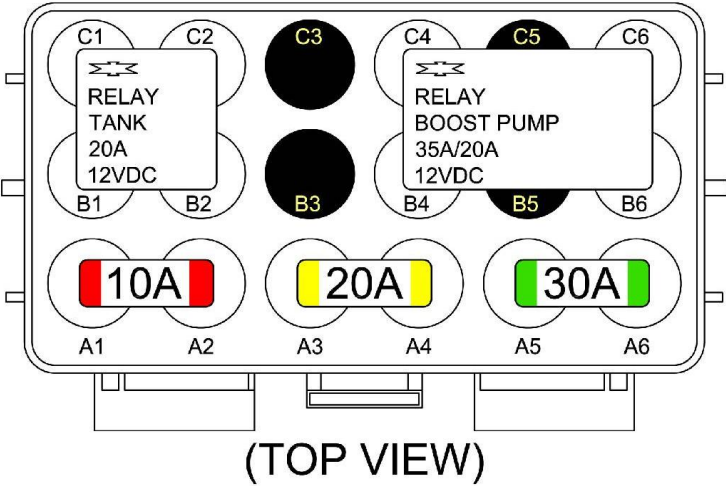

Electrical connections, not used wiring**Insulate not used wires.**

Wire number / code	Wire colour	Connection
20 AD 3	Blue-pink	<i>insulate</i>
19 AD 4	Blue	<i>insulate</i>
21 AD 9	Blue-purple	<i>insulate</i>
74 DAC 3	Green-pink	<i>insulate</i>
22 LSS 1	Purple-white	<i>insulate</i>
23 LSS 2	Purple-green	<i>insulate</i>
42 Digital out pull up 2	Red-purple	<i>insulate</i>
58 +12V switched	Red-white	<i>insulate</i>
61 DI 4	Yellow-blue	<i>insulate</i>
60 DI 3	Yellow-grey	<i>insulate</i>

Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Wire number / code	Wire colour	Connection
36-25		High pressure petrol sensor signal interruption Wire colour : yellow Wire location : petrol ecu, T60, pin 59
36 AD 6	Blue-brown	Sensor side
25 DAC 1	Green-white	Petrol ecu side
63 Ground Shift	Blue-orange	High pressure petrol sensor ground Wire colour : brown-green (thick) Wire location : petrol ecu, T60, pin 50
40 Wake-up	Grey-red	High pressure petrol sensor 5Volt supply / car wake-up Wire colour : blue-red (thick) Wire location : petrol ecu, T60, pin 35
17-10		Low pressure petrol sensor signal interruption Wire colour : yellow Wire location : petrol ecu, T60, pin 44
17 AD 2	Blue-green	Sensor side
10 DAC 2	Green	ECU side
18 AD 1	Blue-white	Analog in (sensor side) MAP sensor in Wire colour : red-grey Wire location : petrol ecu, T60, pin 37
8 RPM engine speed	Purple-white	For measuring the engine speed signal. Wire colour : yellow Wire location : petrol ecu, T60, pin 55
15 T-ect	Grey	For measuring the engine coolant temperature. Wire colour : yellow Wire location : petrol ecu, T60, pin 27
56 DI 2	Yellow-green	Digital Input 2, OEM petrol pump driver, PWM IN Wire colour : red-lila Wire location : petrol ecu, T94 , pin 42
7 +12V IGNITION	Grey - white	Make a connection to +ignition / contact+ (+15). Do not place the fuses in the holder before having completed the installation of the lpg system. Wire colour : black-purple Wire location : petrol ecu, connector T94 , pin 87

Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Engine room


Wire number / code	Wire colour	Connection
<i>3-pole connector</i>		Connect the 3-pole connector to the Psys sensor positioned into the Fuel Return Unit.
35 Ground Psys pin A	Brown	Sensor wire pin A
9 +5V sensor pin B	Red-blue	Sensor wire pin B
16 Psys pin C	Green	Sensor wire pin C
<i>2-pole connector FSU, black</i>		
24 + Lock-off FSU	Yellow-green	Connect the 2-pole connector to the lock-off valve of the Fuel Supply Unit
31 C Ground	Brown-black	
<i>2-pole connector FRU, grey</i>		
43 + Lock-off FRU	Red-white	Connect the 2-pole connector to the lock-off valve of the Fuel Return Unit
34 C Ground	Brown-black	
<i>4-pole diagnose connector</i>		
46 Service TxD	Grey	Diagnose connector for service / diagnosis
65 Service RxD	Grey	Connector pin 1
68 C Ground	Brown-black	Connector pin 2
		Connector pin 4
<i>Boost pump relay</i>		
2 + relay boost pump	Red-white	Pin 86 of the boost pump relay C4
26 Ground BP relay	Purple-blue	Pin 85 of the boost pump relay B6
+12V fused BATT	Red 2.5mm2	Pin 30 of the boost pump relay C6-A5
+12V Boost pump	Red 2.5mm2	Pin 87 of the boost pump relay B4
<i>Wiring tank pump driver relay</i>		
57 + driver relay	Red-white	Pin 86 of the driver relay C1
73 LSS 4 tank relay	Purple-blue	Pin 85 of the driver relay B2
+12V BATT fused	Red 2.5mm2	Pin 30 of the driver relay C2-A4
+12V driver	Red 2.5mm2	Pin 87 of the driver relay B1

Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Lpg tank housing

Wire number / code	Wire colour	Connection
3-pole tank level connector 33 Ground tank gauge 12 Tank level in 11 + tank level supply	Brown-black Blue Red-blue	Connect the 3-pole connector to the tank level sensor.
2-pole driver connector 71 LSS 3 PWM driver 64 AD 5 driver diagnose	Purple-pink Blue-grey	Connect the 2-pole connector to the pump driver (4).
1. 2-pole connector tank lock-off	Green-yellow Brown	From tank pump driver From tank pump driver
2. 3-pole connector tank pump	Red 2.5mm ² Brown 2.5mm ²	From tank pump driver From tank pump driver
3. 2-pole connector power driver	Red 2.5mm ² Brown 2.5mm ²	From tank pump relay 87 From main ground
4. 2-pole connector driver	Green Grey	From AFC pin 71 pwm From AFC pin 64 diagnose

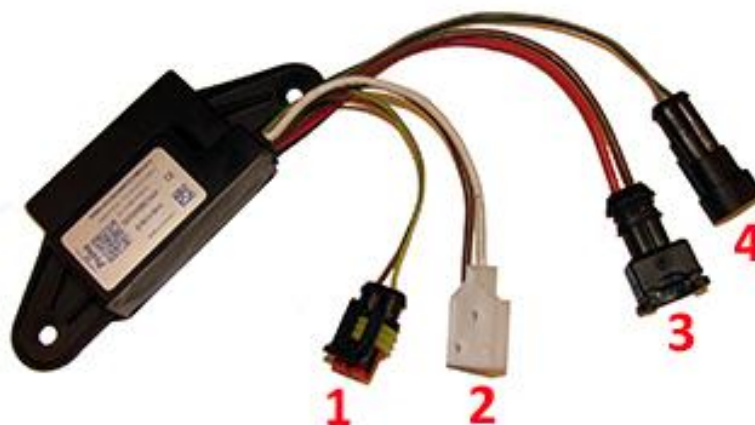

Checklist after installation

1. Install the system fuses.
Turn on ignition.
Connect the Prins interface wire and run the Prins diagnosis program.
When working on the car, beware of moving and rotating parts in the engine compartment (even when the engine is not running !!).
2. When commissioning the LPG system, you must activate the AFC with the diagnosis software.
3. Check whether the program in the AFC matches with the car (dedicated engine set):
See "Identification" in the diagnosis program.
4. Check all components and connections for any LPG leakage, use a LPG leak detector device or a fluid detection like soap. Also check for petrol leakage. Make sure the solenoid valves are in open position.
No evidence of leakage is permitted.
Caution for moving and rotating parts in the engine compartment !
5. Use the diagnosis software to check again all input and output signals.
6. Check the system for error codes and solve these, if required.
Check the petrol MMS for EOBD error codes.
Place the protection connector back on the diagnose connector.
7. Make a test drive and check the cars drivability on LPG and petrol.