



**Installation manual
Dedicated
PART 2/2**



MANUFACTURER	Renault
TYPE	Megane Estate
ENGINE DISPLACEMENT	1200cc
NUMBER OF VALVES	16v
ENGINE CODE / NUMBER	H5F (TCe115)
VEHICLE CATEGORIES	M
TRANSMISSION	MT(6)
VERSION	AFC-2.1
PETROL ECU MANUFACTURER / CODE	Continental EMS3150
HIGH PRESSURE PETROL PUMP	Denso 166304016R
HIGH PRESSURE PETROL INJECTOR	x
MODEL YEAR:	2012
SYSTEM APPROVAL NUMBER (R115)	E4-115R-000012 / DLM-LPG 06
LOCATION R115 SYSTEM STICKER	right side, centre door post
ENGINE SET NUMBER	359/070015/A
MANUAL NUMBER	076/1907300
DATE	2015-03-06



TABLE OF CONTENTS

General instructions.....	2
Required equipment / tools / materials for installing a complete system.....	3
Vehicle check	3
Tightening moments	4
Direct LiquiMax-2.1	5
Direct LiquiMax-2.1 diagram	Error! Bookmark not defined.
Direct LiquiMax parts / approval numbers.....	7
DLM-2.1 component location overview.....	8
Removal of the High Pressure Petrol Pump	Error! Bookmark not defined.
Installation of the High Pressure Petrol Pump.....	Error! Bookmark not defined.
High pressure petrol pump installation 1.....	Error! Bookmark not defined.
High pressure pump installation 2	Error! Bookmark not defined.
Mounting boost pump	9
Connection of the fuel hose to the boost pump.....	11
Fuel Supply Unit / Fuel Return Unit.....	12
Mounting the FSU / FRU.....	13
LPG / petrol fuel lines.....	14
Hose routing Boost pump / FSU / FRU - 1.....	15
Hose routing Boost pump / FSU / FRU - 2.....	16
Supply hose – Return hose – Tank wiring	17
Hose / wiring routing to tank - 1.....	18
Hose / wiring routing to tank - 2.....	19
Mounting the AFC.....	20
Wiring routing AFC	21
Fuse/Relais box & diagnostic connector.....	22
Grommet / wiring transit.....	23
Mounting the fuel selection switch / CAN / Wake-up.....	24
Connecting the fuel gauge reset module 1	25
Connecting the fuel gauge reset module 2	26
Actuator resistance	Error! Bookmark not defined.
Petrol ECU pinnings.....	27
Electrical connections	28
Electrical connections	29
Electrical connections	30
Electrical connections	31
Electrical connections	32
Electrical connections	33
Checklist after installation	34
FOR EXPLANATION AND CIRCUIT DIAGRAMS SEE : INSTALLATION MANUAL GENERAL PART 1 / 2	

General instructions

- The installation of the system shall be done in accordance with the installation manual provided by Prins Autogassystemen.
- This manual is based on Dutch regulations, always install the system in accordance to the local regulations.
- For an optimal functioning of the Direct LiquiMax-2.0 system, maintain a clean and organized work environment during installation and maintenance to prevent pollution of the LPG components.
- Always download the “general manual 1/2 “ from our website for basic instructions and diagrams.
- Always **disconnect the battery when installing / servicing** the LPG system. Make sure the ignition key is outside the car.
Be aware of central door locking, radio / telephone memory code, alarm system.
- Wear safety goggles when working on the petrol filled system / connections (pressurized petrol)
- Do not place the main fuse into the fuse holder before having completed the installation of the system.
- The AFC has to be activated by means of the Prins diagnosis software.
- Never disconnect the AFC connector, unless you have removed the main fuse.
- When installing the wiring harness, ensure that it does not run near any of the ignition components.

Solder and insulate all electrical connections.

The wires in the loom are provided with numbers and text. The text on the wire explains the function of the wire.

The wire harness is not model specific, therefore it may be necessary to adjust the length of the wires.

Ensure maximum care is taken when connecting wiring.

Make professional joints using solder and shrink sleeve. Do not stretch the wiring harness.

- No component of the LPG-system shall be located within 100 mm of the exhaust or similar heat source, unless such components are adequately shielded against heat.
- If holes have to be drilled (wear safety glasses) for installing brackets, etc., the drilled holes must always be treated with an anti-corrosion agent, after the chips have been removed (especially when mounting a exterior filler into body work).
- After having completed the installation, check the whole system for LPG leakage; use a LPG leak detection device. Also check for leak of engine coolant, petrol and air.
- Fitting and maintenance is only allowed by Prins Autogassystemen selected LPG engineers.
- Failure to follow the instructions in this manual can result in a poor or non-working LPG installation or a dangerous situation.
- For maintenance instructions see owner manual.
- Prins Autogassystemen is not responsible for any damages to people or objects as a result of changes to Prins products.
- Check our website regularly for diagrams, certificates, updates, info-bulletins and product information.

Register (warranty card) the system on the Prins warranty portal .



Required equipment / tools / materials for installing a complete system

- Complete workshop toolbox (wrenches, screwdrivers, cutters, pliers, ratchet, sockets)
- Car lift
- Portable computer : operating on Windows 98,W2000 or XP.
- Internal memory : 16 Mb or more
- Memory HD space : 5MB
- Screen : 256 colours, advise colours 16 bits or more
- Com port : 1 free COM port 1 or COM port 2 with a 9 or 25 pins connector
- Vehicle fuel system scan tool or OBD scan tool Prins (part nr. 099/99928)
- Exhaust gas analyser
- Multimeter
- Oscilloscope
- Prins diagnostic software
- Prins serial interface
- Torque wrench (5-50Nm)
- Torque wrench (200-250Nm)
- Portable light
- Assortment drill bits 4 to 12 mm
- Assortment cutters (ø 20, 30, 50, 70 mm)
- Portable drill or pneumatic drill
- Thread cutting device (male M6x1, M8x1, M10x1)
- Air gun
- Vacuum cleaner
- Safety goggles
- Hot air gun
- Soldering iron, soldering tin
- Wire-stripping pliers
- Adhesive tape
- Adhesive sealant
- Thread locking compound
- Anti-corrosion agent / black body coating
- Gas leak detection device or foam leak spray
- Shrink sleeves

Vehicle check

- Check the vehicle drivability on petrol
- Check the fuel system for error codes (scan tool)
- Check if the catalytic converter is in good condition (exhaust gas analyzer)
- Check the condition of the ignition system (spark plugs, cables, coil)


Tightening moments

	Nm	Spanner mm
M 4 x 0,7	3.3	7
M 5 x 0,8	6.5	8
M 6 x 1,0	11.3	10
M 7 x 1,0	14.5	11
M 8 x 1	24.5	13
M 8 x 1,25	27.3	13
M 10 x 1	52	15-16-17
M 10 x 1,5	54	15-16-17
(filtered) Banjo bolt	10	14
Supply line connection	15	13
Fuel module Allen bolts	20	7
Filler hose connection	50	22
Boost pump clamp	7	10

EXPLANATION OF SYMBOLS :




= IMPORTANT, CAUTION

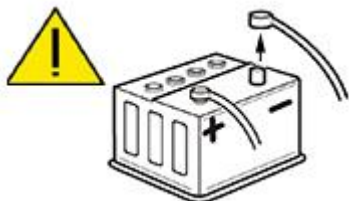


= WEAR SAFETY GOGGLES

Direct LiquiMax-2.1

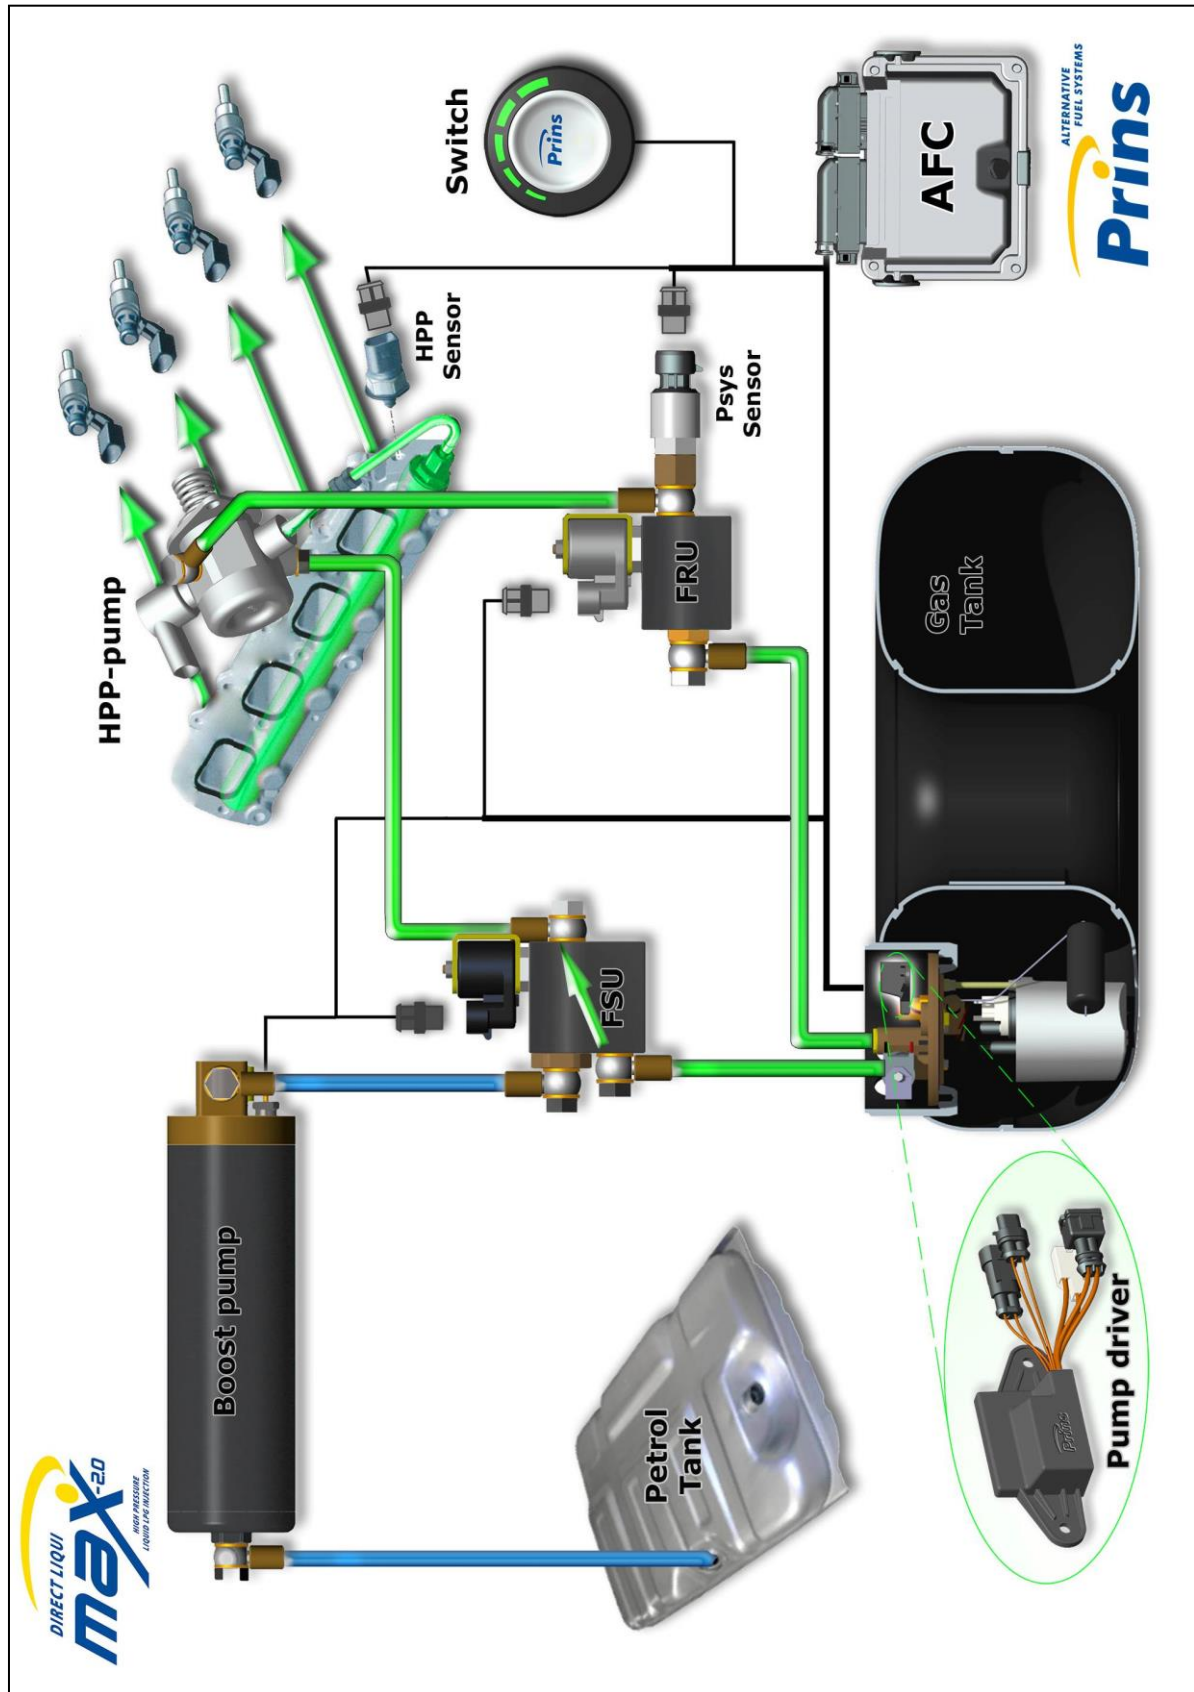

Direct LiquiMax-2.0 diagram, AFC-2.1



overview Direct LiquiMax-2.1

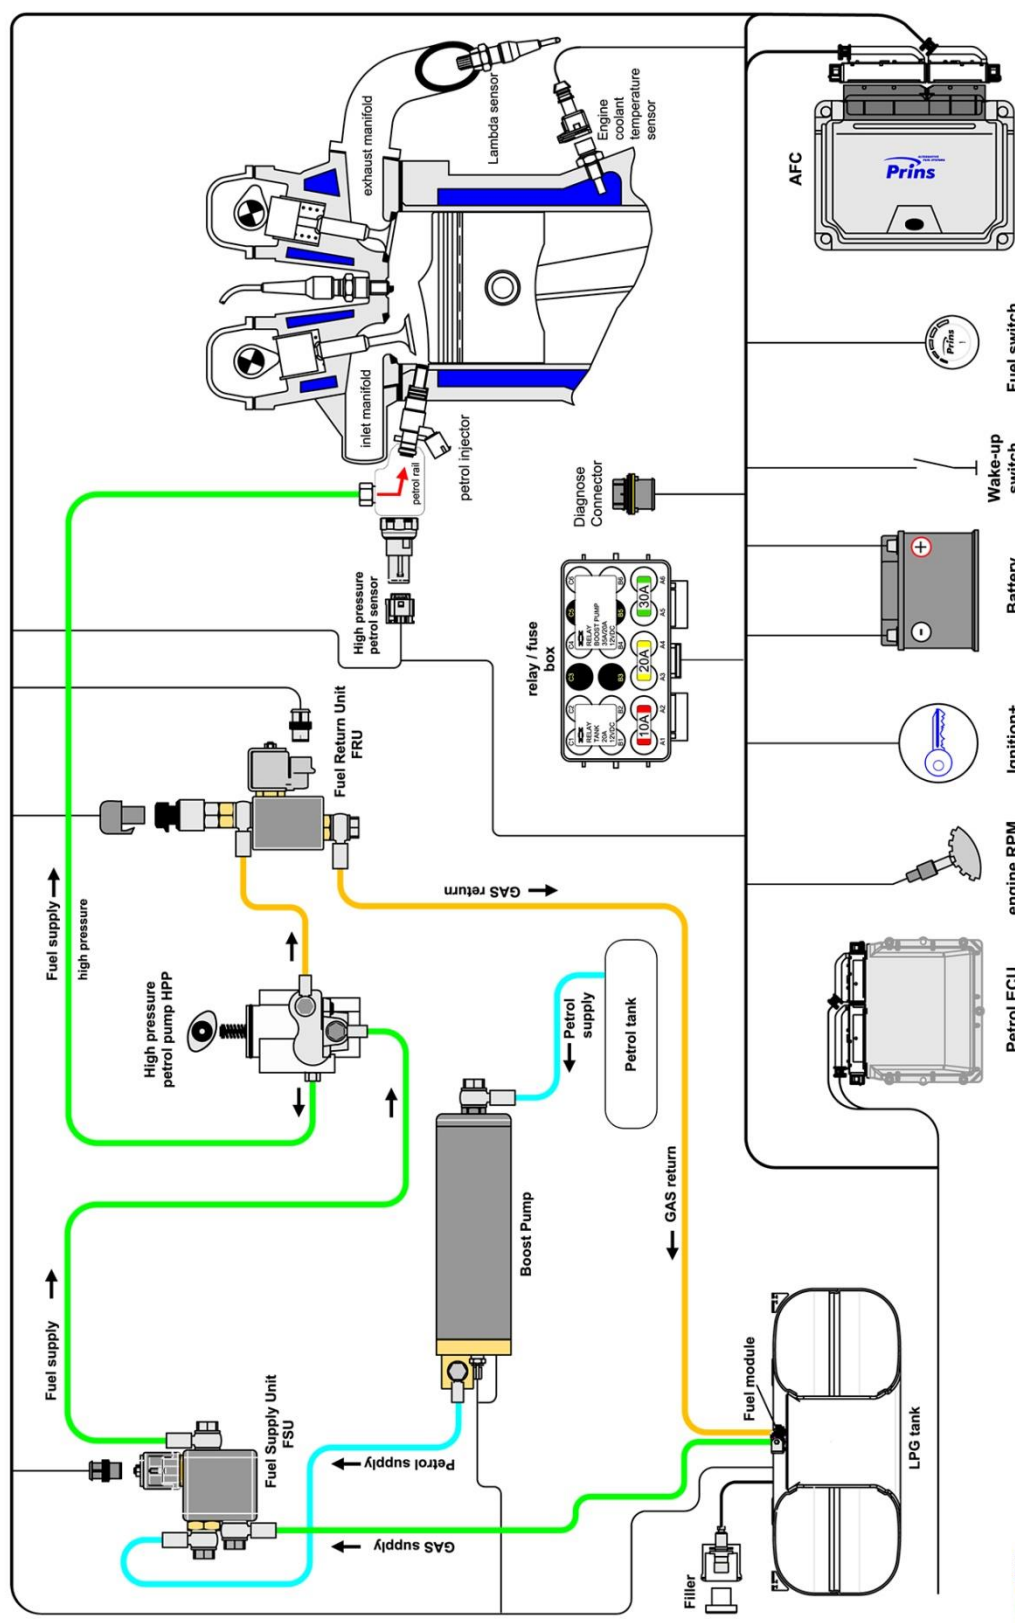

Direct LiquiMax parts / approval numbers

 <p>1st generation</p>  <p>2nd generation</p>	 <p>1st generation</p>  <p>2nd generation</p>
Fuel Supply Unit : E4-67R-010269	Fuel Return Unit : E4-67R-010270 Pressure Sensor : E4-67R-010051
	
Boost pump	High Pressure Pump : E4-67R-010266 High Pressure Rail : E4-67R-010267 High Pressure Injectors : E4-67R-010309
	 <p>XD-3 LPG</p>  <p>XD-4 LPG</p>
Prins AFC: E4-67R-010098 E4-10R-030507	Fuel lines series XD : E4-67R-010247 XD3 E4-67R-010247 XD4

DLM-2.1 component location overview

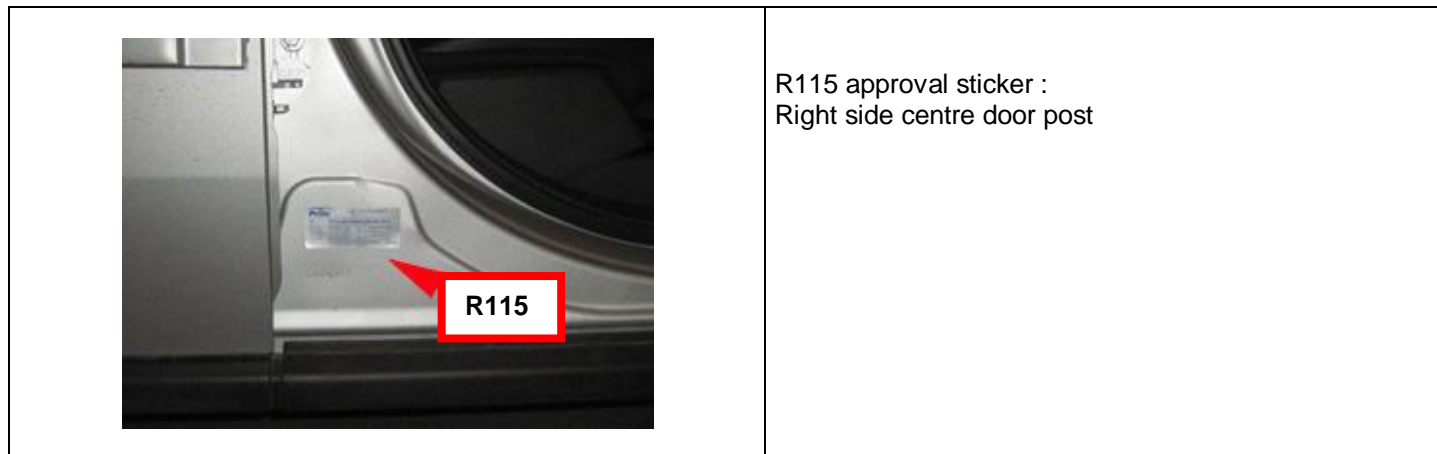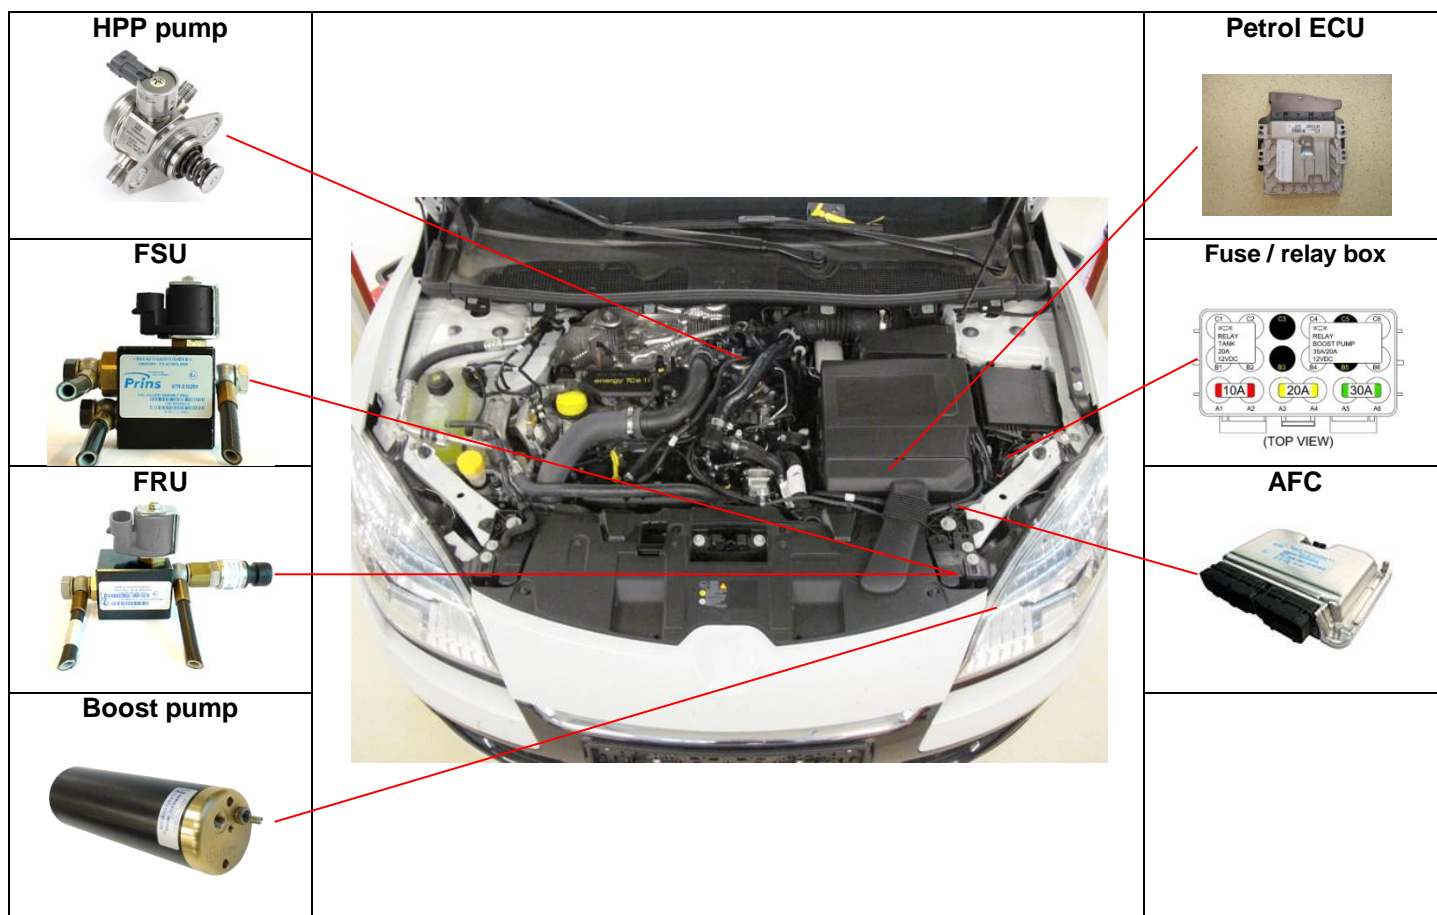





High pressure pump installation



Remove the original high pressure pump.




Mount the new adapted high pressure pump.

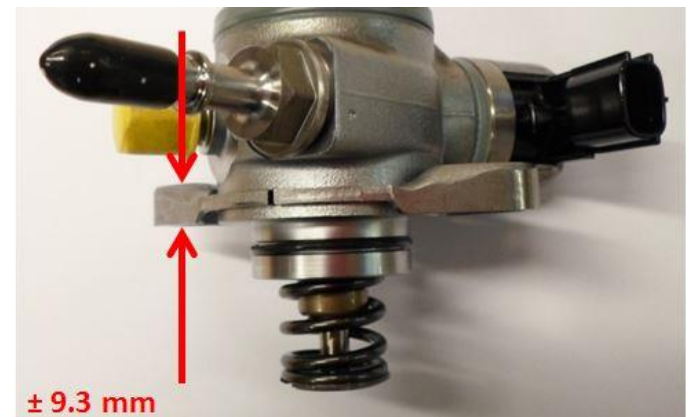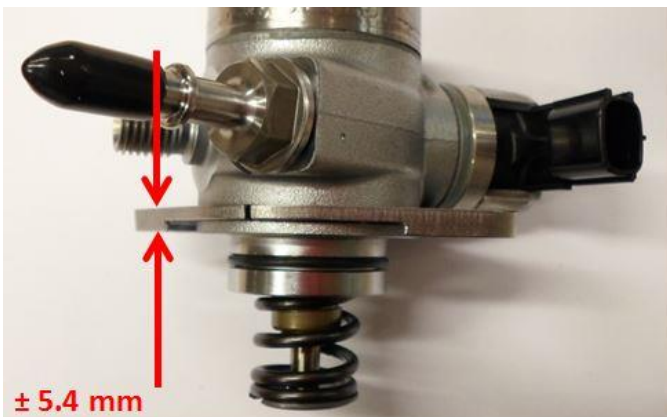

It's possible that the new high pressure pump has another thickness of the mounting plate. This deviation in thickness needs your attention and requires an adaption of the mounting bolts. When the new mounting plate has the same thickness as the original, use the original bolts. When the new mounting plate is thicker as the original, use the longer supplied bolts and when the new mounting plate is thinner as the original plate use the shorter supplied bolts. Always check if the new high pressure pump is mounted properly!!

Mounting boost pump

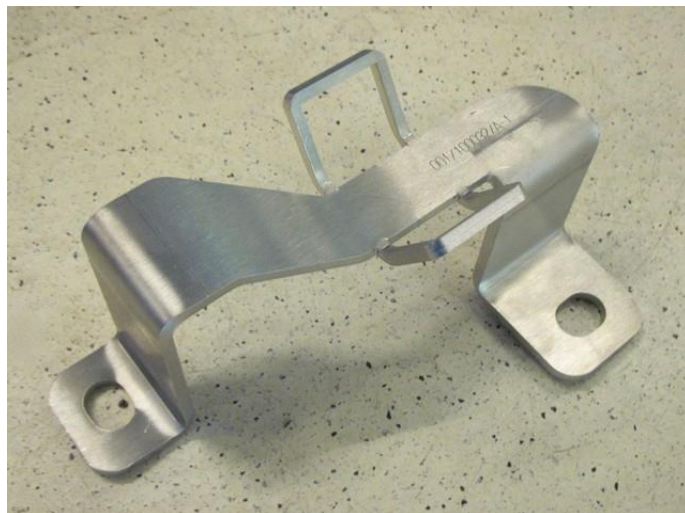

Mount boost pump clamp on bracket.





Mount boost pump in clamp with rubber ring in between. Mount bracket to vehicle below battery on 2 original bolts.




Mount bracket to vehicle below battery on 2 original bolts with big washers, spring washers and nuts.



Connection of the fuel hose to the boost pump.

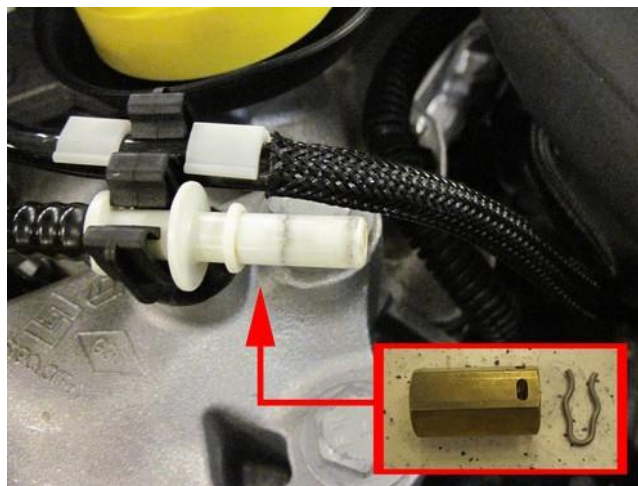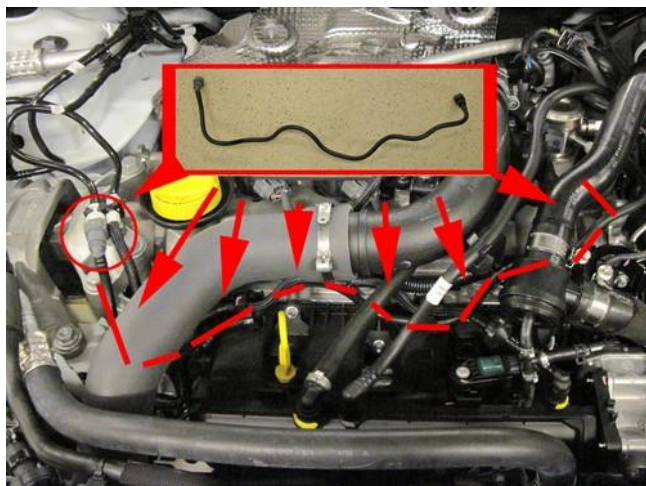

Remove original fuel line to HP pump. Mount adapter to original connection.




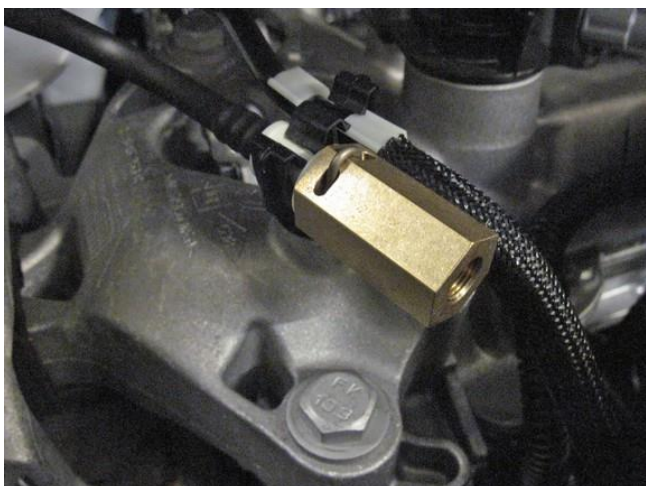


Mount adapter to original connection. Mount fuel line (blue arrows) from adapter to the boost pump.

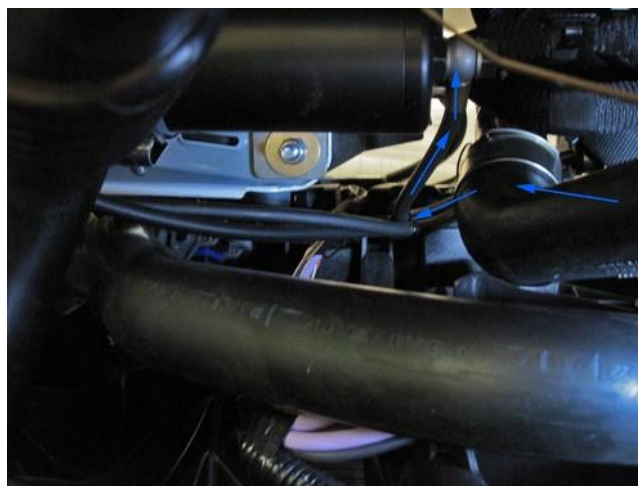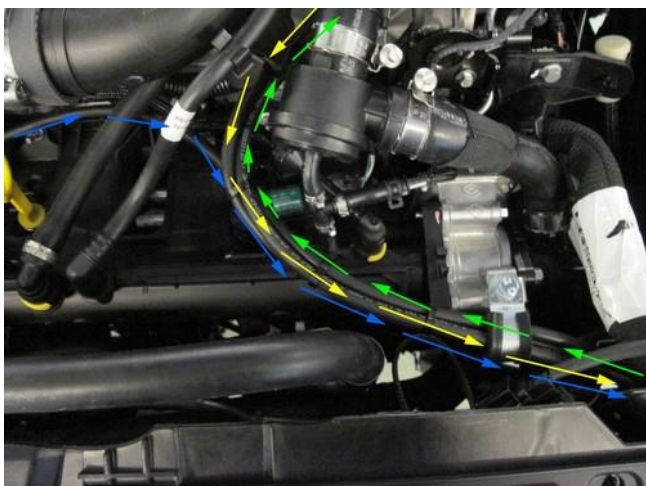

Mount the fuel line (blue arrows) from the adapter to the boost pump.
Use a banjo with filter (black) to connect the fuel line to the boost pump.

Fuel Supply Unit / Fuel Return Unit

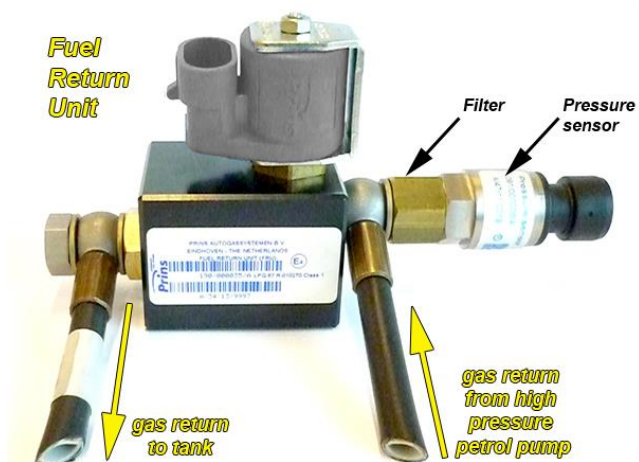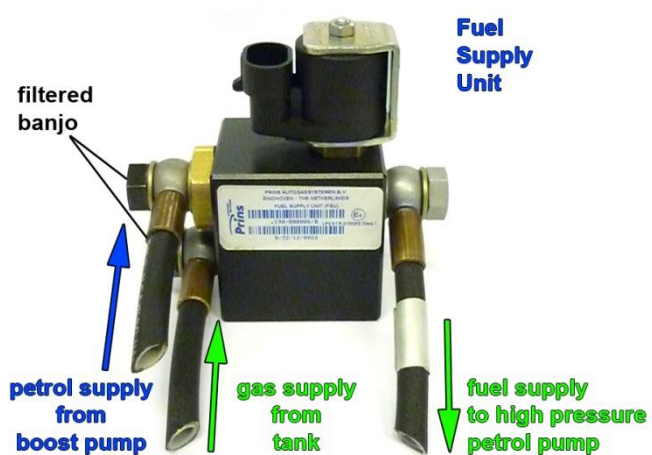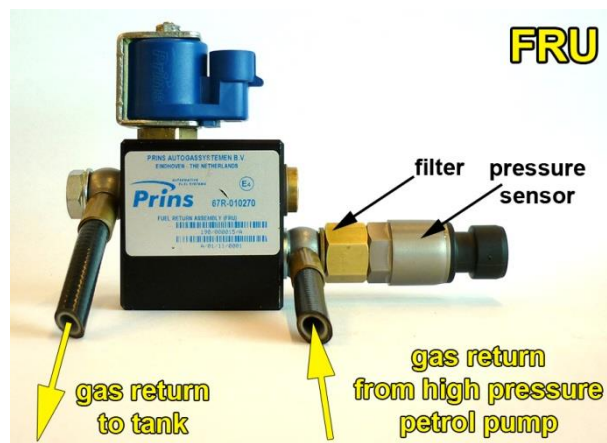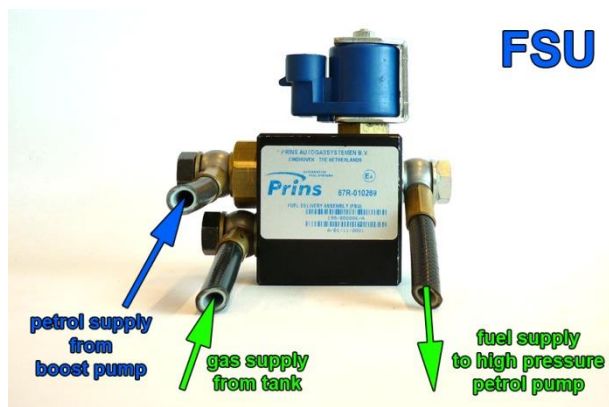


Black filtered banjo will only be used on inlet connections !


Filter inside sensor banjo



Mounting the FSU / FRU

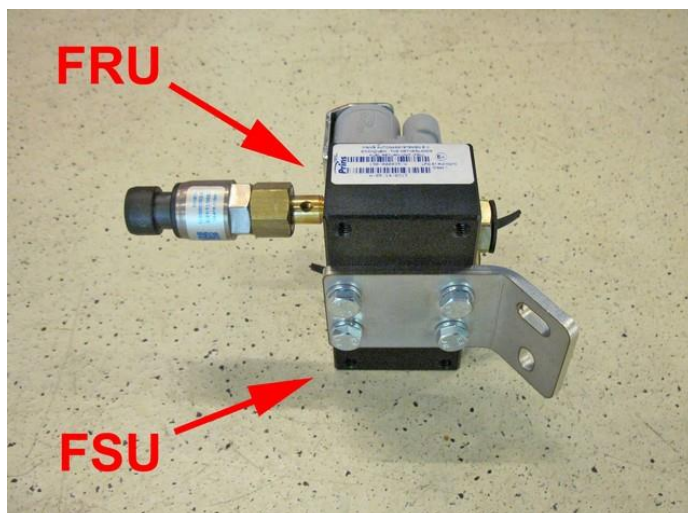


Mount the FSU / FRU to the bracket.

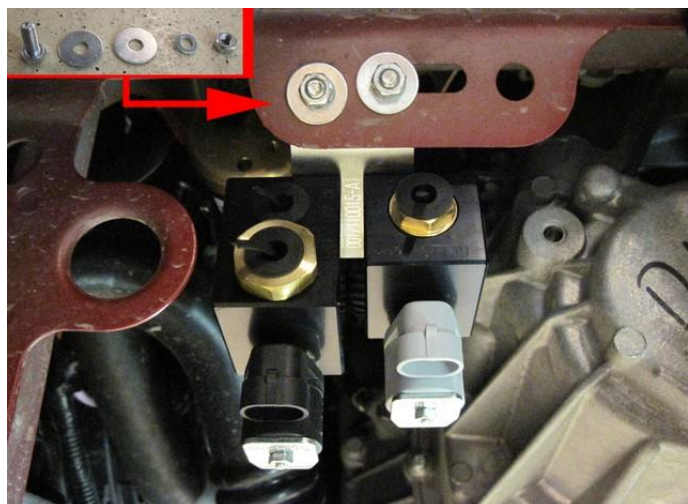


Mount the bracket with FSU / FRU to vehicle with M6 bolts, (spring) washers, and nuts.

LPG / petrol fuel lines

Hose / size		from	to	Length (cm)
1	XD-3	Adapter original petrol hose	Petrol boost pump	100
2	XD-3	Petrol boost pump	Fuel supply unit	30
3	XD-3	Fuel supply unit	High pressure petrol pump	100
4	XD-3	Fuel return unit	High pressure petrol pump	110

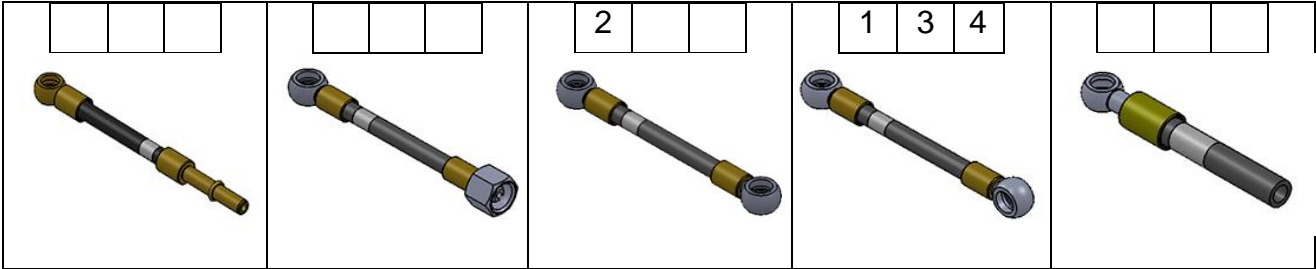



Install the fuel line using two bonded seal washers and banjo bolt :

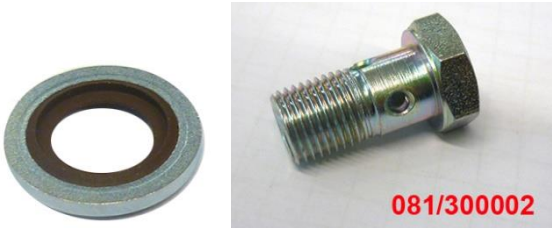


Filtered banjo: (FSU supply inlets / boost pump inlet / HPP pump inlet : black filtered banjo) :




Hose routing Boost pump / FSU / FRU - 1

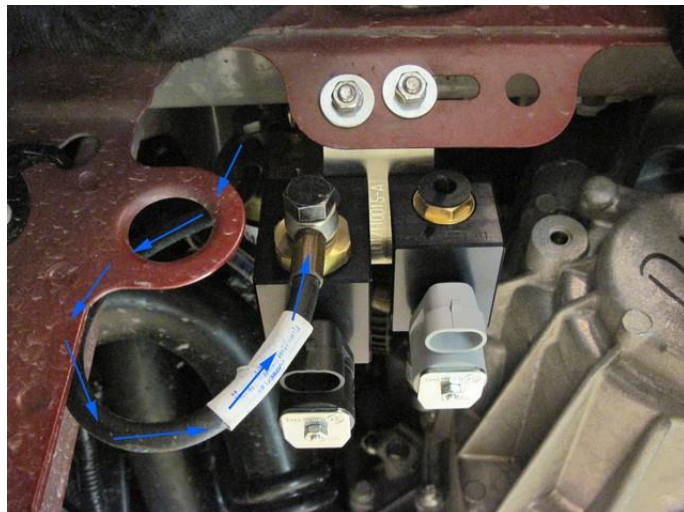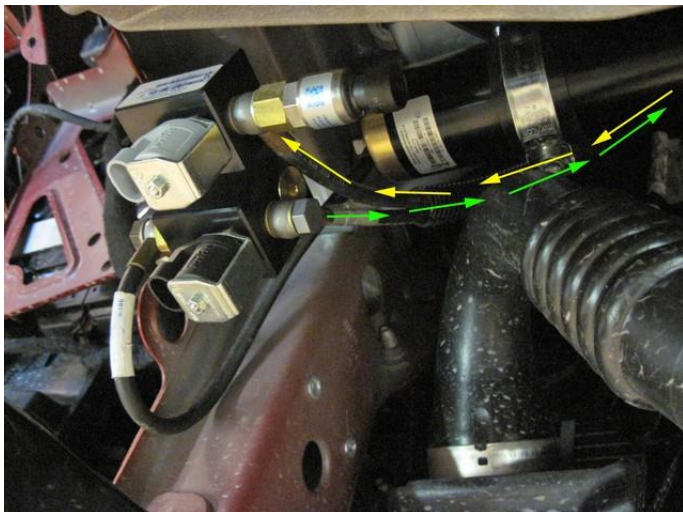

Mount hose from boost pump to FSU. Mount hoses from FSU / FRU to HP pump.

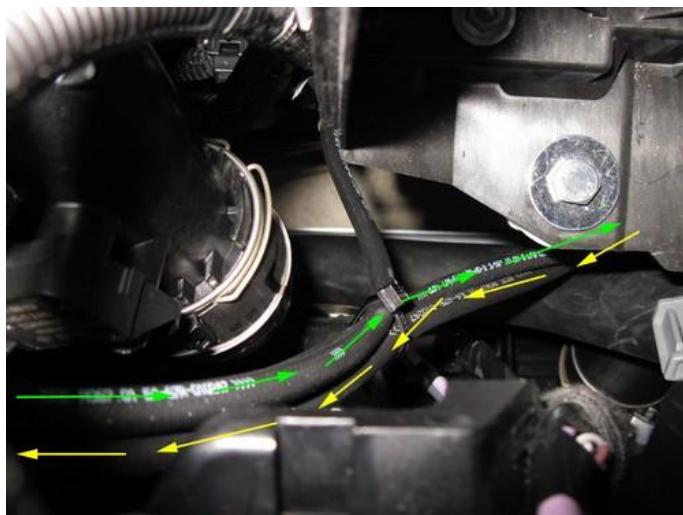


Mount hoses from FSU / FRU to HP pump. Mount adapter to HP pump.

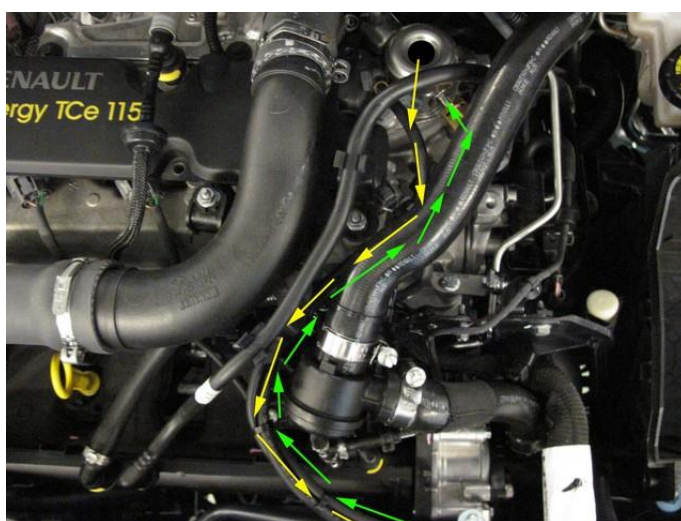


Mount hoses to HP pump.

Hose routing Boost pump / FSU / FRU - 2

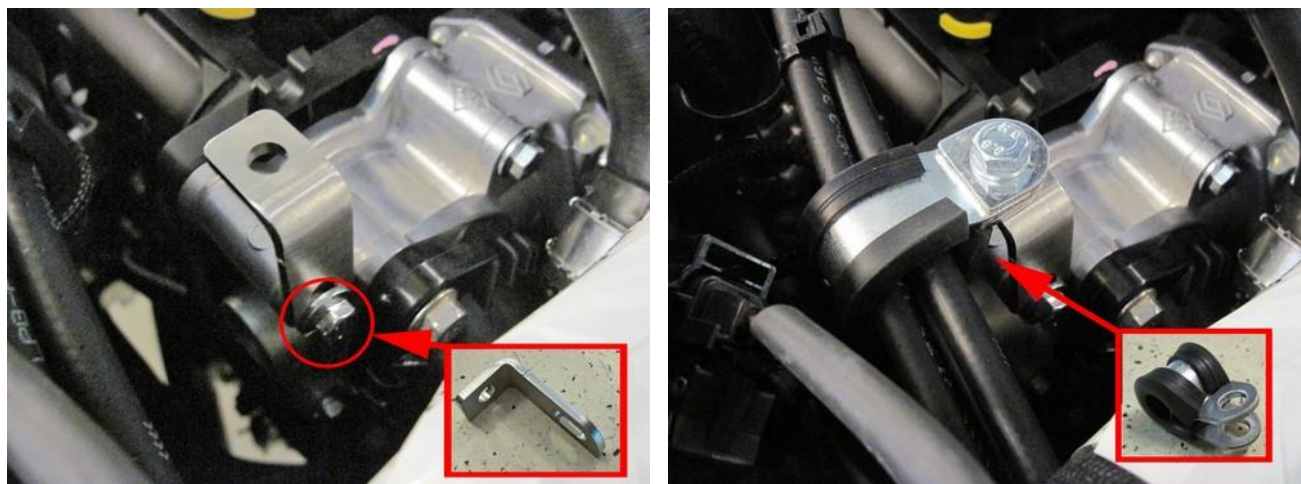


Mount fuel line support bracket to throttle body with original bolts. Use clamp to fixate fuel lines (all three lines).

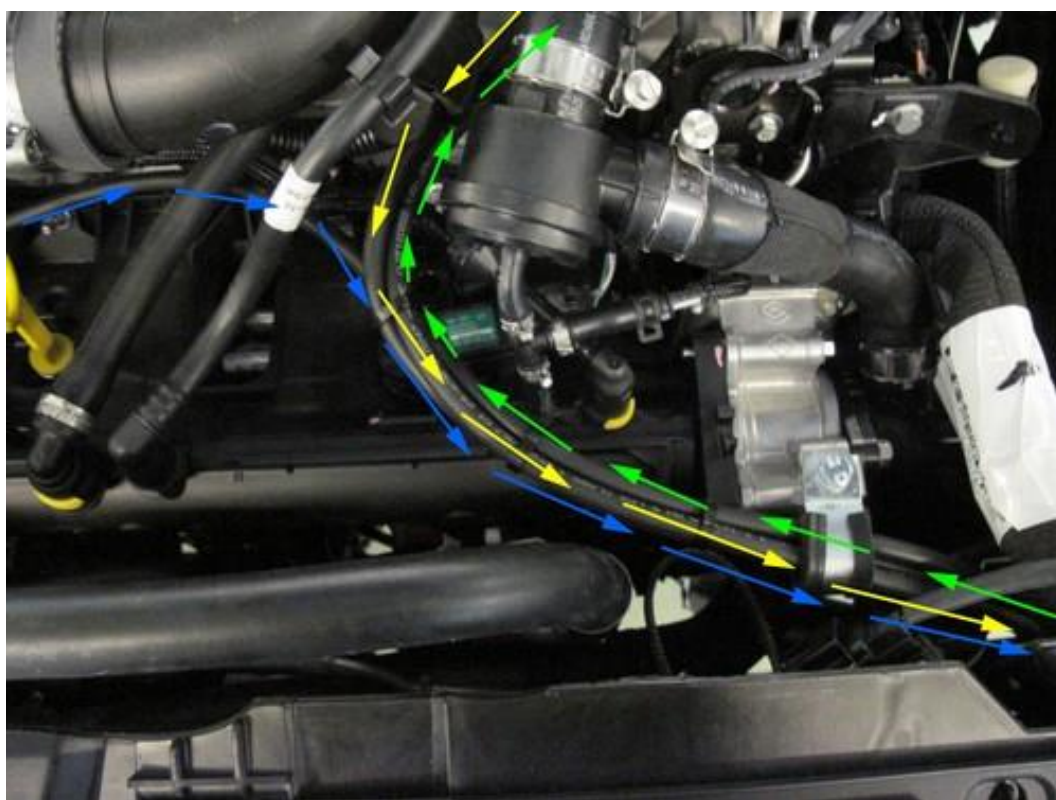



Overview fuel lines.

Supply hose – Return hose – Tank wiring


Protect the supply- and return hose together with tank-wiring using the Ø16 split tube. Mount the “hose assembly “ with clamps, with a maximum distance of 40cm.

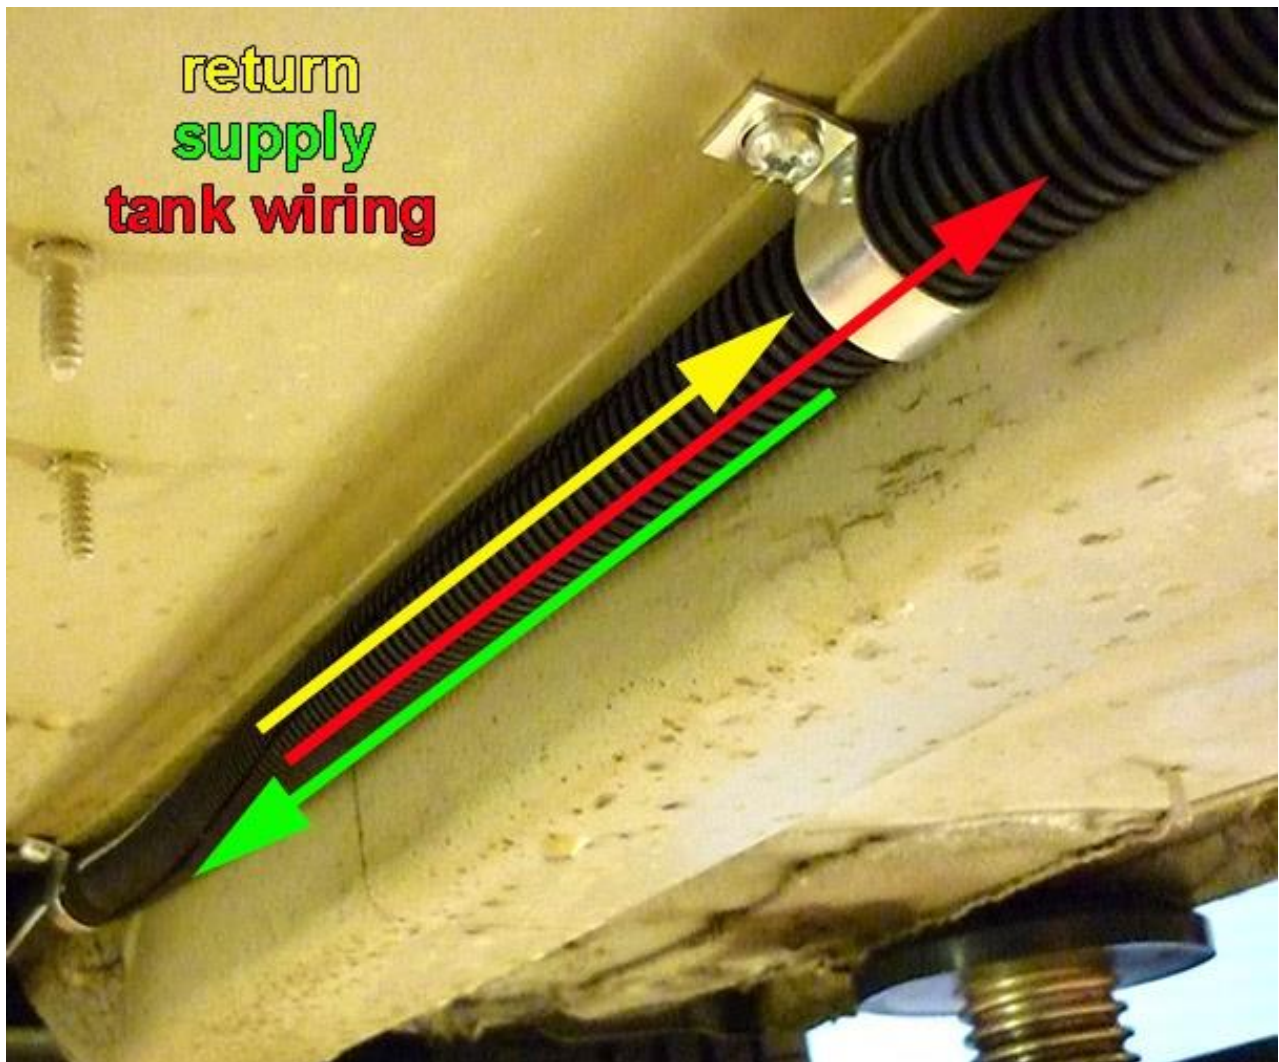



Hose / wiring routing to tank - 1

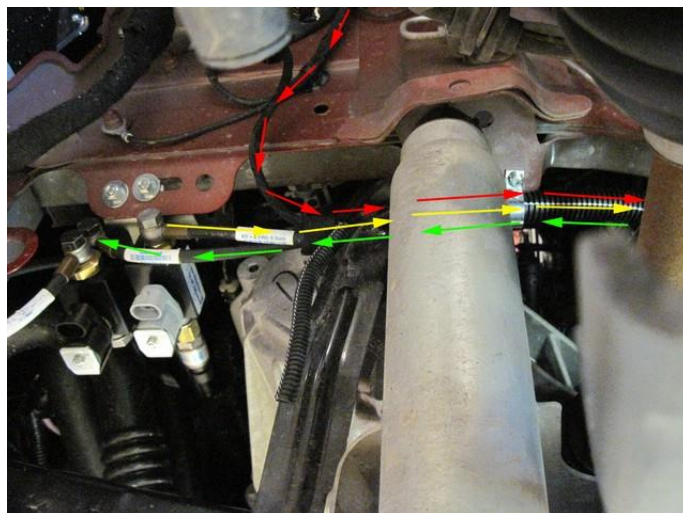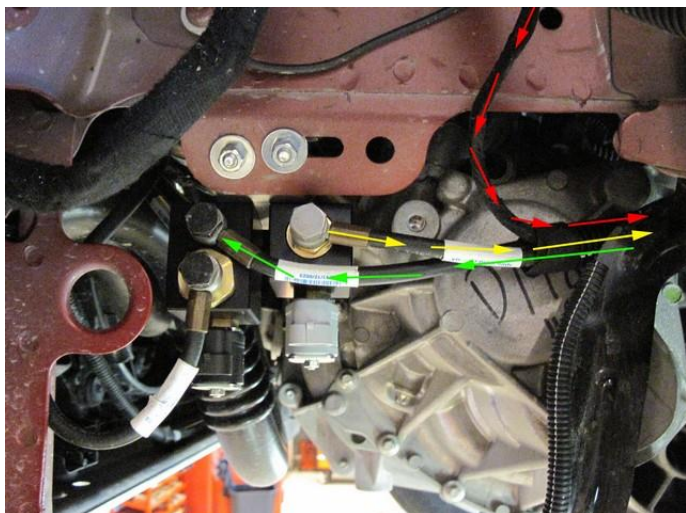



Pull out wiring for wake-up, switch, CAN & fused +Battery.

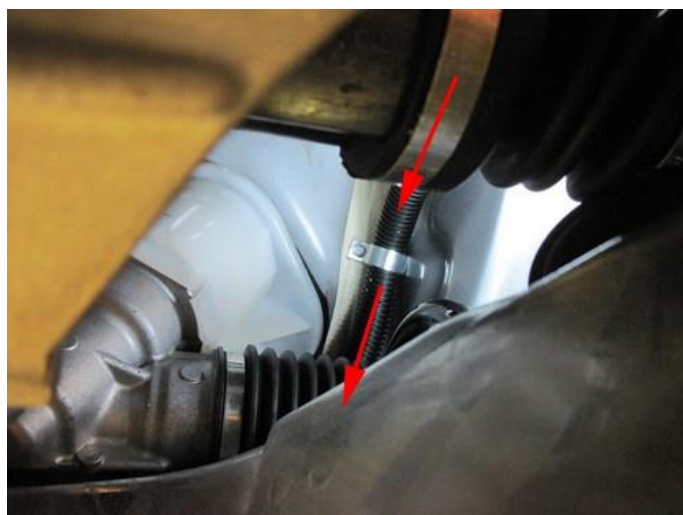


Hose / wiring routing to tank - 2

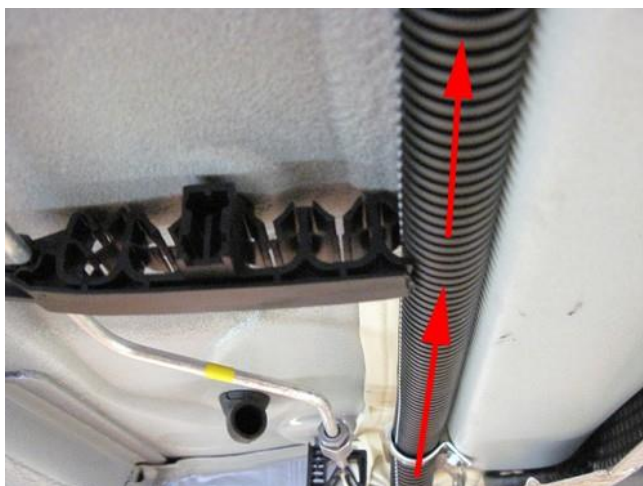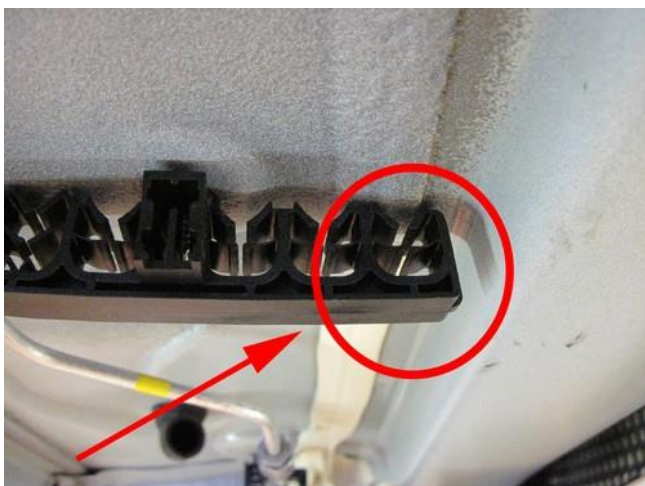

Cut off original clamps where necessary.

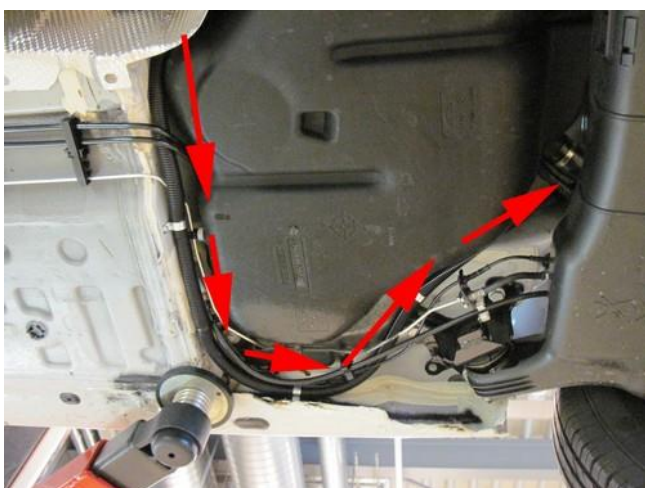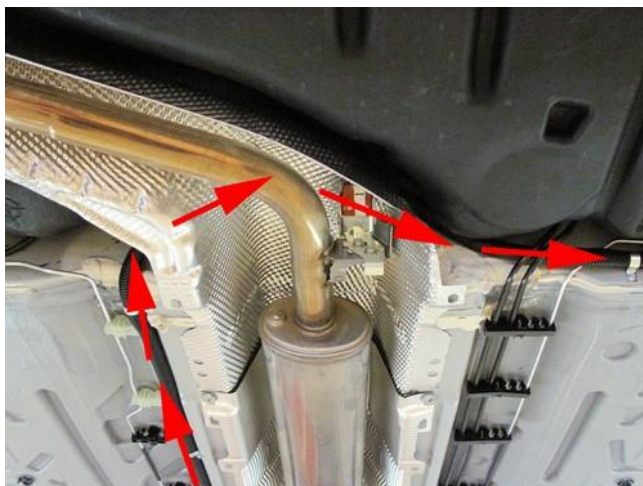

Mounting the AFC

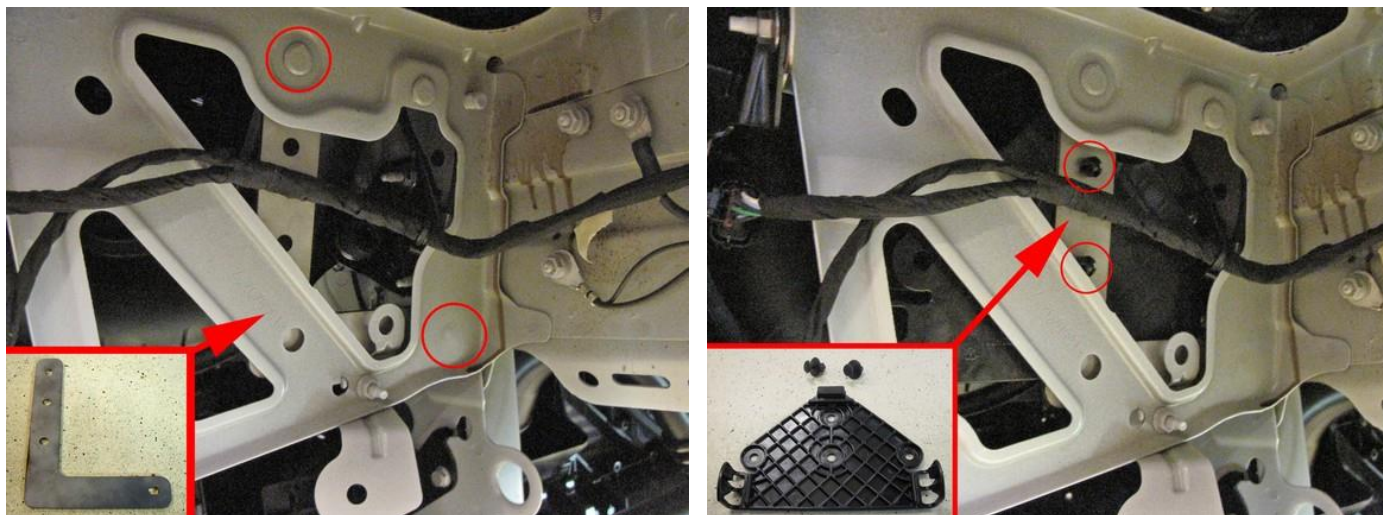


Mount bracket to original threaded rods. Mount plastic AFC-clip to bracket with quick clips.





Mount the AFC.

Wiring routing AFC

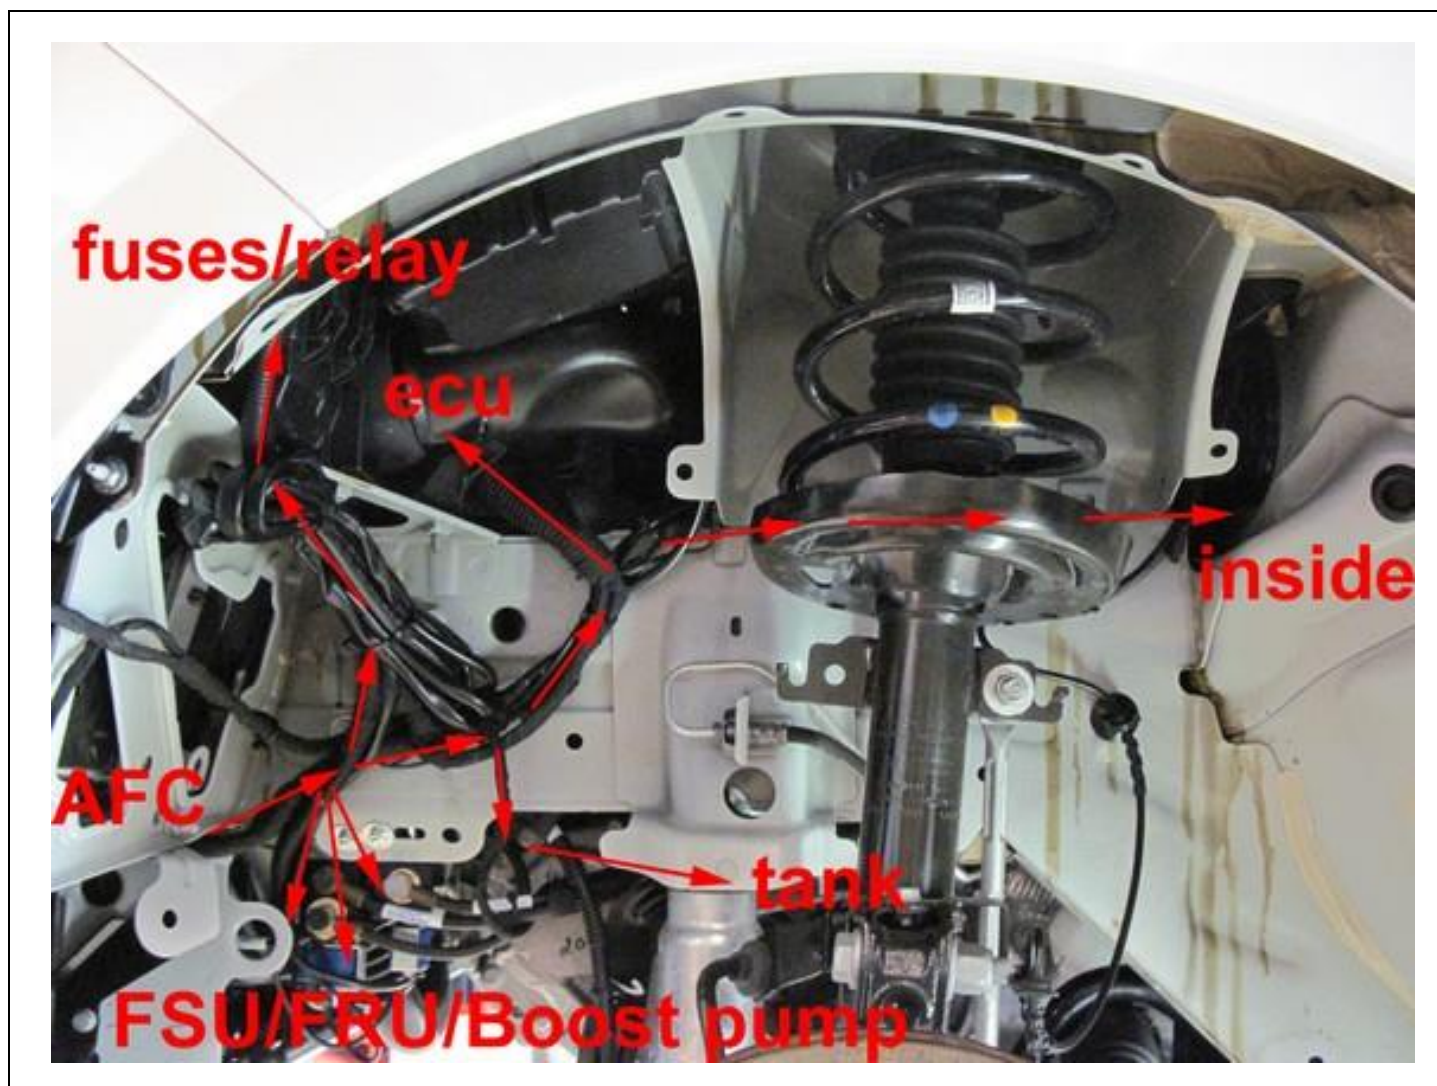


Fuse/Relais box & diagnostic connector

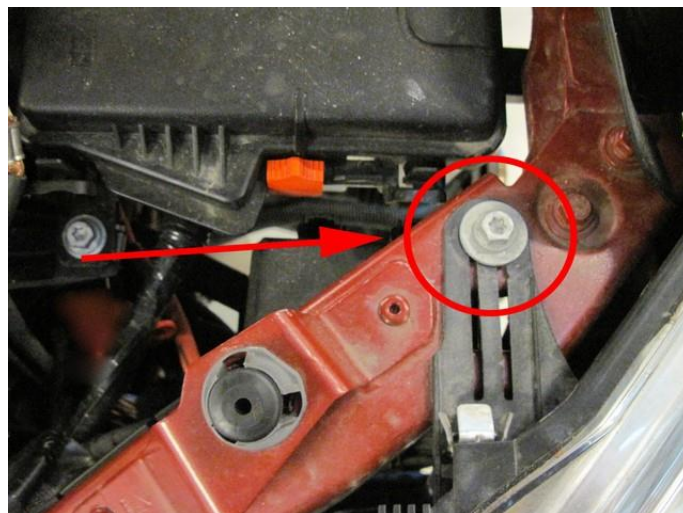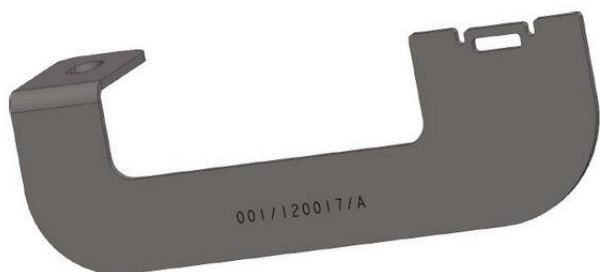

Bracket for fuse/relais box. Mount bracket to original bolt from left head light.




Mount bracket to original bolt from left head light. Mount the box on the bracket.
Mount diagnostic connector to cap from box with a cable tie.

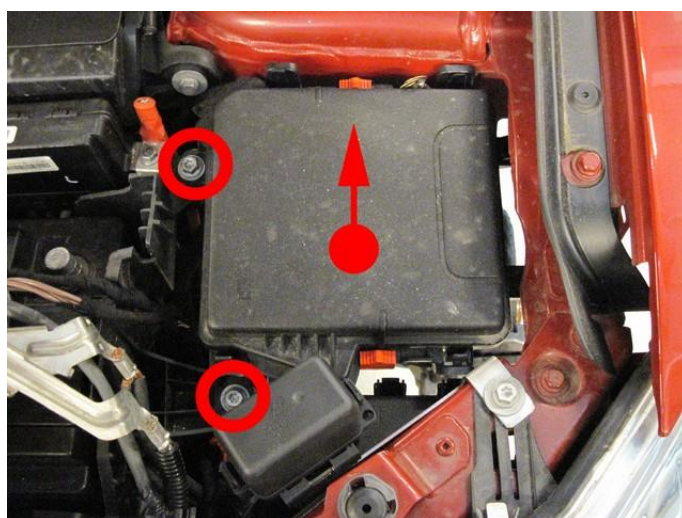

For transferring the box from the AFC to the engine room, lift up fuse box by removing the 2 bolts (see picture).


Grommet / wiring transit

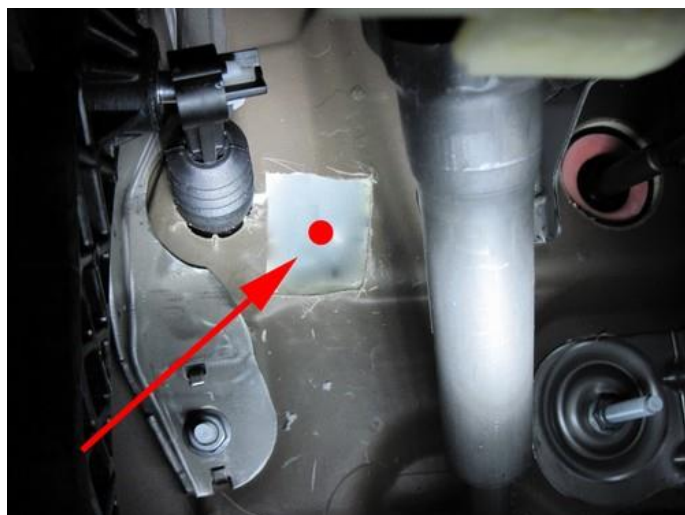

Cut away foam under dashboard (see pictures). Mark hole for drilling.



Drill hole Ø10mm and treat anti rust. Mount grommet.

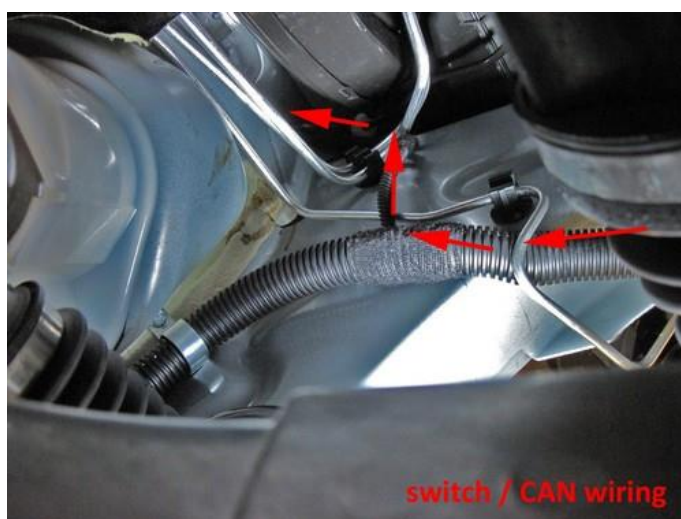

Put wiring through grommet from underneath the car and use a silicone sealant around wiring for a waterproof transit.
Wiring to passenger room: **Switch / CAN / Wake-up / Fused +batt.**

Mounting the fuel selection switch / CAN / Wake-up



To connect wake-up, remove control ECU below dashboard on drivers side.



EOBD connector for CAN.




Space for switch





Drill hole 8,3mm for mounting switch. Mount switch with supplied sticker.

Connecting the fuel gauge reset module 1


The fuel gauge reset module is mounted underneath the back seat.

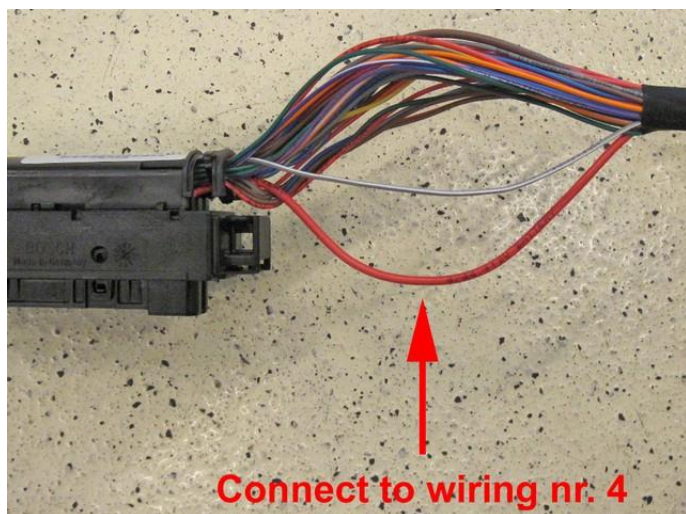

Connect extension wire to wire nr. 4 at AFC connector. Stab wiring together with **Switch / CAN / Wake-up** through grommet.

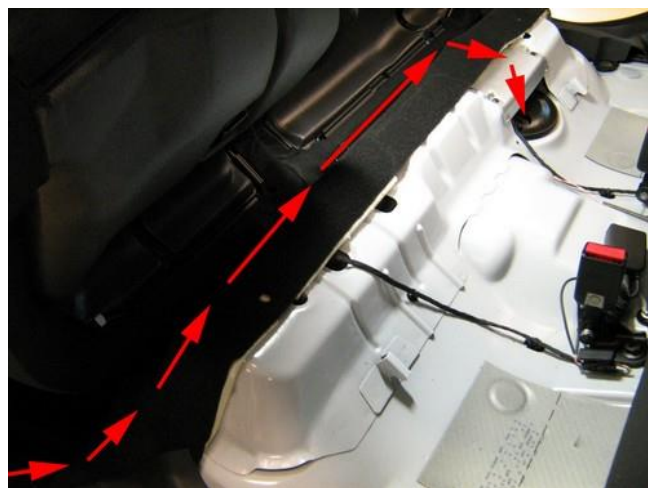
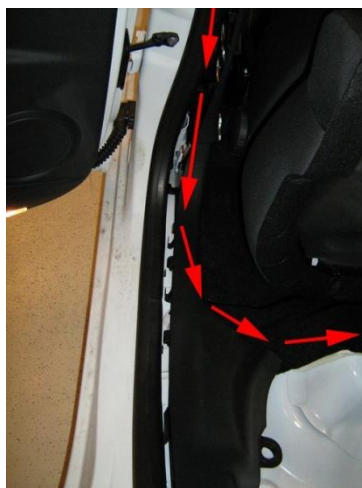


Wiring routing through car. Mount 4.5mm split tube around extension wire.

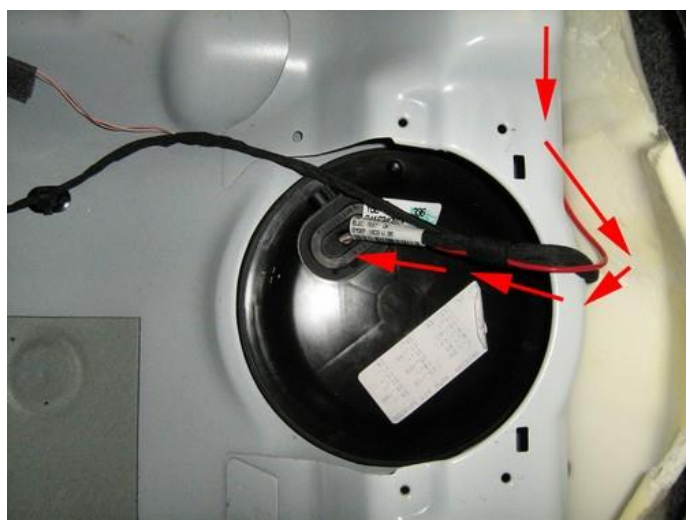


Wiring routing. Remove cover.

Connecting the fuel gauge reset module 2

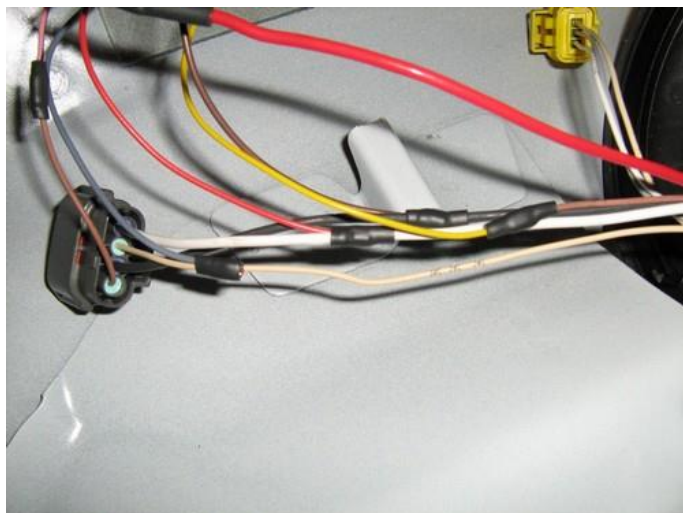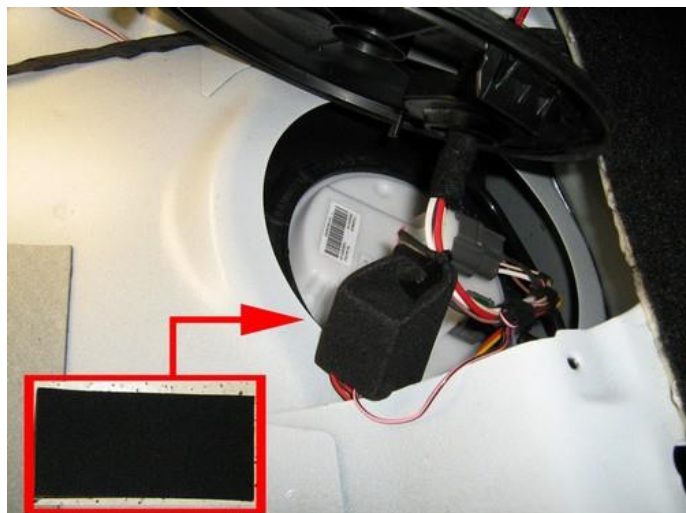

Mount foam around reset module and connect wires to wiring of the fuel tank.
The reset module will be positioned underneath the black cover on top of the fuel pump/tank gauge.

Fuel Reset module

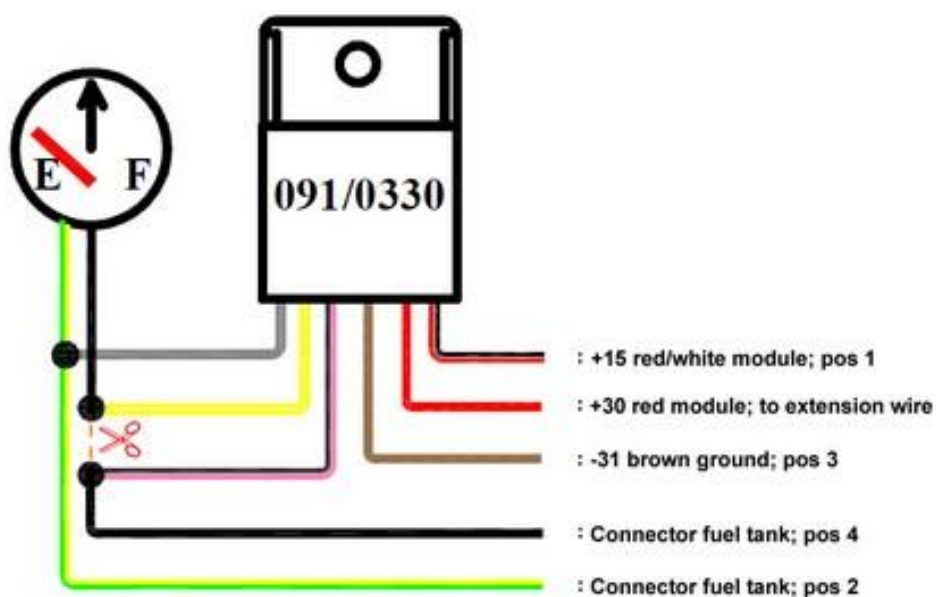

Position 1: White / Position 2: Tan / Position 3: Black / Position 4: Brown

Connect wires to the wiring of the fuel tank and mount back covers and back seat.

Petrol ECU pinnings



If you have to count from A to Q on the connectors, remember: there is no letter "i" on the connector.

A1	B1	C1	D1	E1	F1	G1	H1	J1	K1	L1	M1	N1	O1	P1	Q1
			3AJP		3LP					3LO		3BY		3L	3CR
			X		X					X		X		X	X
A2	B2	C2	D2	E2	F2	G2	H2	J2	K2	L2	M2	N2	O2	P2	Q2
	3ATD	3LN								3AJR				3LC	3CU
		X								X				X	X
A3	B3	C3	D3	E3	F3	G3	H3	J3	K3	L3	M3	N3	O3	P3	Q3
			3BX	3CK		3CH				3EN	3CF	3CG	3CE	3LB	3CT
			X	X		X				X	X	X	X	X	X
A4	B4	C4	D4	E4	F4	G4	H4	J4	K4	L4	M4	N4	O4	P4	Q4
	3TA	3UCB						3A/B	3A/C					3LA	3CS
	X	X						X	X					X	X

Connector 1 (grey)

A1	B1	C1	D1	E1	F1	G1	H1	J1	K1	L1	M1	N1	O1	P1	Q1
	3S				3MD		3BGA	3LX	3ALW	3ALV		3AN		3FB1	3FB2
	MG							X	X	X				X	X
A2	B2	C2	D2	E2	F2	G2	H2	J2	K2	L2	M2	N2	O2	P2	Q2
	3AA		3SV	3SX			3SY	3LJ	3MD	3B1		3BD	3BL	3SZ	
			X	X			X	X	X	X		X	X	X	
A3	B3	C3	D3	E3	F3	G3	H3	J3	K3	L3	M3	N3	O3	P3	Q3
	3BG	3AC		3SW	3LY			3LZ				3ALG		3GF	3ZP
	X	X		X	X			X				X		X	X
A4	B4	C4	D4	E4	F4	G4	H4	J4	K4	L4	M4	N4	O4	P4	Q4
					3DL	3L	3MP		3LK	3AT	3BB	3VL	3K	3GG	3HI
					X	X	X		X	X	X	X	X	X	X

Connector 2 (black)




A	B	C	D	E	F	G	H	
			AP15		3WT	3FB	NH	1
			JA		X	X	NO	
3FX			3BG		3LU	3LR	3LS	2
X			X		X	X	X	
3SN		3PD	3BM		3LW	NH	3LT	3
X		X	X		X	NO	X	
3SM	HK	3BD		5A	3LV	NH	NH	4
X	X	X		X	X	NO	NO	

Connector 3 (black)

Electrical connections


Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.


Driver room / inside

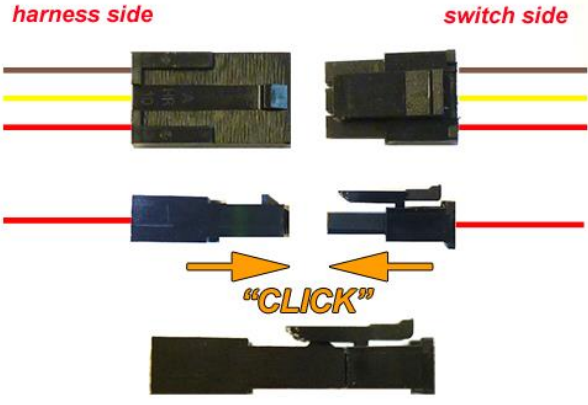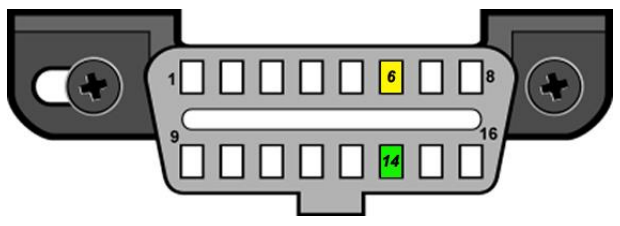Wire number / code	Wire colour	Connection
3-pole micro connector 66 Ground fuel switch 3 +12V fuel switch 49 LIN fuel switch	Brown-black Red-white Yellow	Connect the 3-pole connector to the Prins fuel selection switch.
		
51 CAN-High 70 CAN-Low	Yellow Green	EOBD connector pin 6 EOBD connector pin 14
		
40 <u>Inside!</u>	Wake-up Red-grey	<p>Car wake-up Wire colour : pink Wire location : C21 (control ECU below dashboard, see picture)</p>  <p>See page 27</p>

Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

1-32 MAIN GND ecu MAIN GROUND SENSE	Brown	Connect to the '-' of the battery (-31) ; use a ring terminal. Wire location : ground on battery 
4 – 13 +12V BATT sense +12V BATT fused +12V BATT boost pump +12V BATT pump driver	Red	Connect to the '+' of the battery (+30) ; use a ring terminal. Do not place the fuse in the holder before having completed the installation of the lpg system. Wire location : +Batt on battery (see picture above)

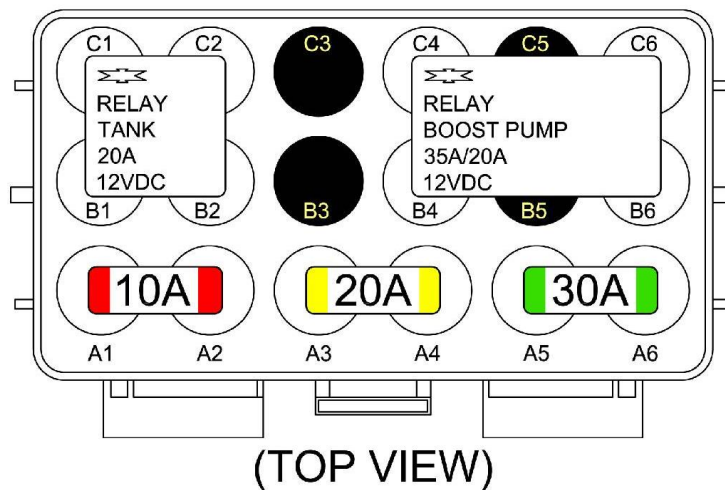

Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Wire number / code	Wire colour	Connection
36&25		High pressure petrol sensor signal interruption Wire colour : pink-black Wire location : Connector 2 petrol ECU → F3
36 AD 6	Blue-brown	Sensor side
25 DAC 1	Green-white	Petrol ecu side
63 Ground Shift	Blue-orange	High pressure petrol sensor ground Wire colour : purple Wire location : Connector 2 petrol ECU → J3
60 DI3	Grey-red	High pressure petrol sensor 5Volt supply Wire colour : white Wire location : Connector 2 petrol ECU → J1
8 RPM engine speed	Purple-white	For measuring the engine speed signal. Wire colour : pink-black Wire location : Connector 2 petrol ECU → D2
15 T-ect	Grey	For measuring the engine coolant temperature. Wire colour : green-red Wire location : Connector 2 petrol ECU → G4
18 AD 1	Blue-white	For measuring the inlet manifold pressure from the MAP sensor Wire colour : green-black Wire location : Connector 1 petrol ECU → B2
7 +12V IGNITION	Grey - white	Make a connection to +ignition / contact+ (+15). Do not place the fuses in the holder before having completed the installation of the lpg system. Wire colour : yellow Wire location : Connector 3 petrol ECU → D1

Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

<i>Wire number / code</i>	<i>Wire colour</i>	
10 DAC 2	Green	insulate
17 AD 2	Blue-green	insulate
19 AD 4	Blue	insulate
20 AD 3	Blue-pink	insulate
21 AD 9	Blue-purple	insulate
22 LSS 1	Purple-white	insulate
23 LSS 2	Purple-green	insulate
42 Digital out pull up 2	Red-purple	insulate
56 DI 2	Yellow-green	insulate
58 +12V switched	Red-white	insulate
61 DI4	Yellow-blue	insulate
74 DAC 3	Green-pink	Insulate
		<i>Insulate additional loose wires !</i>


Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Engine room

Wire number / code	Wire colour	Connection
3-pole connector		
35 Ground Psys pin A	Brown	Connect the 3-pole connector to the Psys sensor positioned into the Fuel Return Unit.
9 +5V sensor pin B	Red-blue	Sensor wire pin A
16 Psys pin C	Green	Sensor wire pin B
		Sensor wire pin C
2-pole connector FSU, black		
24 + Lock-off FSU	Yellow-green	Connect the 2-pole connector to the lock-off valve of the Fuel Supply Unit
31 C Ground	Brown-black	
2-pole connector FRU, grey		
43 + Lock-off FRU	Red-white	Connect the 2-pole connector to the lock-off valve of the Fuel Return Unit
34 C Ground	Brown-black	
4-pole diagnose connector		
46 Service TxD	Grey	Diagnose connector for service / diagnosis
65 Service RxD	Grey	Connector pin 1
68 C Ground	Brown-black	Connector pin 2
		Connector pin 4
Boost pump relay		
2 + relay boost pump	Red-white	Pin 86 of the boost pump relay C4
26 Ground BP relay	Purple-blue	Pin 85 of the boost pump relay B6
+12V fused BATT	Red 2.5mm2	Pin 30 of the boost pump relay C6-A5
+12V Boost pump	Red 2.5mm2	Pin 87 of the boost pump relay B4
Wiring tank pump driver relay		
57 + driver relay	Red-white	Pin 86 of the driver relay C1
73 LSS 4 tank relay	Purple-blue	Pin 85 of the driver relay B2
+12V BATT fused	Red 2.5mm2	Pin 30 of the driver relay C2-A4
+12V driver	Red 2.5mm2	Pin 87 of the driver relay B1

Boost pump connection options:

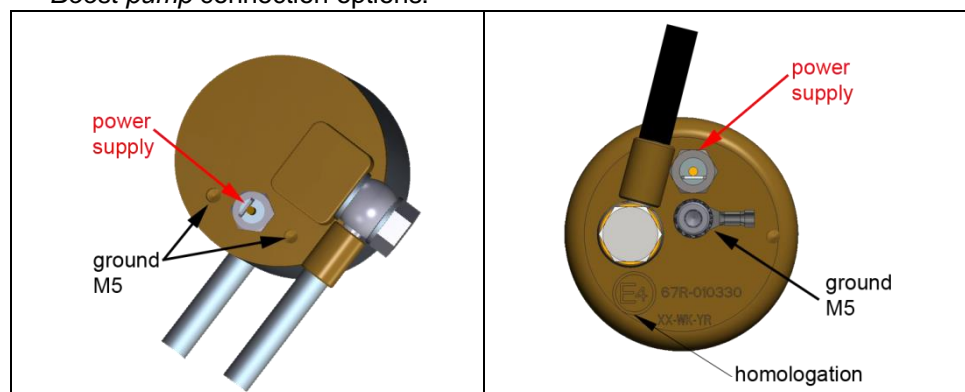


Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Lpg tank housing

Wire number / code	Wire colour	Connection
3-pole tank level connector 33 Ground tank gauge 12 Tank level in 11 + tank level supply	Brown-black Blue Red-blue	Connect the 3-pole connector to the tank level sensor.
2-pole driver connector 71 LSS 3 PWM driver 64 AD 5 driver diagnose	Purple-pink Blue-grey	Connect the 2-pole connector to the pump driver (4).
1. 2-pole connector tank lock-off	Green-yellow Brown	From tank pump driver From tank pump driver
2. 3-pole connector tank pump	Red 2.5mm ² Brown 2.5mm ²	From tank pump driver From tank pump driver
3. 2-pole connector power driver	Red 2.5mm ² Brown 2.5mm ²	From tank pump relay From main ground
4. 2-pole connector driver	Green Grey	From AFC pin 71 pwm From AFC pin 64 diagnose

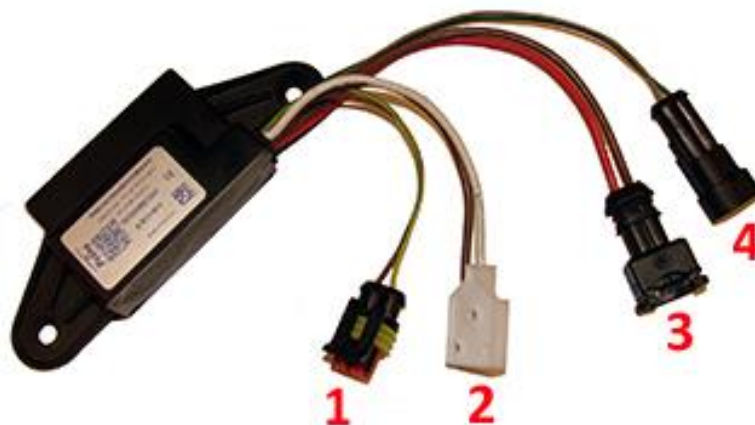

Checklist after installation

1. Install the system fuses.
Turn on ignition.
Connect the Prins interface wire and run the Prins diagnosis program.
When working on the car, beware of moving and rotating parts in the engine compartment (even when the engine is not running !!).
2. When commissioning the LPG system, you must activate the AFC with the diagnosis software.
3. Check whether the program in the AFC matches with the car (dedicated engine set):
See "Identification" in the diagnosis program.
4. Check all components and connections for any LPG leakage, use a LPG leak detector device or a fluid detection like soap. Also check for petrol leakage. Make sure the solenoid valves are in open position.
No evidence of leakage is permitted.
Caution for moving and rotating parts in the engine compartment !
5. Use the diagnosis software to check again all input and output signals.
6. Check the system for error codes and solve these, if required.
Check the petrol MMS for EOBD error codes.
Place the protection connector back on the diagnose connector.
7. Make a test drive and check the cars drivability on LPG and petrol.