



Quality, innovation and customer care, it's in our nature



Installation manual Dedicated PART 2/2

MANUFACTURER
TYPE
ENGINE DISPLACEMENT
NUMBER OF VALVES
ENGINE CODE / NUMBER
VEHICLE CATEGORIES
TRANSMISSION
VERSION
PETROL ECU MANUFACTURER / CODE
HIGH PRESSURE PETROL PUMP

HIGH PRESSURE PETROL INJECTOR
MODEL YEAR:
SYSTEM APPROVAL NUMBER (R115)
LOCATION SYSTEM STICKER
ENGINE SET NUMBER
MANUAL NUMBER
DATE

SKODA
OCTAVIA
1800
16V
CDAB
M
MT

Direct LiquiMax-2.0
BOSCH MED 17.5
Bosch HDP-5-PE 0261.520.(055)/(056)
/(069)/(070)/(089)/(090)/(132)/(133)
Bosch HDEV-5-1 0261.500.(057)/(58)/(74)(75)
2009>
E4-115R-000010 / DLM-LPG 03
right side, centre door post
364/070011/A
076/3601300
2014-04-03

Copyright © Prins Autogassystemen B.V. 2012

Version 13-08-2012 D



TABLE OF CONTENTS

General instructions	2
Required equipment / tools / materials for installing a complete system	3
Vehicle check.....	3
Tightening moments.....	4
Direct LiquiMax	5
Overview Direct Liqui Max	6
Direct Liqui Max parts / approval numbers	7
Mounting and connection points	8
Removal of the Bosch High Pressure Pump.....	9
Installation of the Bosch High Pressure Pump	10
High pressure pump installation.....	11
High pressure pump Supply connection.....	12
Mounting the Fuel Supply and Return Unit	14
Boost pump place and connection of the fuel hose to the boost pump.	15
Map sensor	16
Lpg / petrol fuel lines.....	17
Supply hose – Return hose – Tank wiring.....	18
Hose routing.....	19
Mounting the AFC	20
Mounting the AFC and petrol ecu	21
Wiring routing.....	22
Mounting the fuel selection switch	23
Mounting the fuel selection switch	23
Fuses / Relay	24
Electrical connections.....	25
Electrical connections.....	26
Electrical connections.....	27
Electrical connections.....	28
Checklist after installation.....	29

FOR EXPLANATION AND CIRCUIT DIAGRAMS SEE : INSTALLATION MANUAL GENERAL PART 1 / 2



General instructions

- The installation of the system shall be done in accordance with the installation manual provided by Prins Autogassystemen.
- This manual is based on Dutch regulations, always install the system in accordance to the local regulations.
- For an optimal functioning of the Direct Liqui Max system, maintain a clean and organized work environment during installation and maintenance to prevent pollution of the LPG components.
- Always download the “general manual 1/2 “ from our website for basic instructions and diagrams.
- Always disconnect the battery when installing the lpg system. Make sure the ignition key is outside the car. Be aware of central door locking, radio / telephone memory code, alarm system.
- Wear safety goggles when working on petrol filled system / connections (pressurized petrol)
- Do not place the main fuse into the fuse holder before having completed the installation of the system.
- The lpg computer has to be activated by means of the Prins diagnosis software.
- Never disconnect the lpg computer connector, unless you have removed the main fuse.
- When installing the wiring harness, ensure that it does not run near any of the ignition components.

Solder and insulate all electrical connections.

The wires in the loom are provided with numbers and text. The text on the wire explains the function of the wire. The wire harness is not model specific, therefore it may be necessary to adjust the length of the wires. Ensure maximum care is taken when connecting wiring.

Make professional joints using solder and shrink sleeve. Do not stretch the wiring harness.

- No component of the LPG-system shall be located within 100 mm of the exhaust or similar heat source, unless such components are adequately shielded against heat.
- If holes have to be drilled (wear safety glasses) for installing brackets, etc., the drilled holes must always be treated with an anti-corrosion agent, after the chips have been removed (especially when mounting a exterior filler into body work).
- After having completed the installation, check the whole system for lpg leakage; use a lpg leak detection device. Also check for leak of engine coolant, petrol and air.
- Fitting and maintenance is only allowed by Prins Autogassystemen selected LPG engineers.
- Failure to follow the instructions in this manual can result in a poor or non-working lpg installation or a dangerous situation.
- For maintenance instructions and filter registration see owner manual.
- Prins Autogassystemen is not responsible for any damages to people or objects as a result of changes to Prins products.
- Check our website regularly for diagrams, certificates, updates, info-bulletins and product information.

Register (warranty card) the system on the Prins warranty portal .



Required equipment / tools / materials for installing a complete system

- Complete workshop toolbox (wrenches, screwdrivers, cutters, pliers, ratchet, sockets)
- Car lift
- Portable computer : operating on Windows 98, W2000 or XP.
- Internal memory : 16 Mb or more
- Memory HD space : 5MB
- Screen : 256 colours, advise colours 16 bits or more
- Com port : 1 free COM port 1 or COM port 2 with a 9 or 25 pins connector
- Vehicle fuel system scan tool or OBD scan tool Prins (part nr. 099/99928)
- Exhaust gas analyser
- Multimeter
- Oscilloscope
- Prins diagnostic software
- Prins serial interface
- Torque wrench (10Nm)
- Torque wrench (200-250Nm)
- Portable light
- Assortment drill bits 4 to 12 mm
- Assortment cutters (ø 20, 30, 50, 70 mm)
- Portable drill or pneumatic drill
- Thread cutting device (male M6x1, M8x1, M10x1)
- Socket 46mm
- Air gun
- Vacuum cleaner
- Safety goggles
- Hot air gun
- Soldering iron, soldering tin
- Wire-stripping pliers
- Adhesive tape
- Adhesive sealant
- Thread locking compound
- Anti-corrosion agent / black body coating
- Gas leak detection device or foam leak spray
- Shrink sleeves

Vehicle check

- Check the vehicle drivability on petrol
- Check the fuel system for error codes (scan tool)
- Check if the catalytic converter is in good condition (exhaust gas analyzer)
- Check the condition of the ignition system (spark plugs, cables, coil)



Tightening moments

	Nm	SW
M 4 x 0,7	3,3	7
M 5 x 0,8	6,5	8
M 6 x 1,0	11,3	10
M 7 x 1,0	14,5	11
M 8 x 1	24,5	13
M 8 x 1,25	27,3	13
M 10 x 1	52	15-16-17
M 10 x 1,5	54	15-16-17
(filtered)Banjo bolt	10	14
Supply line connection	15	13
Fuel module Allen bolts	20	7
Filler hose connection	50	22

EXPLANATION OF SYMBOLS :




= IMPORTANT,
CAUTION



= WEAR SAFETY GOGGLES





Direct LiquiMax

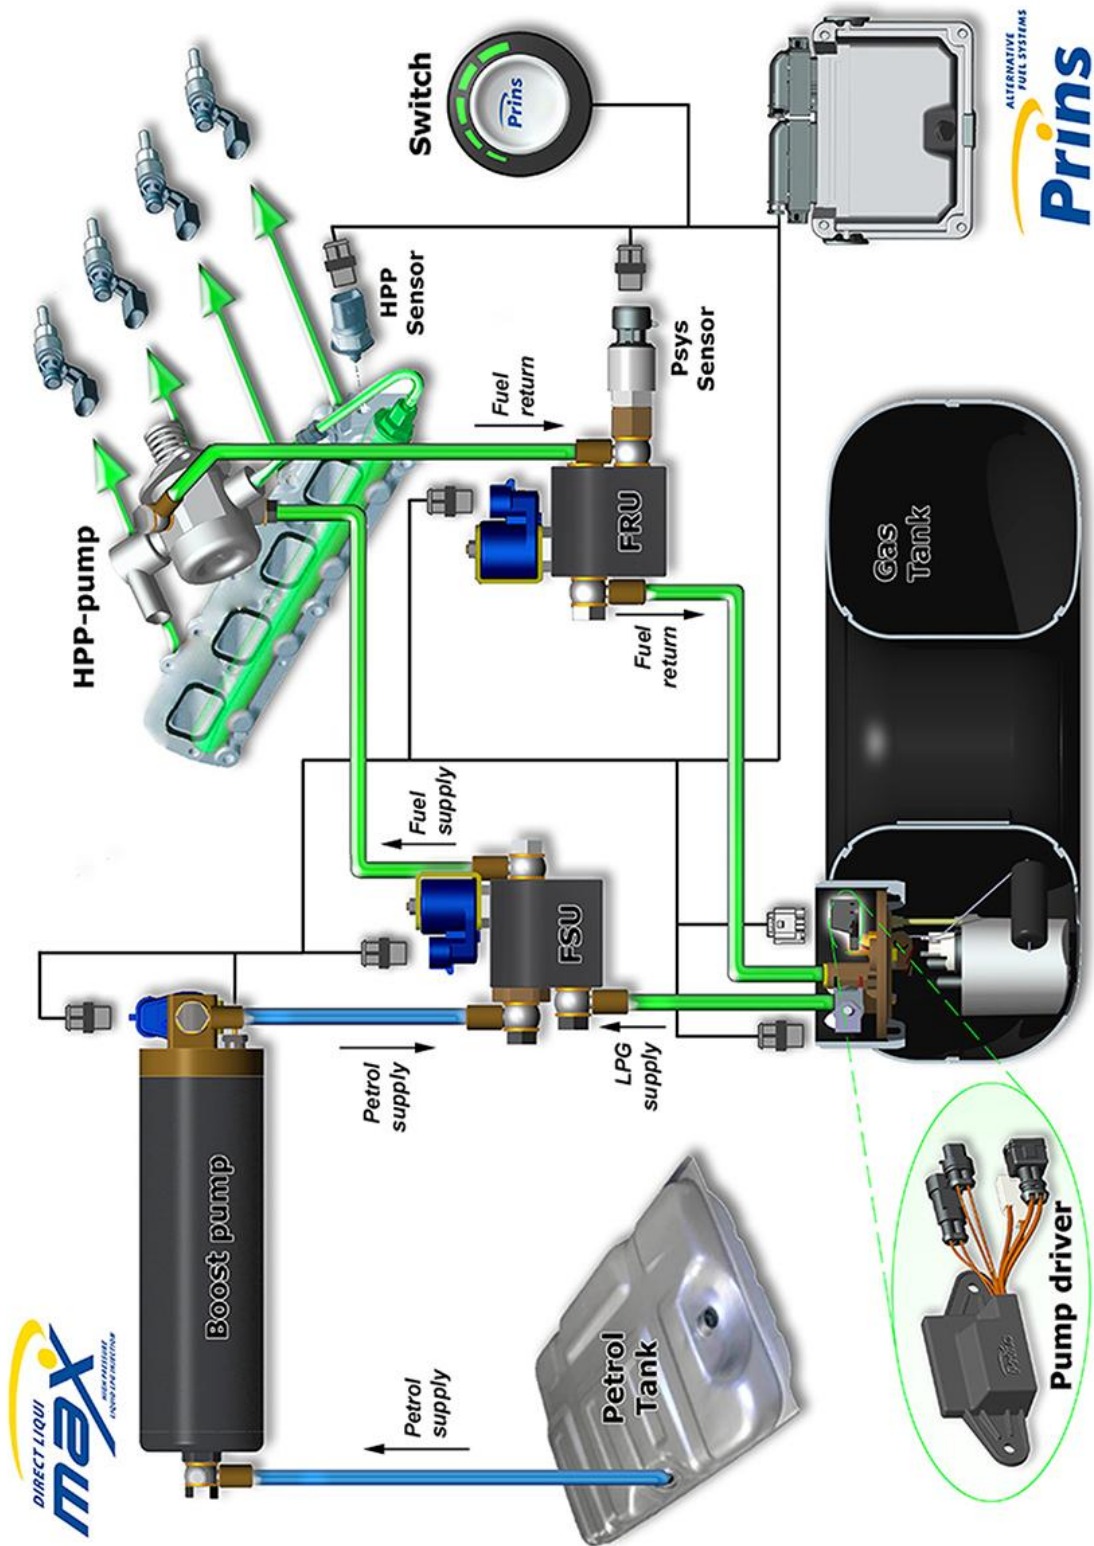

Overview Direct Liqui Max

overview Direct Liqui Max

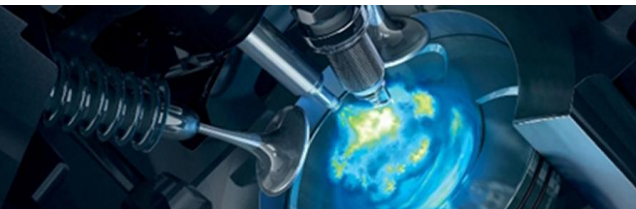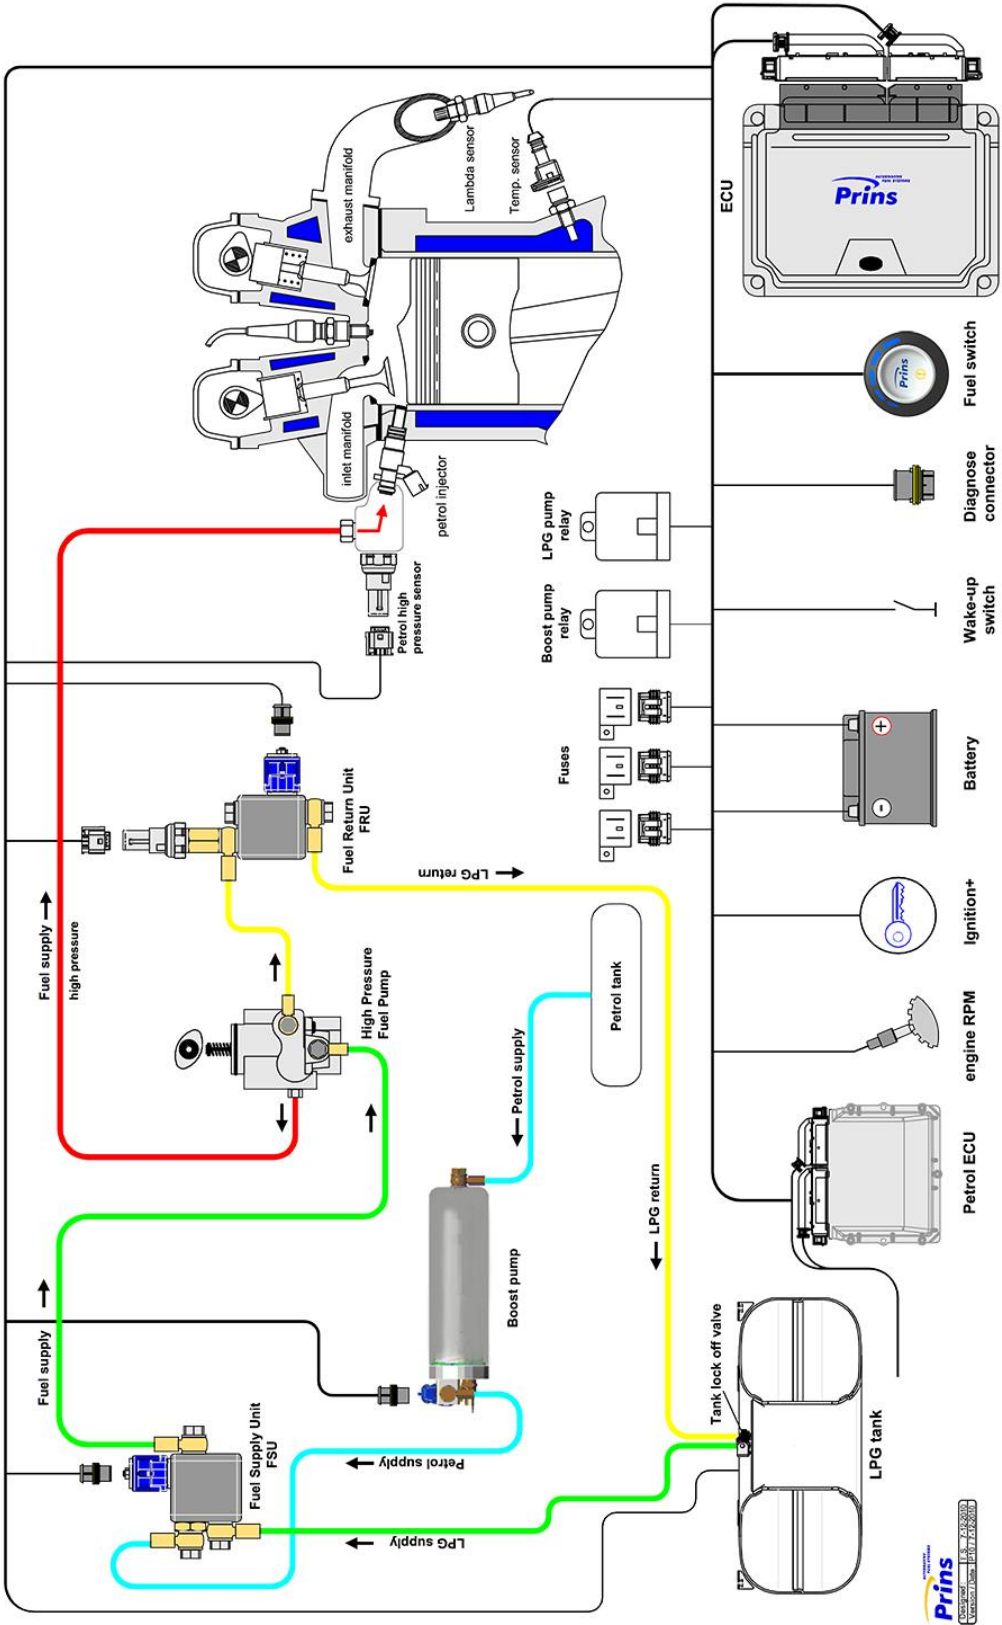

Direct Liqui Max parts / approval numbers

 <p>1st generation</p>  <p>2nd generation</p>	 <p>1st generation</p>  <p>2nd generation</p>
<p>Fuel Supply Unit : E4-67R-010269</p>	<p>Fuel Return Unit : E4-67R-010270 Pressure Sensor : E4-67R-010051</p>
	
<p>Boost pump</p>	<p>High Pressure Pump : E4-67R-010266 High Pressure Rail : E4-67R-010267 High Pressure Injectors : E4-67R-010309</p>
	 <p>XD-3 LPG</p>  <p>XD-4 LPG</p>
<p>Prins ECU : E4-67R-010098 E4-10R-030507</p>	<p>Fuel lines series XD : E4-67R-010247 XD3 E4-67R-010247 XD4</p>



Mounting and connection points



A : High pressure petrol pump	L : R115 Approval sticker
B : Fuel Supply Unit : FSU	M : Grommet
C : Fuel Return Unit : FRU	N : Gas system fuses
D : Boost pump	P : T-ect
E : Lpg computer	Q : Low pressure signal
F : Boost pump relay	R : MAP, Analog 3
G : Tank relay	S : Analog 2
H : Petrol ECU	T : Analog 4
I : Engine speed signal RPM	V : Digital input 3
J : “+” ignition	W : Wake-Up
K : High pressure signal Analog 1	X : Can High ,Low DLM Switch



L:
R115 approval sticker :
Right side centre door post



Removal of the Bosch High Pressure Pump

-REMOVAL-


-WARNING-

In case of removing the high pressure fuel pump, high pressure fuel pipe, delivery pipe, there may be injury caused by leakage of the high pressure fuel.
Don't do any repair work right after engine stops (HOT engine).

- Turn the ignition switch OFF and disconnect the battery negative (-) cable.
- Wear safety goggles.
- Disconnect the fuel pressure regulator valve connector
- Disconnect the High Pressure fuel feed pipe (B)
- Remove the Low Pressure fuel pipe / hose (A).
- Remove the installation bolts (E), and then remove the high pressure fuel pump from the cylinder head assembly.

CAUTION:

Unscrew in turn the two bolts in small steps (0.5 turns). In case of fully unscrewing one of the two bolts with the other bolt installed, the housing surface of the cylinder head may break because of tension of the pump spring.

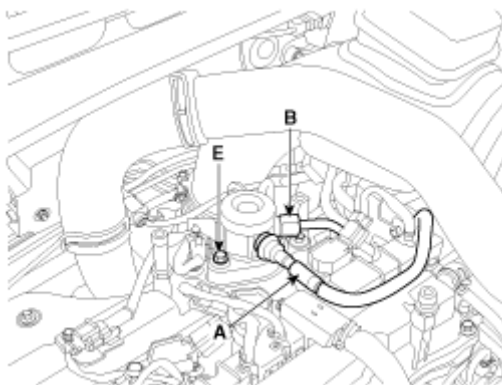

CAREFULLY store the removed petrol pump. Make sure no pollution can come into the pump.




Installation of the Bosch High Pressure Pump

INSTALLATION

Before installing the high pressure fuel pump, position the roller tappet (**B&C**) in the lowest position by rotating the crankshaft. Otherwise the installation bolts may be broken because of tension of the pump spring.

Apply engine oil to the O-ring (**A**) of the high pressure fuel pump, the roller tappet (**B**), and the protrusion (**C**). (roller tappet, only if removed from cylinder head)
Also apply engine oil to the groove on the location where the protrusion (**C**) is installed.

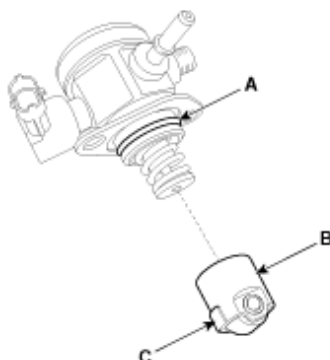

Installation bolts:

When tightening the installation bolts of the high pressure fuel pump, tighten and turn the bolts in small step (0.5 turns) after tightening them with hand-screwed torque.

High pressure fuel pump installation bolt: 12.8 ~ 14.7 N.m

Fuel pipe:

First hand-tighten the nut(s) fully until they are not fastened any more in order to have them inserted in place and then completely tighten to the specified torque using a torque wrench.
If not tightening the bolts or nuts in a straight line with the mating bolt holes or fittings, it may cause a fuel leak due to broken threads.

High pressure fuel pipe installation nut: 26.5 ~ 32.4 N.m


Installation is reverse of removal.



High pressure pump installation




Replace the high pressure pump for the adapted high pressure pump.
(Follow the workshop manual of the car)




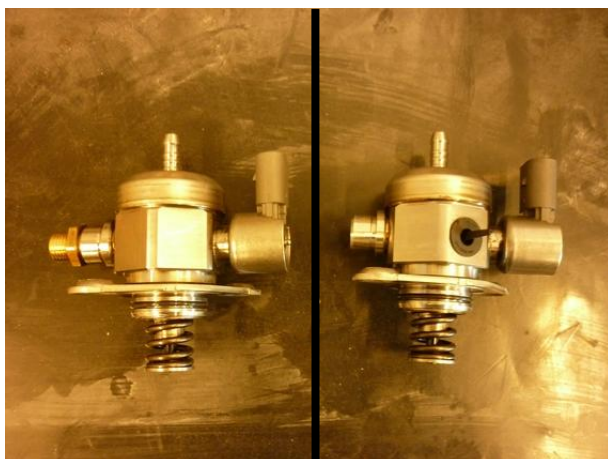


Original high pressure pump. Adapted high pressure pump.



High pressure pump Supply connection

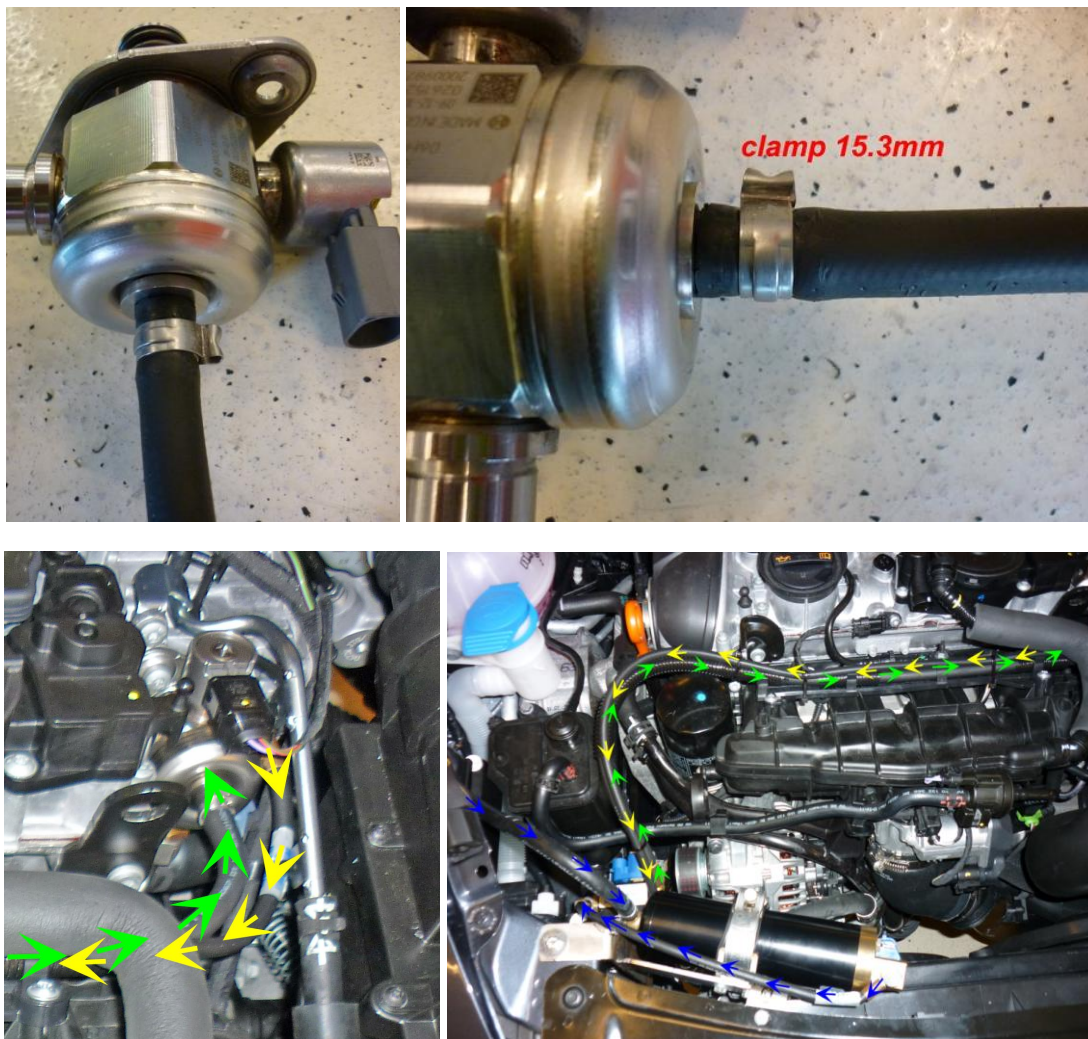

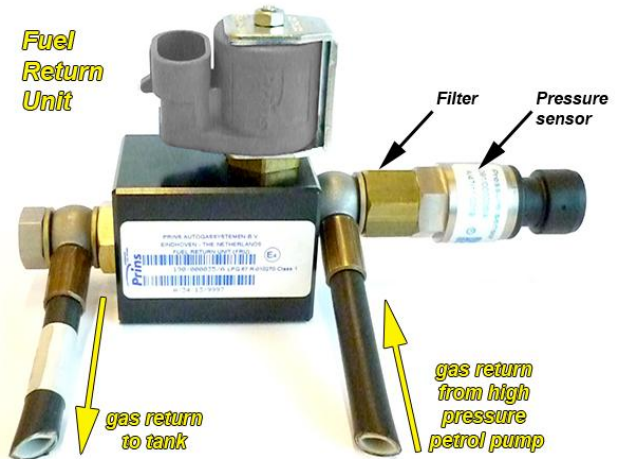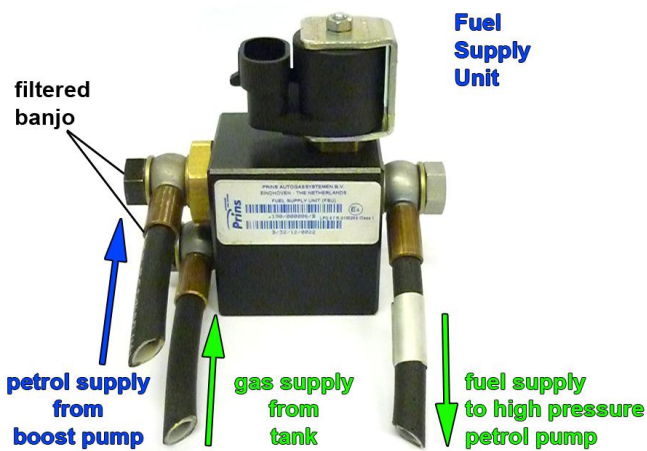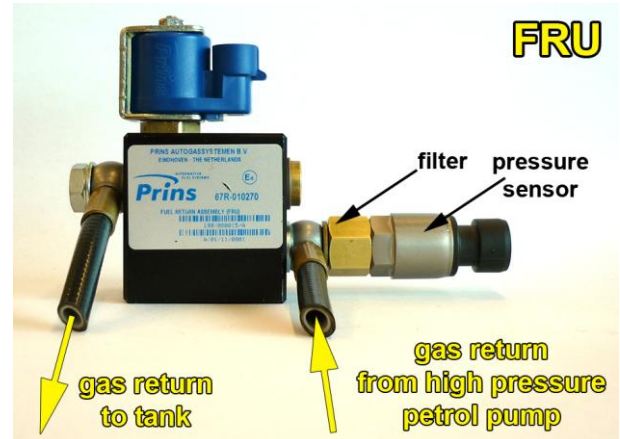
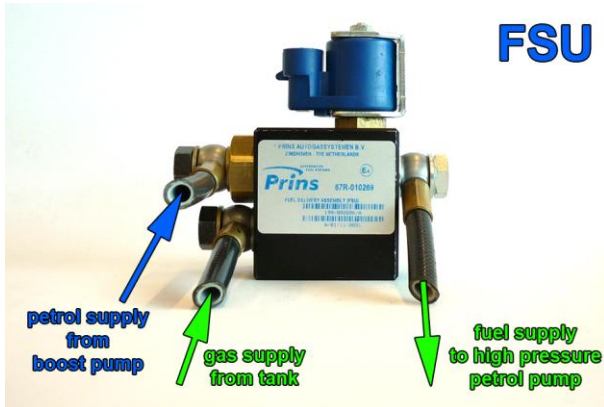


Black filtered banjo will only be used on inlet connections !

Filter inside sensor banjo



Mounting the Fuel Supply and Return Unit

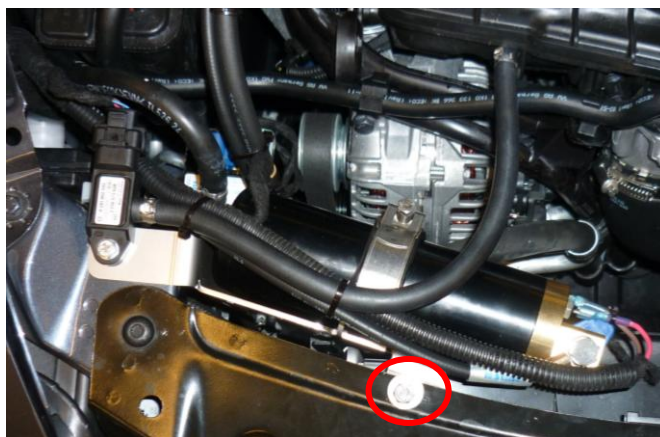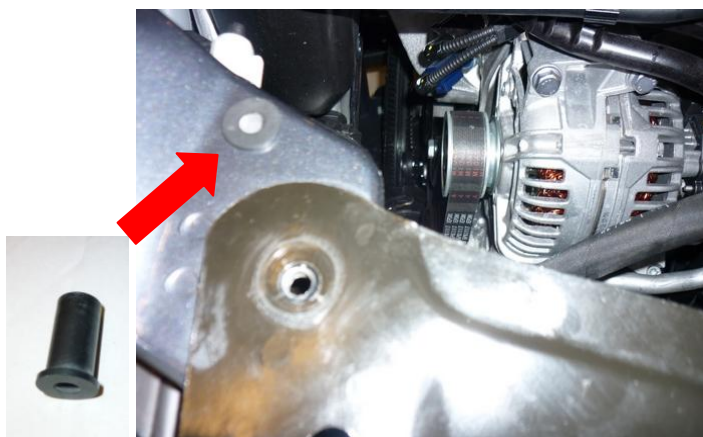


Drill a hole $\varnothing 7\text{mm}$

Insert the fuel line from bottom to top and car mount the fuel line to the FRU and FSU unit.

Attention!!!! Place the fuel line with space so you can still service the system.



Boost pump place and connection of the fuel hose to the boost pump.

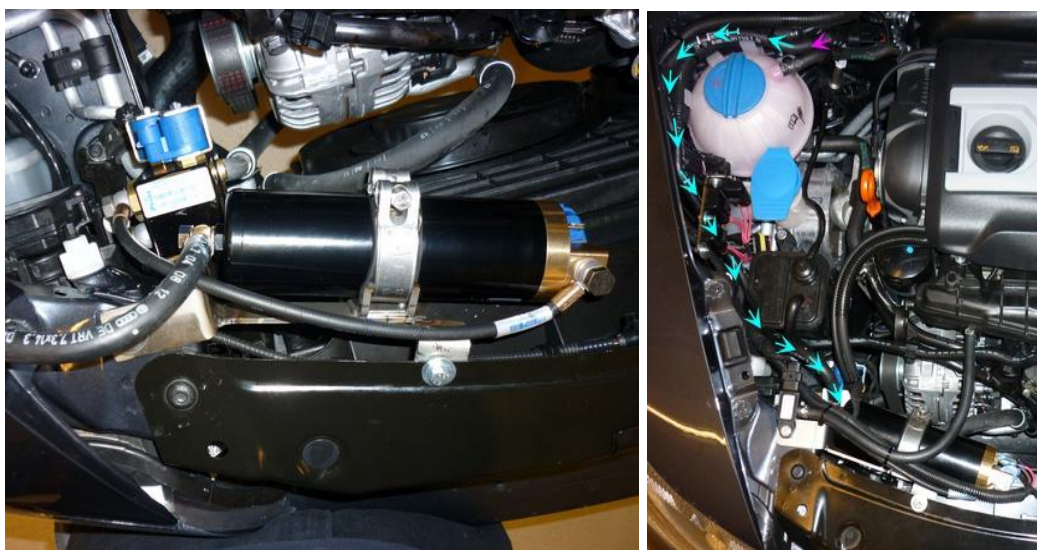



Connect the original fuel hose (with a XD-5 banjo eye and 15,3 clamp) to the boost pump.



181/300009/A



Map sensor

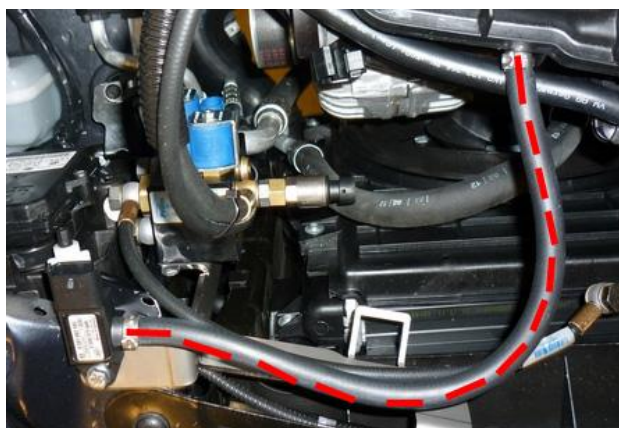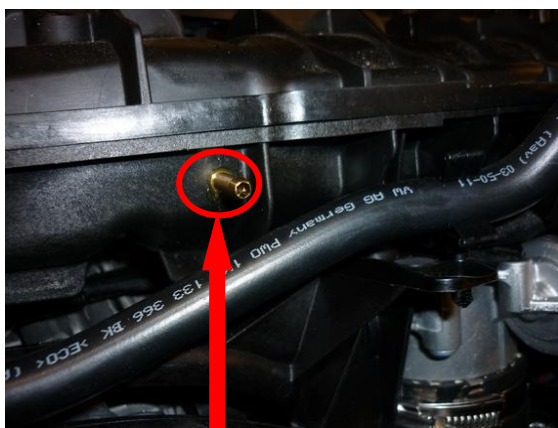

Drill a hole and tap it Ø5 thread M6




Lpg / petrol fuel lines

Hose	from	to	Length (cm)
	Adapter original petrol hose	Petrol boost pump	XD-5 banjo eye
XD-	Fuel supply unit	High pressure petrol pump	25
XD-	Petrol boost pump	Fuel supply unit	20
XD-	Fuel return unit	High pressure petrol pump	20
XD-	Fuel return unit	High pressure petrol rail	n.a.



Install the fuel line using two bonded seal washers and banjo bolt :

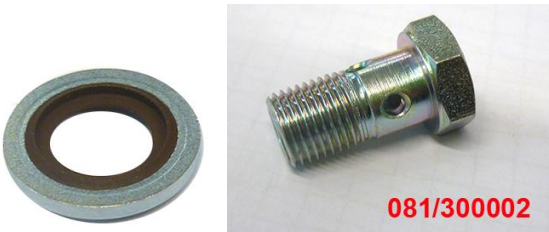


Filtered banjo: (FSU supply inlets / boost pump inlet : black filtered banjo) :





Supply hose – Return hose – Tank wiring

Protect the supply- and return hose together with tank-wiring using the Ø16 split tube.
Mount the "hose assembly " with clamps, with a maximum distance of 40cm.

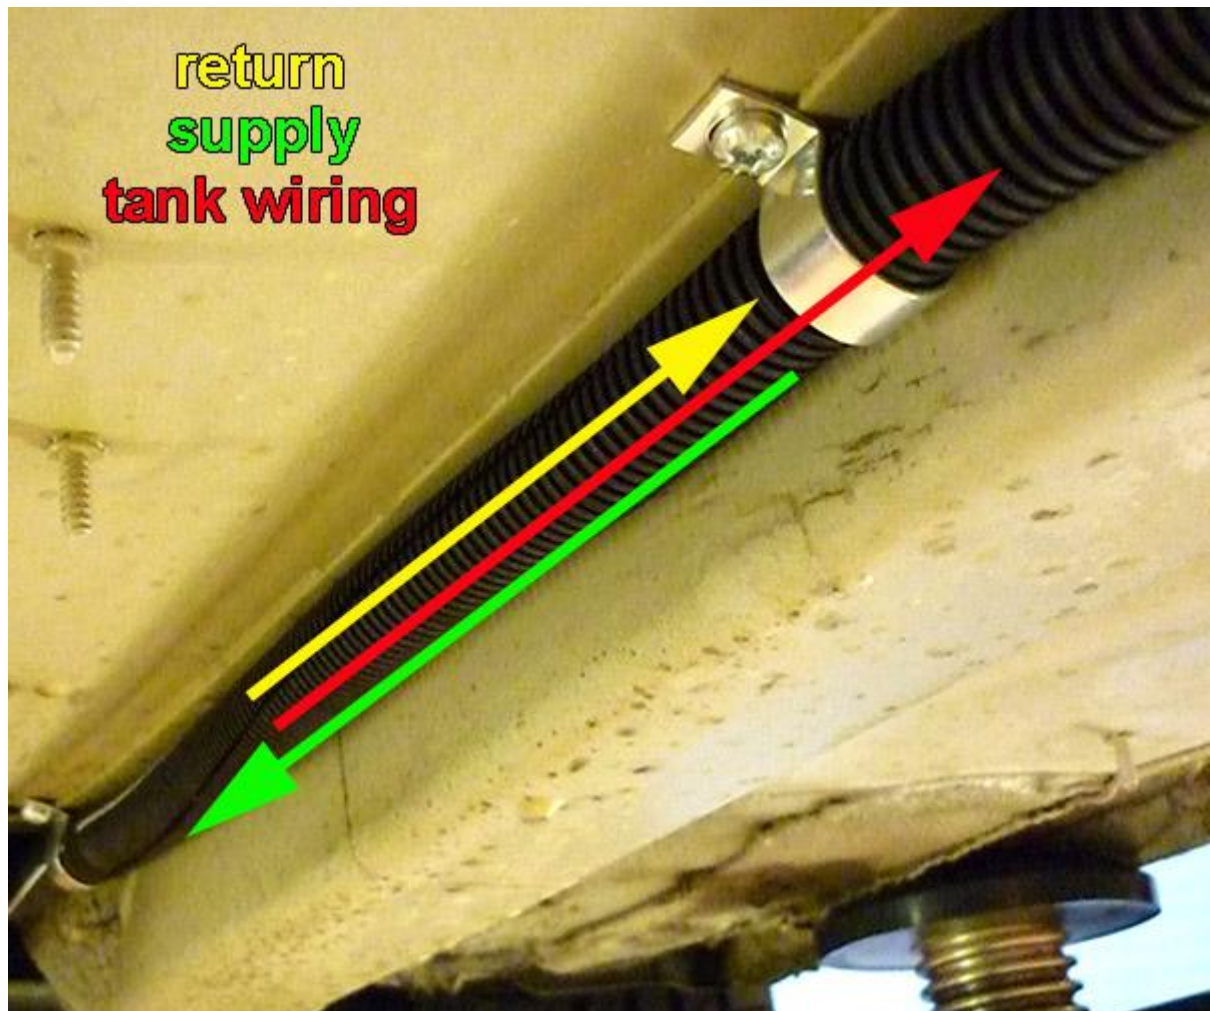

Hose routing

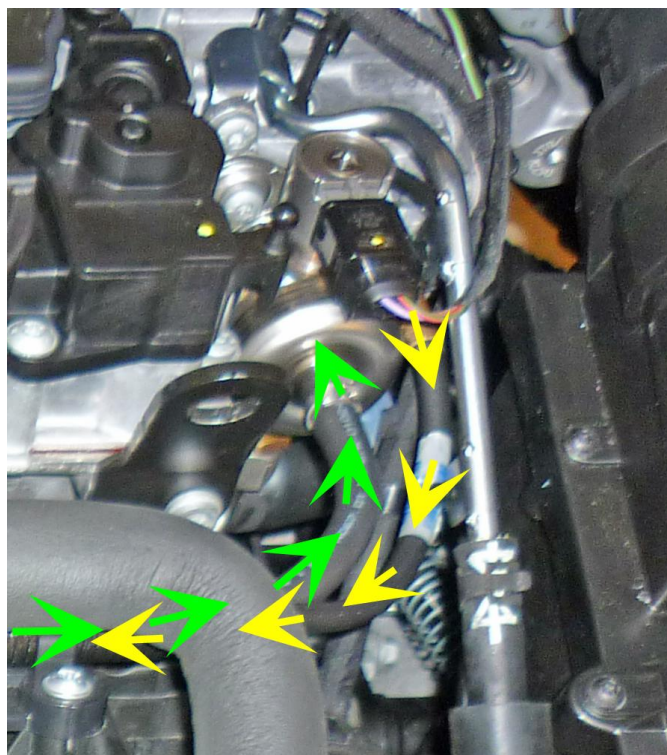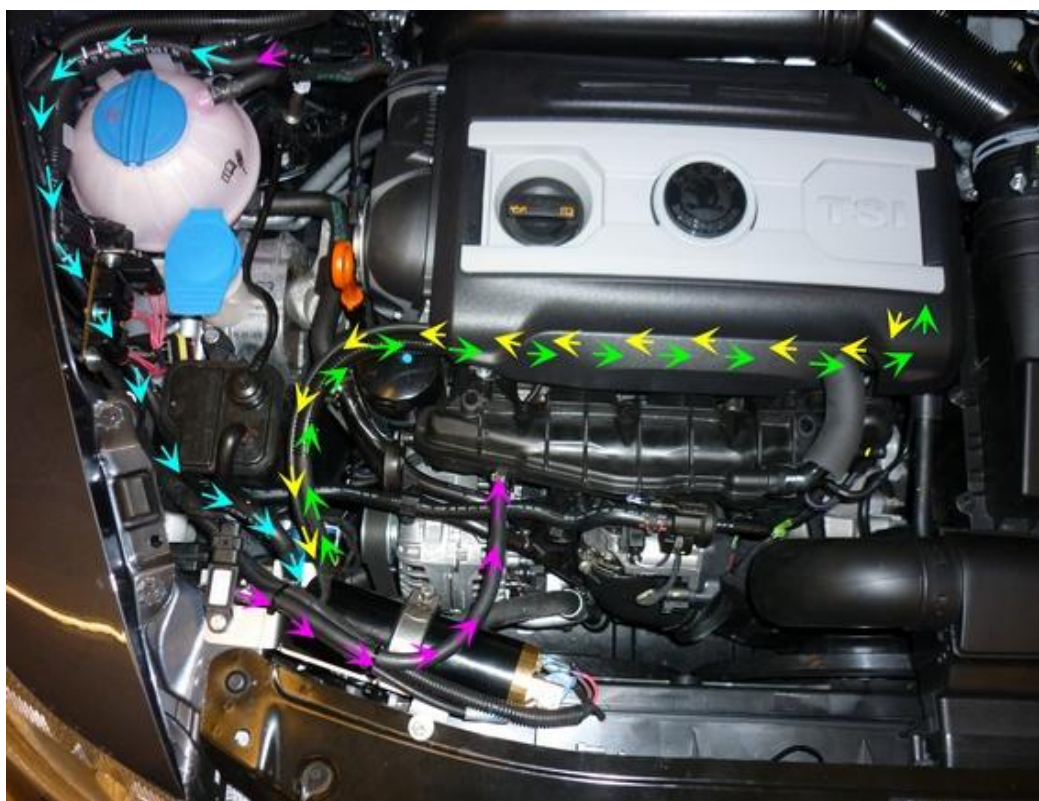


Mounting the AFC



Remove wipers / wiper box / petrol ecu and plastic support



Adapt ecu support:

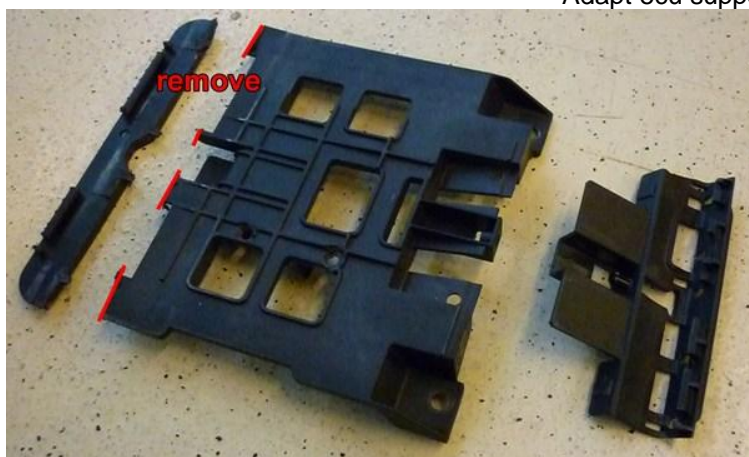

For petrol ecu remove 1 rib

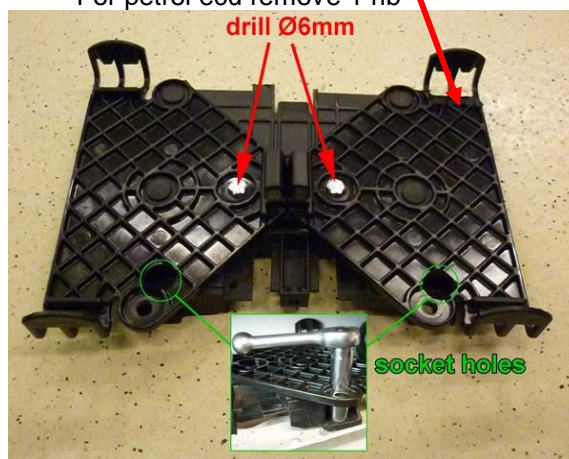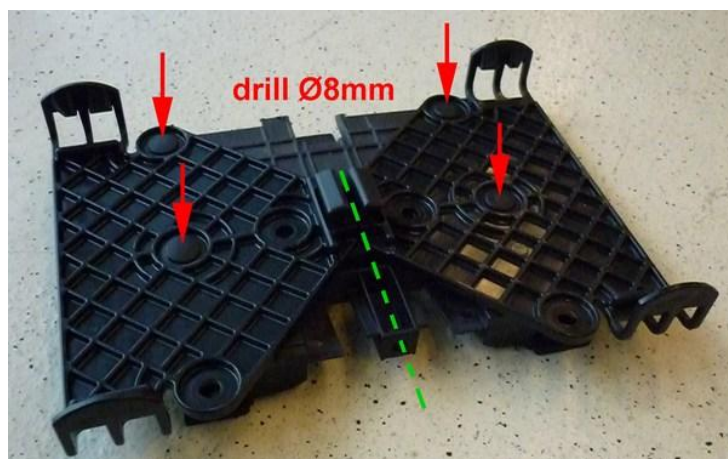


Install the ecu holders with four plastic clips and two M6 bolts



Mounting the AFC and petrol ecu



Wiring routing

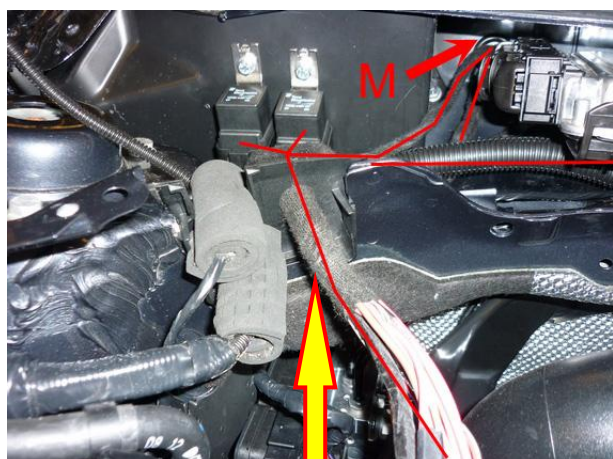


Mounting the fuel selection switch



BEWARE of wiper motor arm.

Remove the cover behind wiper motor and drill a hole into the cover to put the wiring through.

Wiring inside : switch / can. Be sure it's water tight again.

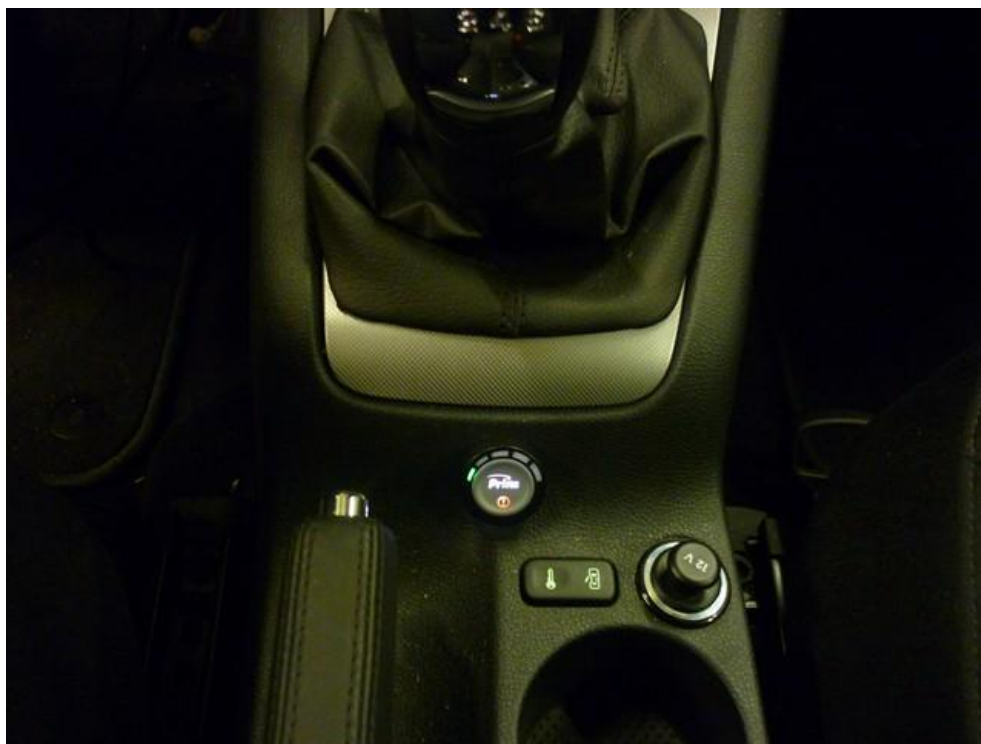

Fuses / Relay



Relay



Fuses




Electrical connections


**Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.**

Engine room

1-32 MAIN GND ecu MAIN GROUND SENSE MAIN GND pump driver MAIN GND boost pump	brown	Connect to the '-' of the battery (-31) ; use a ring terminal. Wire location :Left-side on the shock damper original point. LPG wiring Main ground 3x M8 eyes colour brown
4 – 13 – 44 +12V BATT sense +12V BATT fused +12V BATT boost pump +12V BATT pump driver	red	Connect to the '+' of the battery (+30) ; use a ring terminal. Do not place the fuse in the holder before having completed the installation of the lpg system. Wire location : Fuses box left-side for the shock damper. LPG wiring battery 3x M6 eyes colour red

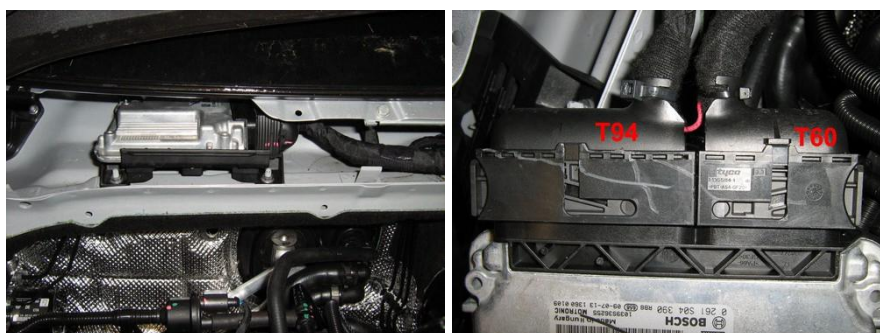

Petrol ecu in plenum chamber

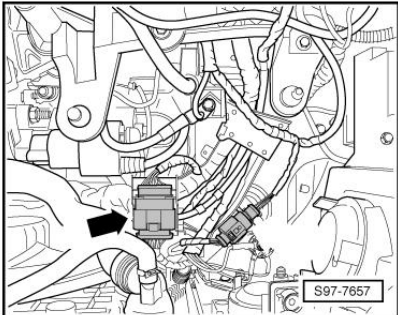7 +12V IGNITION	grey - white	Make a connection to ignition + / contact + (+15). Do not place the fuse in the holder before having completed the installation of the lpg system. Wire colour : grey or black-grey Wire location : petrol ecu connector T94 pin 87
121 Wake-up	Red-grey	Wire colour : thin Black Wire location :left side, under air filter box, 14-pole oval connector, pin 1 



Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Engine room

Wire number / code	Wire colour	Connection
18 Analog 1 25 Simulation 1	Blue-red Green-grey	High petrol pressure sensor interruption Sensor side. ECU side. Wire colour : blue Wire location : ecu connector T60 pin 40
19 Analog 4	Blue-white	High petrol pressure petrol sensor ground Wire colour : brown Wire location : ecu connector T60 pin 13
117 Digital input 3	Yellow-black	High petrol pressure sensor 5Volt Wire colour : grey-white Wire location : ecu connector T60 pin 29

115 Digital input 4	Yellow-red	MAF sensor Wire colour :grey-white Wire location : ecu connector T94 pin 23
---------------------	------------	--

27 +5V sensor 37 C ground 20 Analog 3 MAP	Red Brown Blue	For measuring the inlet manifold pressure (MAP). Connect the 3-pole connector to the Prins MAP sensor. Sensor location: mount next to boost pump
8 RPM	Purple-white	For measuring the engine speed signal. Wire colour : green Wire location : ecu connector T60 pin 53
15 T-ect	Grey	For measuring the engine coolant temperature. Wire colour : yellow Wire location : ecu connector T60 pin 57

6 Lambda1 WB	Orange	insulate
42 Lambda2 WB 10KΩ	Orange-white	insulate
23 Digital Simulation	Green-red	insulate
115 Digital input 4	Yellow-red	insulate
119 Digital input 2	Yellow-grey	insulate
17 Analog 2	Blue-black	insulate
10 Simulation 2	Green-black	insulate
97 Digital input 5	Yellow-orange	insulate
113 Digital input 6	Yellow-purple	insulate



Electrical connections

**Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.**

Wire number / code	Wire colour	Connection
<i>3-pole connector</i>		Connect the 3-pole connector to the Psys sensor positioned into the Fuel Return Unit.
35 C Ground pin A	Brown	Sensor wire pin A
9 +5V sensor pin B	Red	Sensor wire pin B
16 Psys pin C	Green	Sensor wire pin C
14 T-LPG	Grey	Not used, insulate.
<i>2-pole connector Boost Pump</i>		Connect the 2-pole connector to the lock-off valve of the Boost Pump.
106 + Lock-off Boost Pump	Red	
98 Ground lock-off	White-yellow	
<i>2-pole connector FSU</i>		Connect the 2-pole connector to the lock-off valve of the Fuel Supply Unit
108 + Lock-off FSU	Red	
100 Ground lock off	Pink-yellow	
<i>2-pole connector FRU</i>		Connect the 2-pole connector to the lock-off valve of the Fuel Return Unit
90 + Lock-off FRU	Red	
82 Ground lock off	Blue-yellow	
<i>4-pole diagnose connector</i>		Diagnose connector for service / diagnosis
46 Service TxD	Grey	Connector pin 1
65 Service RxD	Grey	Connector pin 2
68 C ground	Brown	Connector pin 4
<i>Boost pump relay</i>		Pin 86 of the boost pump relay
107 + relay boost pump	Red	Pin 85 of the boost pump relay
99 GND relay boost pump	Green-yellow	Pin 30 of the boost pump relay
+12V fused BATT	Red	Pin 87 of the boost pump relay
+12V Boost pump	Red	

Driver room

Wire number / code	Wire colour	Connection
<i>3-pole micro connector</i>		Connect the 3-pole connector to the Prins fuel selection switch.
66 Ground fuel switch	Brown	
3 +12V fuel switch	Red	
49 LIN fuel switch	yellow	
51 CAN-High	Blue-yellow	EOBD connector pin 6
70 CAN-Low	Blue	EOBD connector pin 14




Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Lpg tank housing

Wire number / code	Wire colour	Connection
3-pole tank level connector 40 Ground tank gauge 12 Tank level in 11 + tank level supply	Brown Blue Red	Connect the 3-pole connector to the tank level sensor. Connector pin 1 Connector pin 2 Connector pin 3
1. 2-pole connector tank lock-off	Green-yellow Brown	Pump driver to lock-off power Pump driver to lock-off ground
2. 3-pole fusite	Red Brown -	1. Pump power 2. Pump ground 3. not used
3. 2-pole connector tank pump	Red 2.5mm ² Brown 2.5mm ²	Pump driver power Pump driver ground
4. 2-pole connector	Grey Green	Pump driver diagnose Pump driver control

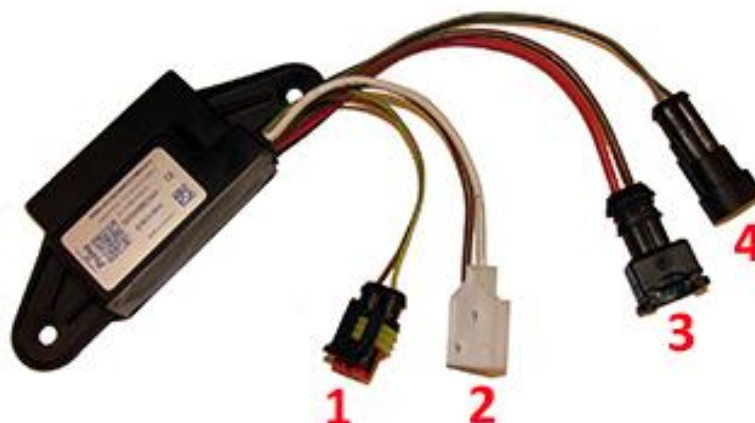

Wiring tank relay 2 + tank relay 26 Ground tank relay +12V BATT fused +12V pump driver	Red Green-yellow Red 2.5mm ² Red 2.5mm ²	Pin 86 of the tank relay Pin 85 of the tank relay Pin 30 of the tank relay Pin 87 of the tank relay
--	---	--



Checklist after installation

1. Install the system fuses.
Turn on ignition.
Connect the Prins interface wire and run the Prins diagnosis program.
When working on the car, beware of moving and rotating parts in the engine compartment (even when the engine is not running !!).
2. When commissioning the LPG system, you must activate the LPG computer with the diagnosis software.
3. Check whether the program in the LPG computer matches with the car (dedicated engine set):
See "Identification" in the diagnosis program.
4. Check all components and connections for any LPG leakage, use a LPG leak detector device or a fluid detection like soap. Also check for petrol leakage. Make sure the solenoid valves are in open position.
No evidence of leakage is permitted.
Caution for moving and rotating parts in the engine compartment !
5. Use the diagnosis software to check again all input and output signals.
6. Check the system for error codes and solve these, if required.
Check the petrol MMS for EOBD error codes.
Place the protection connector back on the diagnose connector.
7. Make a test drive and check the cars drivability on LPG and petrol.

