



Quality, innovation and customer care, it's in our nature



Installation manual Dedicated PART 2/2

MANUFACTURER	Volkswagen
TYPE	Golf
ENGINE DISPLACEMENT	1400
NUMBER OF VALVES	16
ENGINE CODE / NUMBER	CAXA
VEHICLE CATEGORIES	M
TRANSMISSION	MT
VERSION	Direct LiquiMax-2.0
PETROL ECU MANUFACTURER / CODE	BOSCH MED 17.5.5
HIGH PRESSURE PETROL PUMP	Hitachi Gen 2
HIGH PRESSURE PETROL INJECTOR	Magnetti Marelli IHP-072 / 037C09
MODEL YEAR:	7-2008->
SYSTEM APPROVAL NUMBER (R115)	E4-115R-000010 / DLM-LPG 03
LOCATION SYSTEM STICKER	right side, centre door post
ENGINE SET NUMBER	366/070003/A
MANUAL NUMBER	076/2608200
DATE	2014-04-03



TABLE OF CONTENTS

General instructions	2
Required equipment / tools / materials for installing a complete system	3
Vehicle check.....	3
Tightening moments.....	4
Direct LiquiMax	5
Overview Direct LiquiMax	6
Direct LiquiMax parts / approval numbers	7
Mounting and connection points	8
High pressure pump Return connection.....	9
High pressure pump Supply connection.....	10
Boost pump.....	11
Connection of the fuel hose to the boost pump	12
Fuel Supply Unit / Fuel Return Unit	13
Mounting the Fuel Supply and Return Unit	14
Fuel Return Pressure Sensor	15
Lpg / petrol fuel lines.....	16
Supply hose – Return hose – Tank wiring.....	17
Hose routing.....	18
Mounting the AFC	19
Mounting the AFC and petrol ecu	20
Wiring routing.....	21
Mounting the fuel selection switch	22
Fuses / Relay	23
Petrol ECU.....	24
Petrol ECU.....	24
Electrical connections.....	25
Electrical connections.....	26
Electrical connections.....	27
Electrical connections.....	28
Electrical connections.....	29
Checklist after installation.....	30

FOR EXPLANATION AND CIRCUIT DIAGRAMS SEE : INSTALLATION MANUAL GENERAL PART 1 / 2



General instructions

- The installation of the system shall be done in accordance with the installation manual provided by Prins Autogassystemen.
- This manual is based on Dutch regulations, always install the system in accordance to the local regulations.
- For an optimal functioning of the Direct LiquiMax system, maintain a clean and organized work environment during installation and maintenance to prevent pollution of the LPG components.
- Always download the “general manual 1/2 “ from our website for basic instructions and diagrams.
- Always disconnect the battery when installing the lpg system. Make sure the ignition key is outside the car. Be aware of central door locking, radio / telephone memory code, alarm system.
- Wear safety goggles when working on petrol filled system / connections (pressurized petrol)
- Do not place the main fuse into the fuse holder before having completed the installation of the system.
- The AFC has to be activated by means of the Prins diagnosis software.
- Never disconnect the AFC connector, unless you have removed the main fuse.
- When installing the wiring harness, ensure that it does not run near any of the ignition components.

Solder and insulate all electrical connections.

The wires in the loom are provided with numbers and text. The text on the wire explains the function of the wire. The wire harness is not model specific, therefore it may be necessary to adjust the length of the wires. Ensure maximum care is taken when connecting wiring.

Make professional joints using solder and shrink sleeve. Do not stretch the wiring harness.

- No component of the LPG-system shall be located within 100 mm of the exhaust or similar heat source, unless such components are adequately shielded against heat.
- If holes have to be drilled (wear safety glasses) for installing brackets, etc., the drilled holes must always be treated with an anti-corrosion agent, after the chips have been removed (especially when mounting a exterior filler into body work).
- After having completed the installation, check the whole system for lpg leakage; use a lpg leak detection device. Also check for leak of engine coolant, petrol and air.
- Fitting and maintenance is only allowed by Prins Autogassystemen selected LPG engineers.
- Failure to follow the instructions in this manual can result in a poor or non-working lpg installation or a dangerous situation.
- For maintenance instructions and filter registration see owner manual.
- Prins Autogassystemen is not responsible for any damages to people or objects as a result of changes to Prins products.
- Check our website regularly for diagrams, certificates, updates, info-bulletins and product information.

Register (warranty card) the system on the Prins warranty portal .



Required equipment / tools / materials for installing a complete system

- Complete workshop toolbox (wrenches, screwdrivers, cutters, pliers, ratchet, sockets)
- Car lift
- Portable computer : operating on Windows 98, W2000 or XP.
 - Internal memory : 16 Mb or more
 - Memory HD space : 5MB
 - Screen : 256 colours, advise colours 16 bits or more
 - Com port : 1 free COM port 1 or COM port 2 with a 9 or 25 pins connector
- Vehicle fuel system scan tool or OBD scan tool Prins (part nr. 099/99928)
- Exhaust gas analyser
- Multimeter
- Oscilloscope
- Prins diagnostic software
- Prins serial interface
- Torque wrench (10Nm)
- Torque wrench (200-250Nm)
- Portable light
- Assortment drill bits 4 to 12 mm
- Assortment cutters (ø 20, 30, 50, 70 mm)
- Portable drill or pneumatic drill
- Thread cutting device (male M6x1, M8x1, M10x1)
- Socket 46mm
- Air gun
- Vacuum cleaner
- Safety goggles
- Hot air gun
- Soldering iron, soldering tin
- Wire-stripping pliers
- Adhesive tape
- Adhesive sealant
- Thread locking compound
- Anti-corrosion agent / black body coating
- Gas leak detection device or foam leak spray
- Shrink sleeves

Vehicle check

- Check the vehicle drivability on petrol
- Check the fuel system for error codes (scan tool)
- Check if the catalytic converter is in good condition (exhaust gas analyzer)
- Check the condition of the ignition system (spark plugs, cables, coil)



Tightening moments

	Nm	SW
M 4 x 0,7	3.3	7
M 5 x 0,8	6.5	8
M 6 x 1,0	11.3	10
M 7 x 1,0	14.5	11
M 8 x 1	24.5	13
M 8 x 1,25	27.3	13
M 10 x 1	52	15-16-17
M 10 x 1,5	54	15-16-17
(filtered)Banjo bolt	10	14
Supply line connection	15	13
Fuel module Allen bolts	20	7
Filler hose connection	50	22
HPP cover Hitachi	220	46

EXPLANATION OF SYMBOLS :





= IMPORTANT,
CAUTION




= WEAR SAFETY GOGGLES



Direct LiquiMax

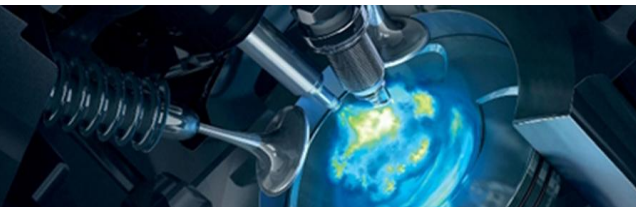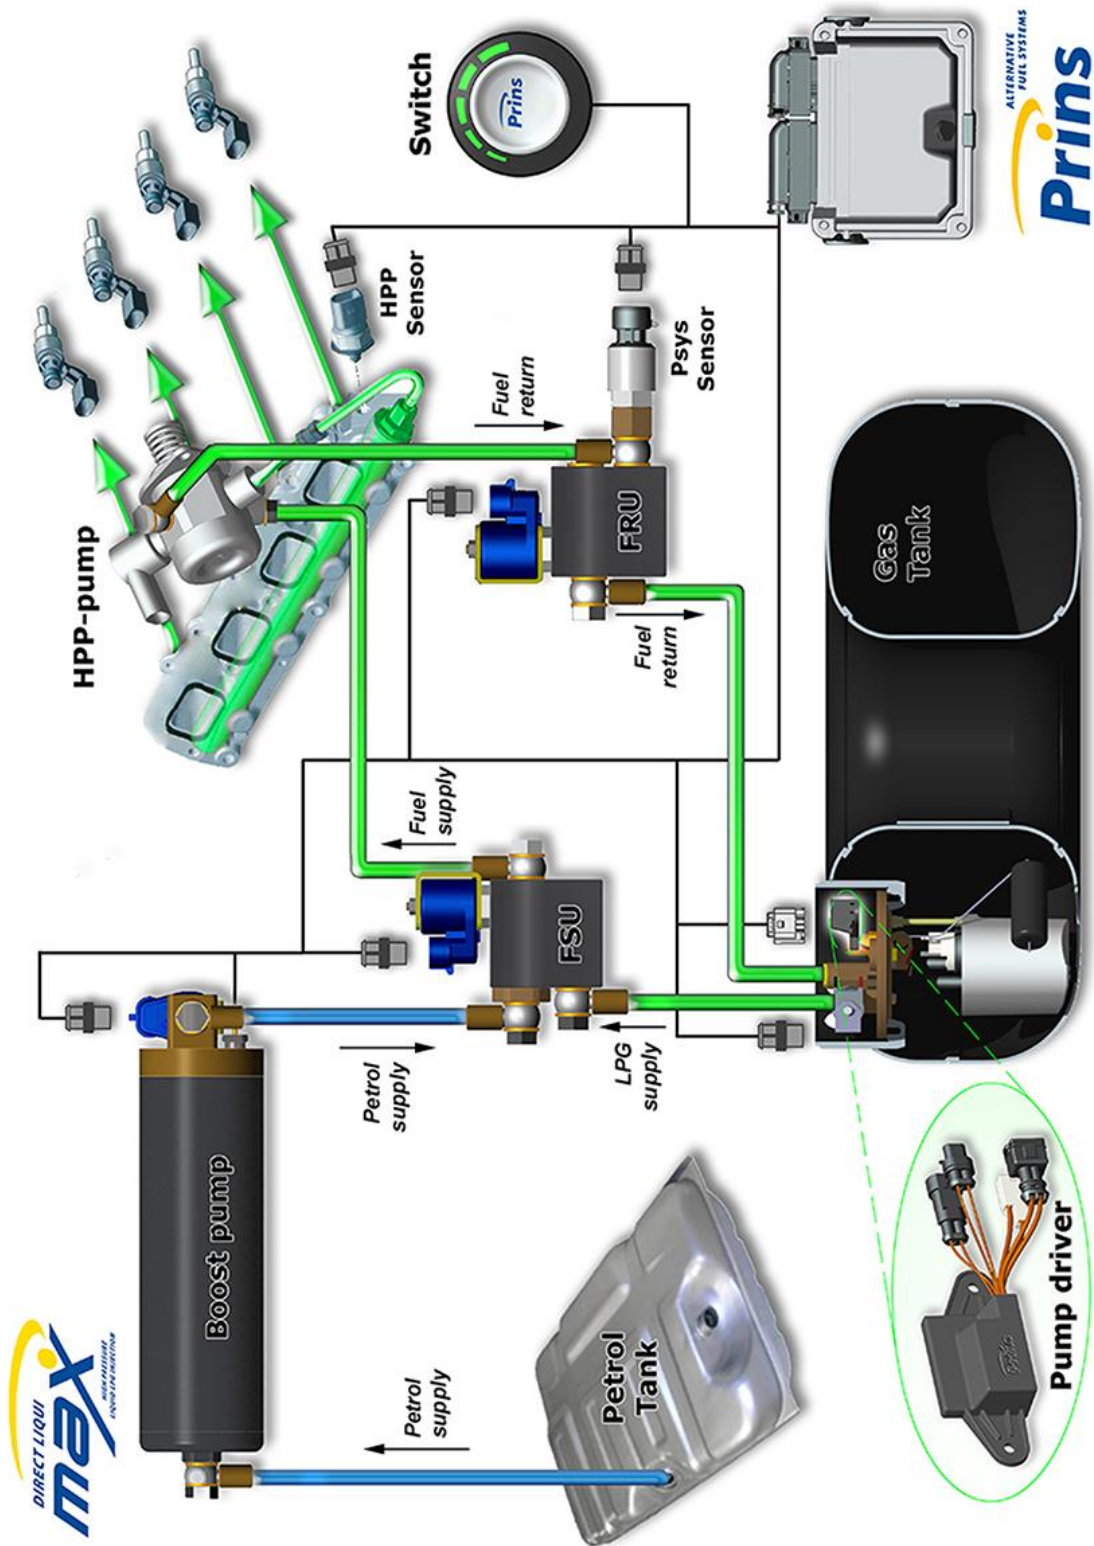

overview Direct Liqui Max

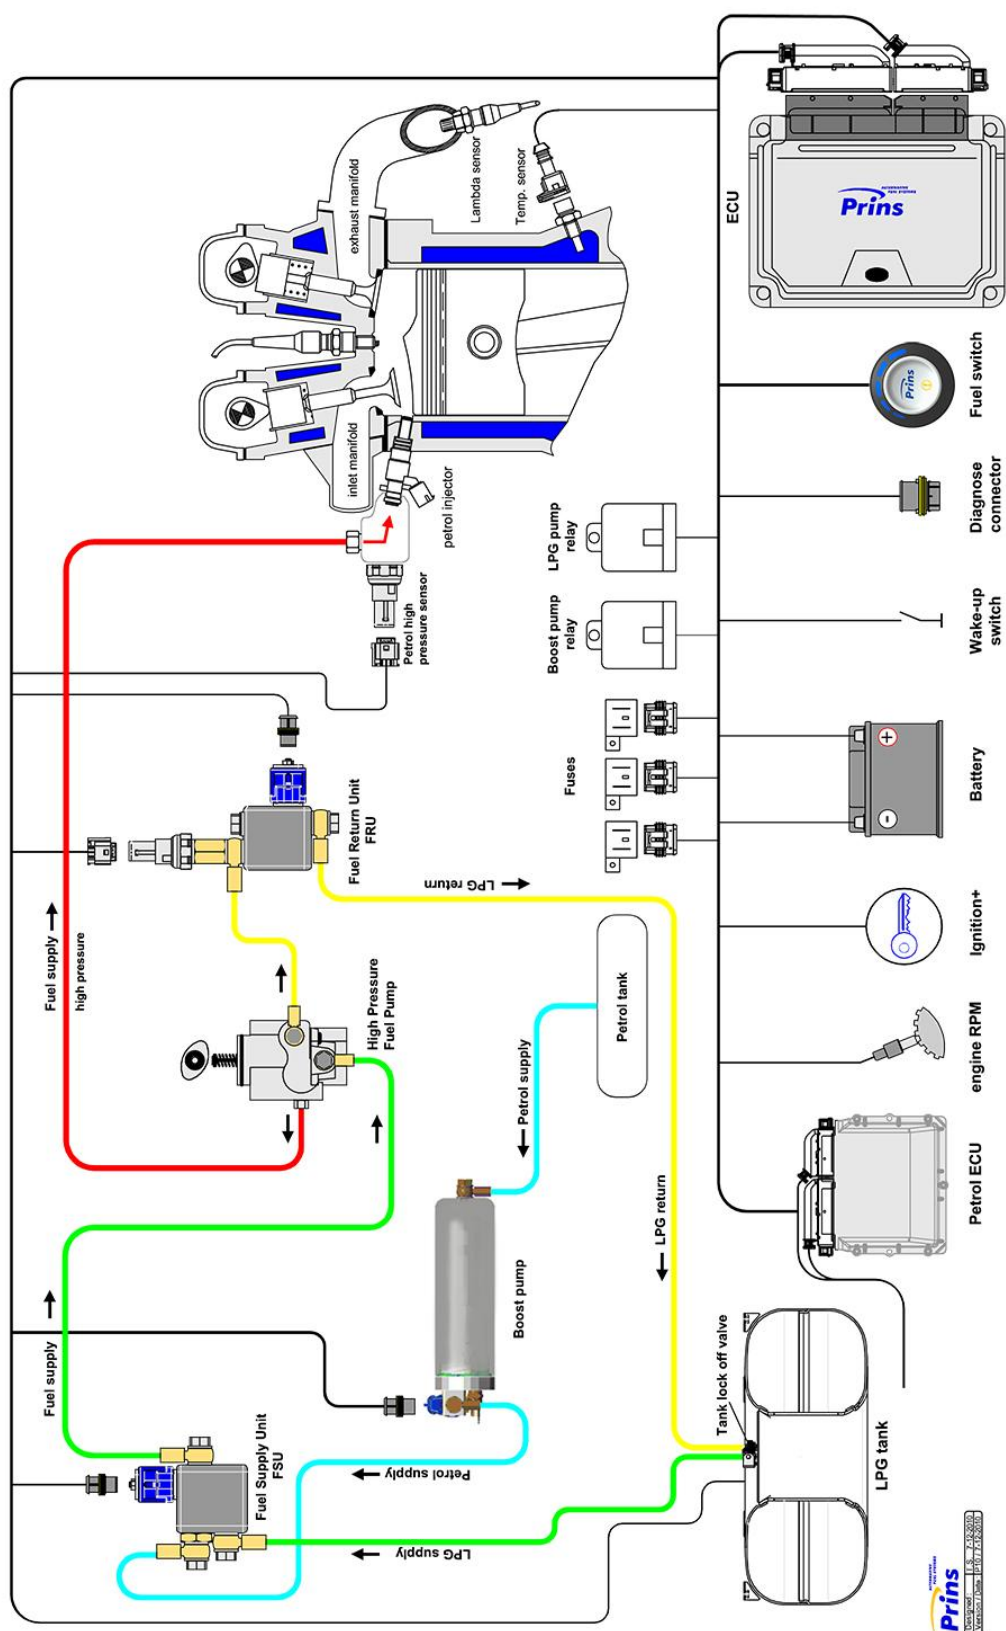

Direct LiquiMax parts / approval numbers

 <p>1st generation</p>  <p>2nd generation</p>	 <p>1st generation</p>  <p>2nd generation</p>
<p>Fuel Supply Unit : E4-67R-010269</p>	<p>Fuel Return Unit : E4-67R-010270 Pressure Sensor : E4-67R-010051</p>
	
<p>Boost pump</p>	<p>High Pressure Pump : E4-67R-010266 High Pressure Rail : E4-67R-010267 High Pressure Injectors : E4-67R-010309</p>
	 <p>XD-3 LPG</p>  <p>XD-4 LPG</p>
<p>Prins ECU : E4-67R-010098 E4-10R-030507</p>	<p>Fuel lines series XD : E4-67R-010247 XD3 E4-67R-010247 XD4</p>



Mounting and connection points



A : High pressure petrol pump	L : R115 Approval sticker
B : Fuel Supply Unit : FSU	M : Grommet
C : Fuel Return Unit : FRU	N : Gas system fuses
D : Boost pump	P : T-ect
E : AFC	Q : Low pressure signal
F : Boost pump relay	R : MAP, Analog 3
G : Tank relay	S : Analog 2
H : Petrol ECU	T : Analog 4
I : Engine speed signal RPM	V : Digital input 3
J : “+” ignition	W : Wake-Up
K : High pressure signal Analog 1	X : Digital input



L:
R115 approval sticker :
Right side centre door post




High pressure pump Return connection



Remove the High petrol pressure pump. Careful : petrol !
(Follow the workshop manual of the car) also see page 4.



Remove petrol inlet

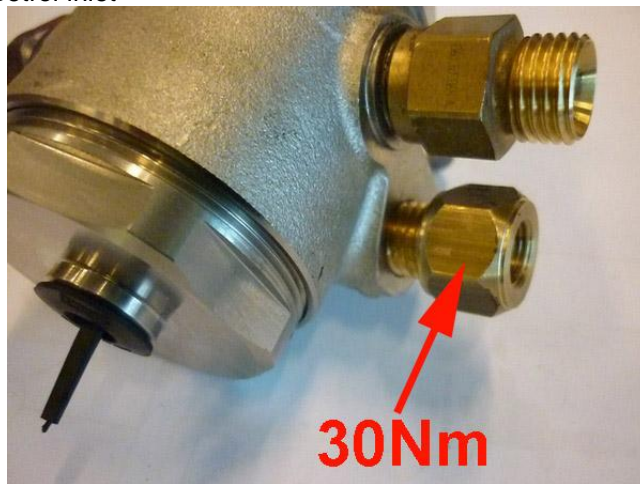

Install new banjo adaptor



High pressure pump Supply connection


Replace the high pressure pump cover (46mm) for the adapted high pressure pump. Careful : petrol !
Carefully cut the cover, remove shockers and install them into the new cover. Reinstall pump.



Tighten cover with 220 Nm



Boost pump

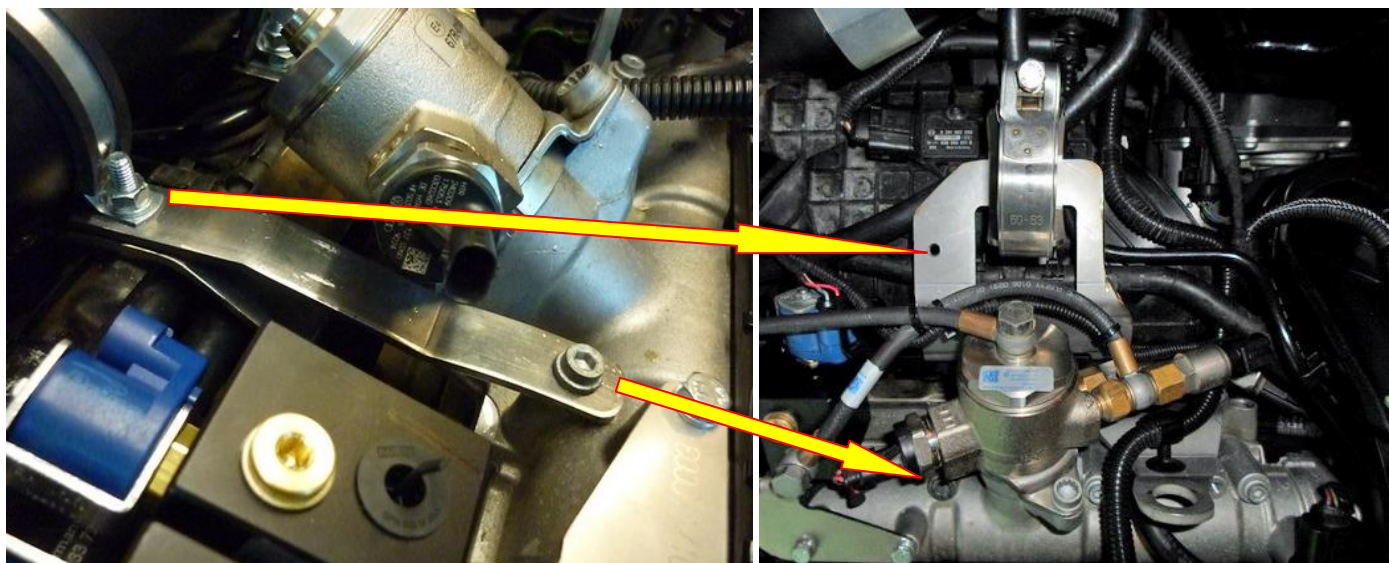

Install bracket with original manifold bolts.







Connection of the fuel hose to the boost pump.

Connect the original fuel hose (with a XD-5 banjo eye and 15,3 clamp) to the boost pump.




Fuel Supply Unit / Fuel Return Unit

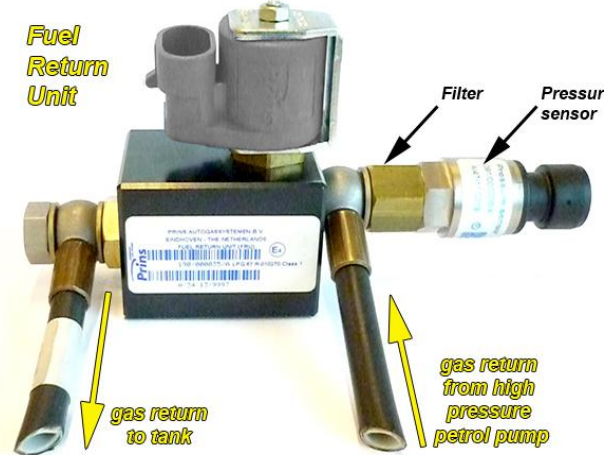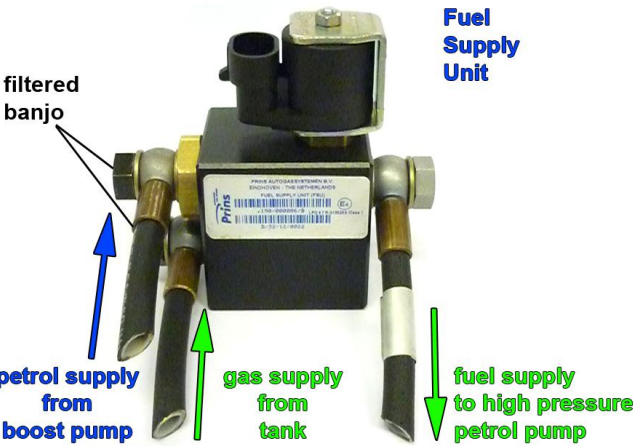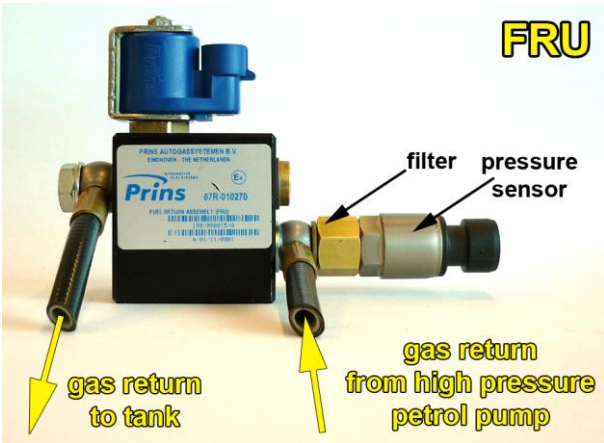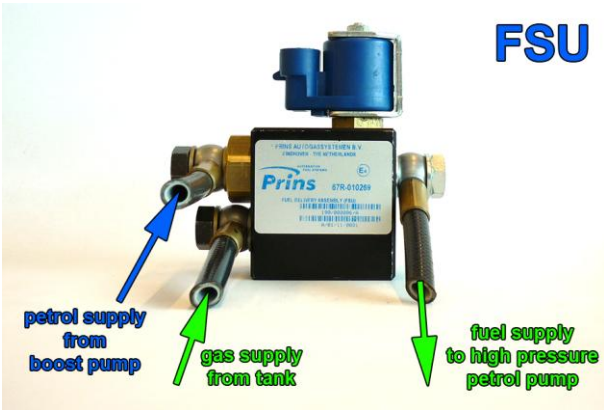


Black filtered banjo will only be used on inlet connections !


Filter inside sensor banjo

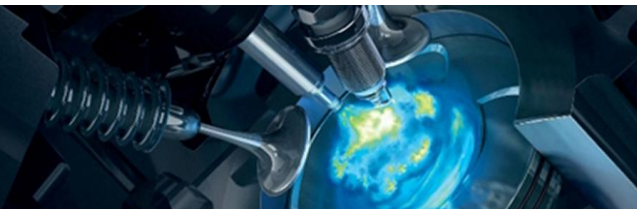

Mounting the Fuel Supply and Return Unit

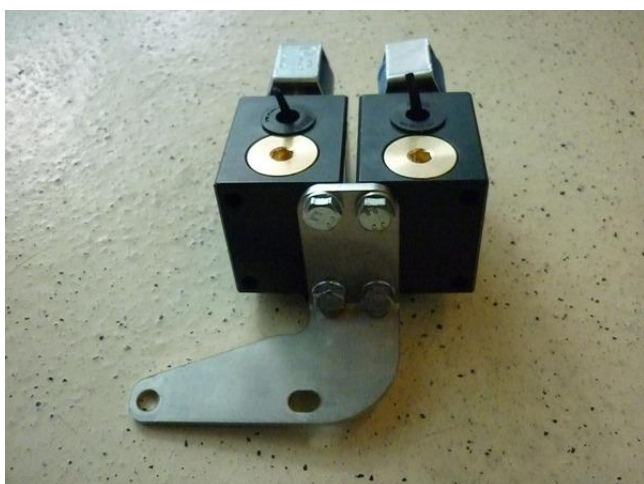

4x: M6x10

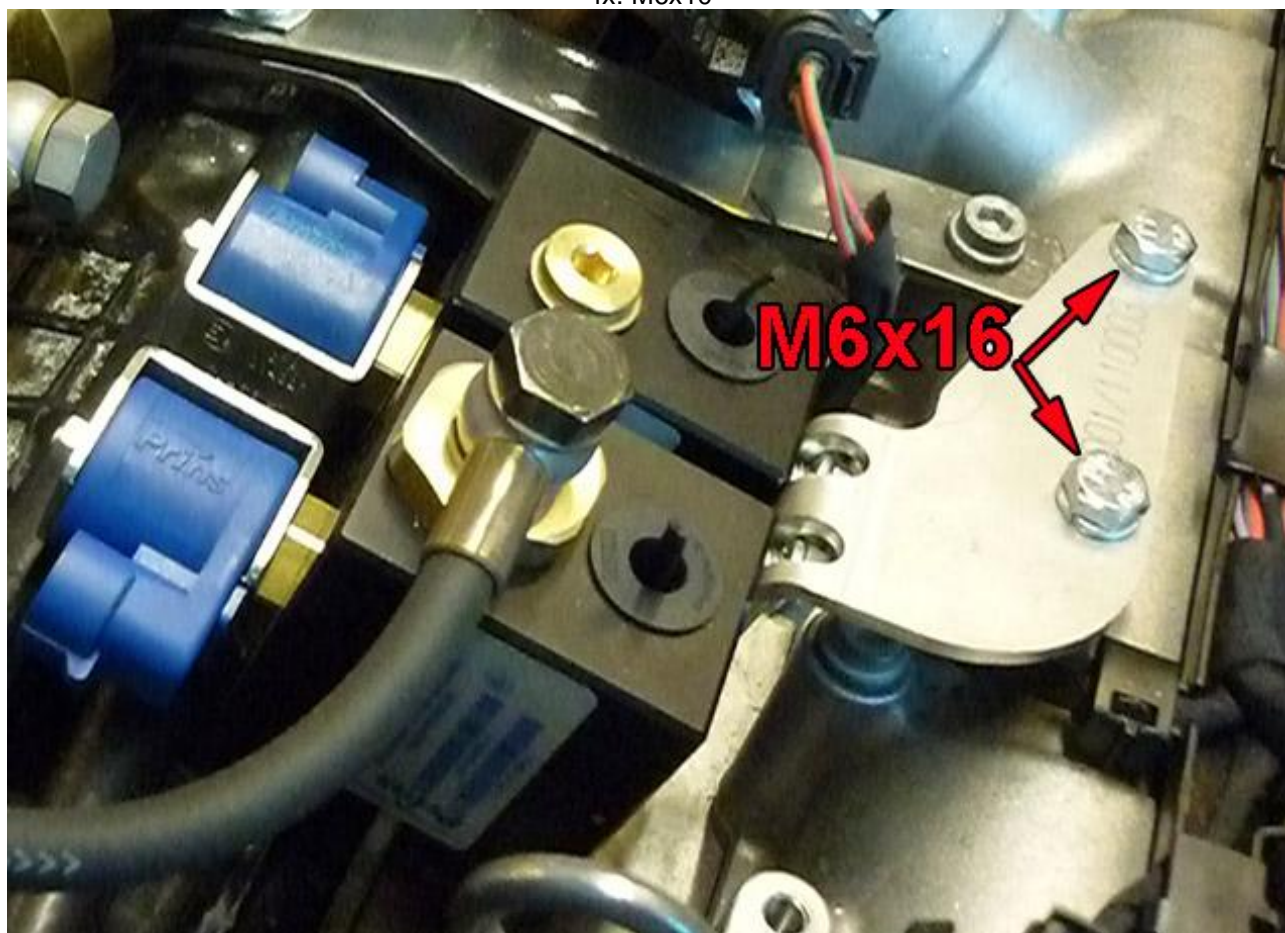

Fuel Return Pressure Sensor

Pressure sensor : re-located on this engine
Sensor and sensor banjo located on HP petrol pump




Lpg / petrol fuel lines


Hose	from	to	Length (cm)
	Adapter original petrol hose	Petrol boost pump	XD-5 banjo eye
XD-	Fuel supply unit	High pressure petrol pump	25
XD-	Petrol boost pump	Fuel supply unit	20
XD-	Fuel return unit	High pressure petrol pump	20
XD-	Fuel return unit	High pressure petrol rail	n.a.



Install the fuel line using two bonded seal washers and banjo bolt :

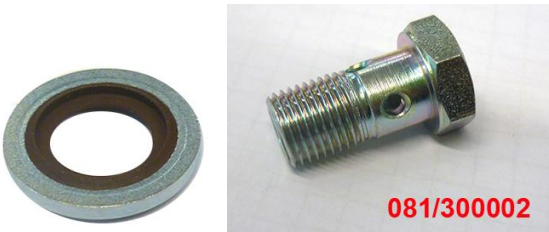


Filtered banjo: (FSU supply inlets / boost pump inlet : black filtered banjo) :

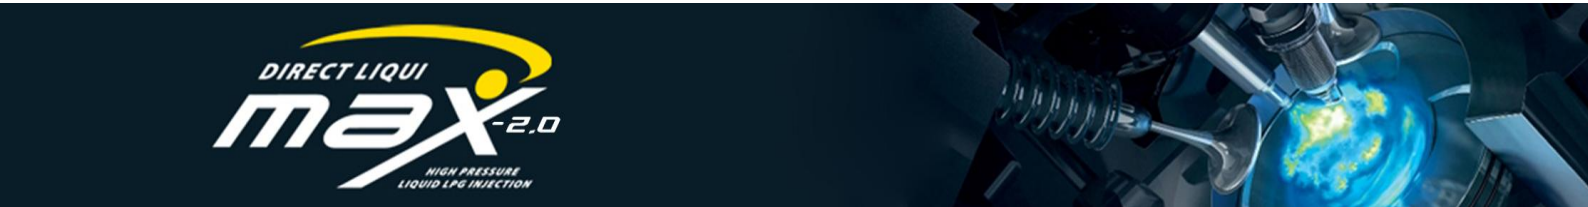

Supply hose – Return hose – Tank wiring

Protect the supply- and return hose together with tank-wiring using the Ø16 split tube.
Mount the "hose assembly " with clamps, with a maximum distance of 40cm.

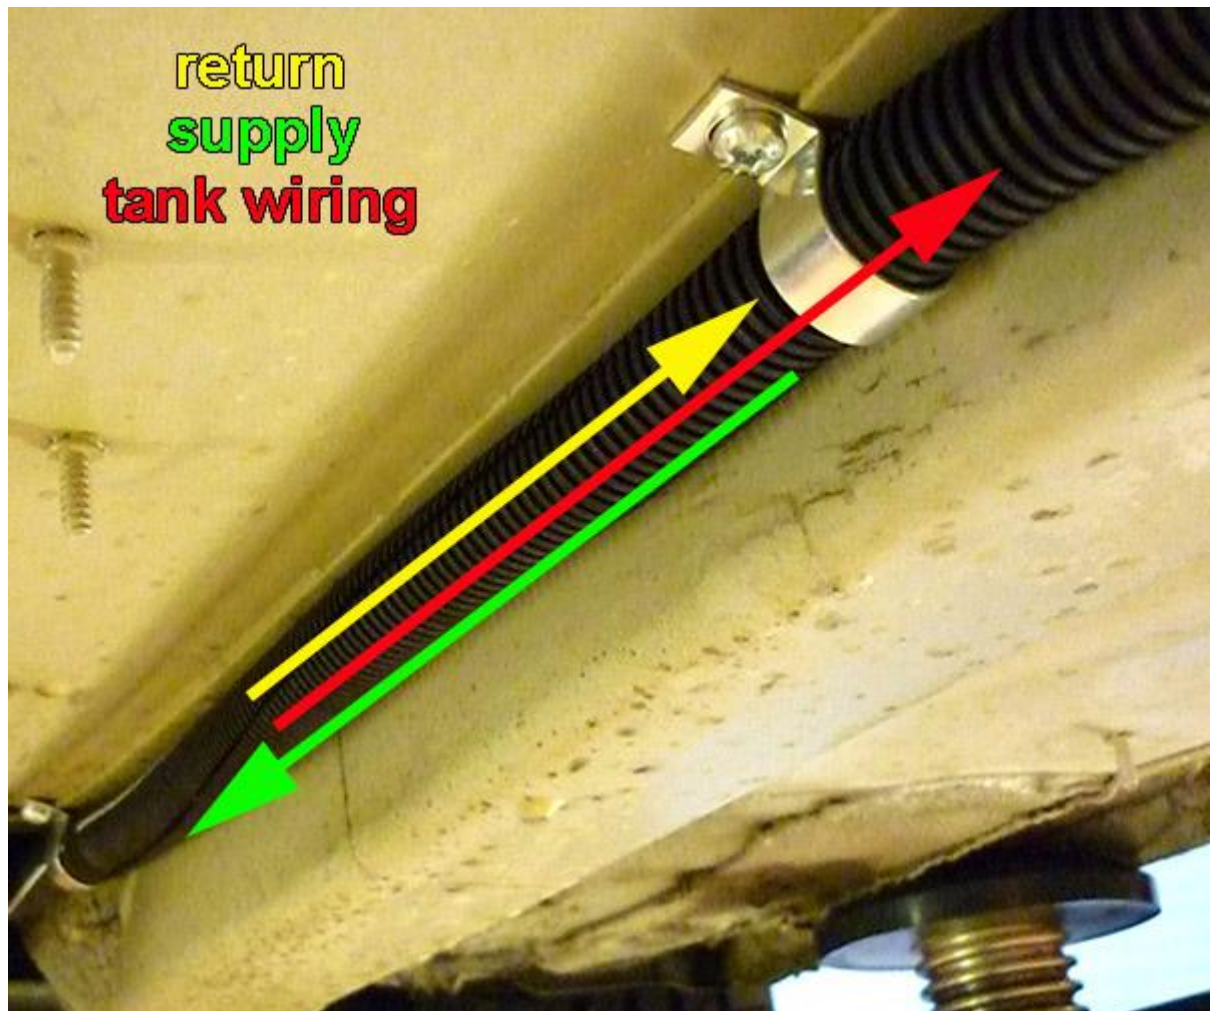

Hose routing




Mounting the AFC



Remove wipers / wiper box / petrol ecu and plastic support



Adapt ecu support:

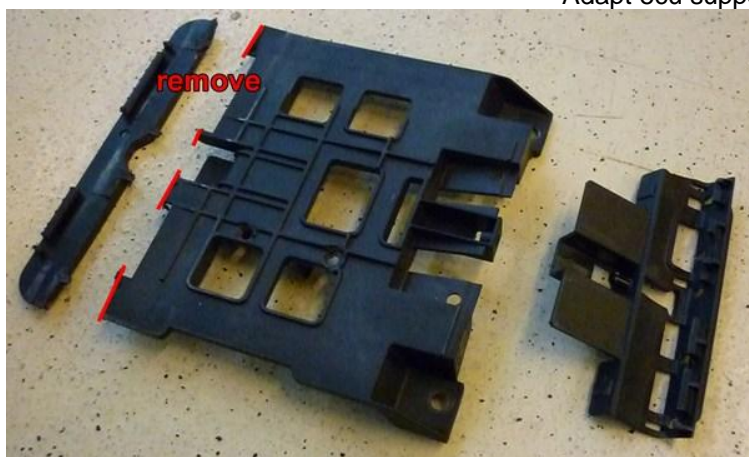

For petrol ecu remove 1 rib

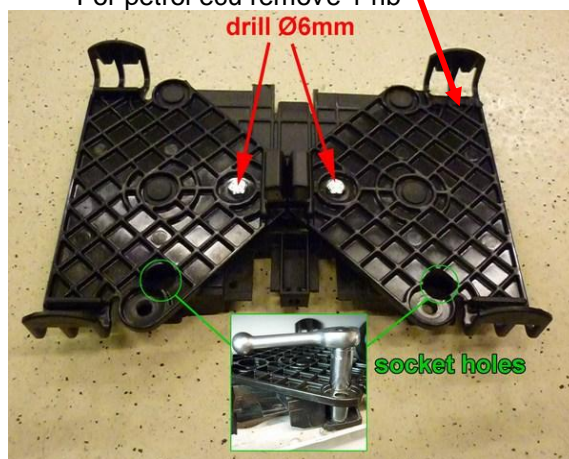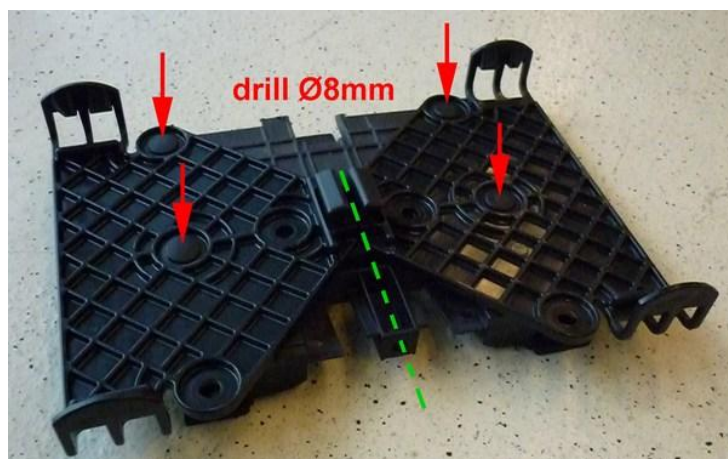


Install the ecu holders with four plastic clips and two M6 bolts



Mounting the AFC and petrol ecu



Wiring routing

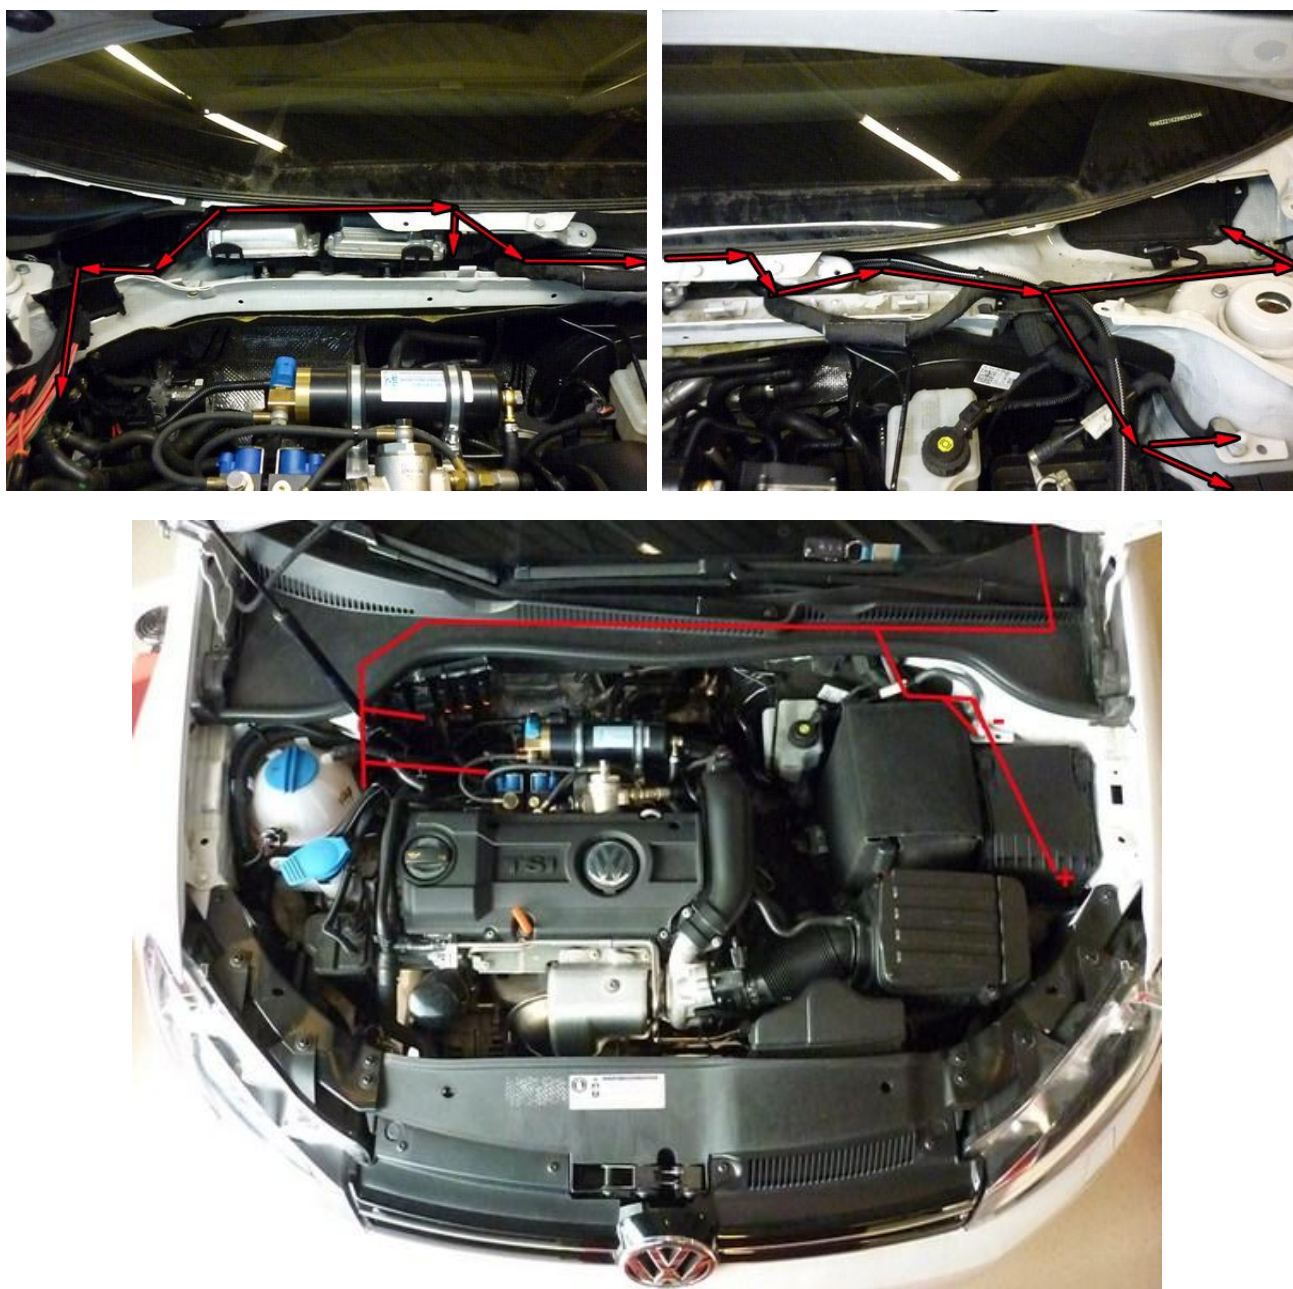

Mounting the fuel selection switch



BEWARE of wiper motor arm.

Remove the cover behind wiper motor and drill a hole into the cover to put the wiring through.
Wiring inside : switch / can. Be sure it's water tight again.



Fuses / Relay




Join the fuses with the M6 threaded inserts



Petrol ECU

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

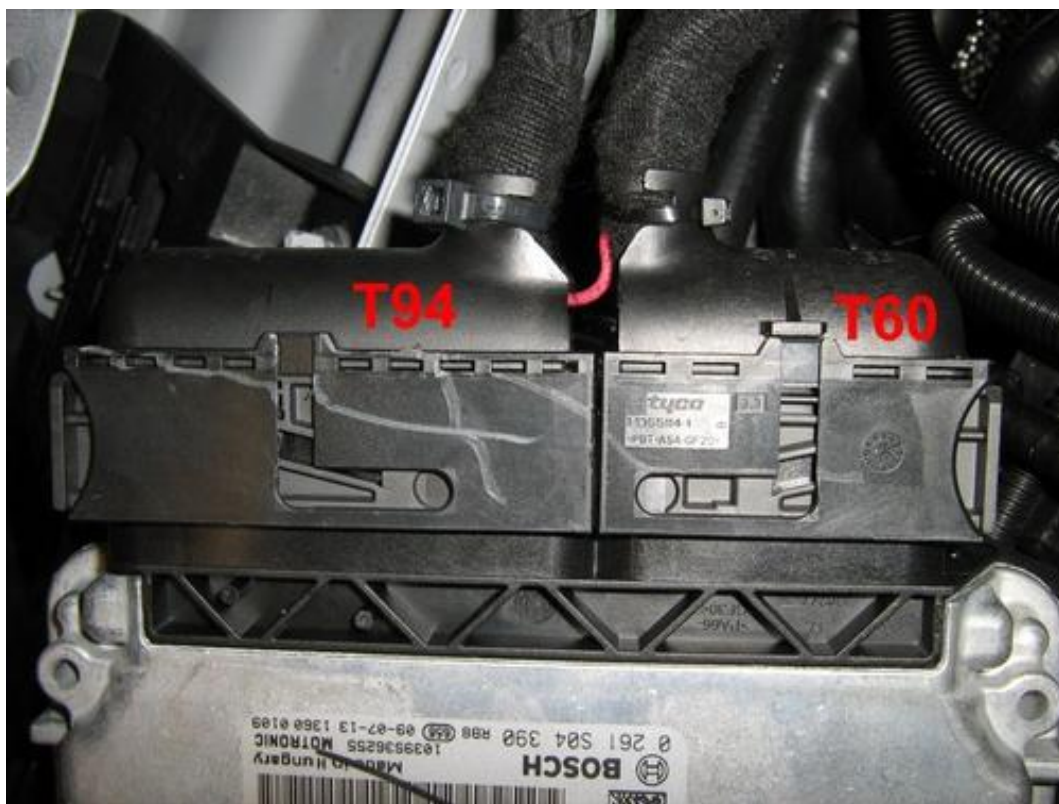


Petrol ecu in plenum chamber



Electrical connections

**Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.**

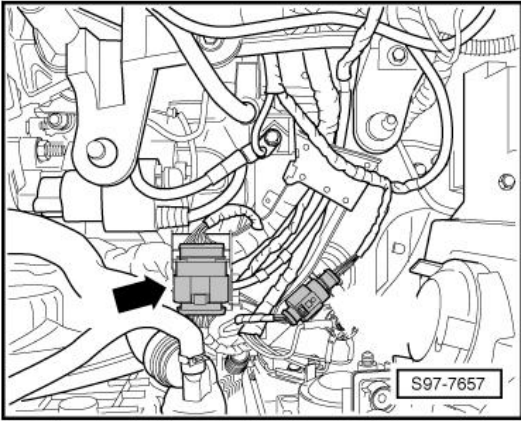Wire number / code	Wire colour	Connection
1-32 MAIN GND ecu MAIN GROUND SENSE MAIN GND pump driver MAIN GND boost pump	brown	Connect to the '-' of the battery (-31) ; use a ring terminal. Wire location :left suspension ground point
4 – 13 – 44 +12V BATT sense +12V BATT fused +12V BATT boost pump +12V BATT pump driver	red	Connect to the '+' of the battery (+30) ; use a ring terminal & M5 lock-nut Do not place the fuse in the holder before having completed the installation of the lpg system. Wire location :fuse box, left front side
121	Wake-up	Red-grey
		Wire colour : thin Black Wire location :left side, under air filter box, 14-pole oval connector, pin 1
		



Electrical connections

**Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.**

Wire number / code	Wire colour	Connection
18 Analog 1 25 Simulation 1	Blue-red Green-grey	<i>High pressure petrol sensor interruption</i> Sensor side. ECU side. Wire colour : GREY-BLUE Wire location : petrol ecu connector T60 pin 40 petrol ecu connector T60 pin 41 wire colour leading
19 Analog 4	Blue-white	<i>High pressure petrol sensor ground</i> Wire colour : BROWN-BLUE Wire location : Petrol ecu, T60 , pin 13 Petrol ecu, T60 , pin 12 wire colour leading
117 Digital input 3	Yellow-black	<i>High pressure petrol sensor 5Volt supply</i> Wire colour : RED-BLUE Wire location : petrol ecu connector T60 pin 8 petrol ecu connector T60 pin 29 wire colour leading
7 +12V IGNITION	grey - white	Make a connection to ignition + / contact + (+15). Do not place the fuse in the holder before having completed the installation of the lpg system. Wire colour : grey or black-grey Wire location : petrol ecu connector T94 pin 87
17 Analog 2	Blue-black	<i>Intake air temperature</i> Wire colour : white Wire location : petrol ecu connector T60 pin 42
10 Simulation 2	Green-black	insulate
23 Digital Simulation	Green-red	insulate
115 Digital input 4	Yellow-red	insulate
119 Digital input 2	Yellow-grey	insulate
6 Lambda1 WB	Orange	insulate
42 Lambda2 WB 10KΩ	Orange-white	insulate
97 Digital input 5	Yellow-orange	insulate
113 Digital input 6	Yellow-purple	insulate



Electrical connections

**Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.**

Wire number / code	Wire colour	Connection
27 +5V sensor 37 C ground 20 Analog 3 MAP*	Red Brown Blue Red:insulate Brown:insulate Blue	Cut off connector. For measuring the inlet manifold pressure from the engine MAP sensor. Wire colour : YELLOW-BLUE Wire location : petrol ecu connector T60 pin 55 petrol ecu connector T60 pin 59 wire colour leading
* When original sensor is used: cut off connector: <u>Only</u> use blue signal wire 20		
8 RPM	Purple-white	<i>For measuring the engine speed signal.</i> Wire colour : WHITE-BROWN Wire location : petrol ecu connector T60 pin 36 petrol ecu connector T60 pin 54 wire colour leading
15 T-ect	Grey	<i>For measuring the engine coolant temperature.</i> Wire colour : BROWN Wire location : petrol ecu connector T60 pin 57 petrol ecu connector T60 pin 55 wire colour leading



Electrical connections

**Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.**

Engine room

Wire number / code	Wire colour	Connection
<i>3-pole connector</i>		Connect the 3-pole connector to the Psys sensor positioned into the Fuel Return Unit.
35 C Ground pin A	Brown	Sensor wire pin A
9 +5V sensor pin B	Red	Sensor wire pin B
16 Psys pin C	Green	Sensor wire pin C
14 T-LPG	Grey	Not used, insulate.
<i>2-pole connector Boost Pump</i>	Red	Connect the 2-pole connector to the lock-off valve of the Boost Pump.
106 + Lock-off Boost Pump	White-yellow	
98 Ground lock-off		
<i>2-pole connector FSU</i>	Red	Connect the 2-pole connector to the lock-off valve of the Fuel Supply Unit
108 + Lock-off FSU	Pink-yellow	
100 Ground lock off		
<i>2-pole connector FRU</i>	Red	Connect the 2-pole connector to the lock-off valve of the Fuel Return Unit
90 + Lock-off FRU	Blue-yellow	
82 Ground lock off		
<i>4-pole diagnose connector</i>		Diagnose connector for service / diagnosis
46 Service TxD	Grey	Connector pin 1
65 Service RxD	Grey	Connector pin 2
68 C ground	Brown	Connector pin 4
<i>Boost pump relay</i>		
107 + relay boost pump	Red	Pin 86 of the boost pump relay
99 GND relay boost pump	Green-yellow	Pin 85 of the boost pump relay
+12V fused BATT	Red	Pin 30 of the boost pump relay
+12V Boost pump	Red	Pin 87 of the boost pump relay

Driver room

<i>3-pole micro connector</i>		
66 Ground fuel switch	Brown	Connect the 3-pole connector to the Prins fuel selection switch.
3 +12V fuel switch	Red	
49 LIN fuel switch	yellow	
51 CAN-High	Blue-yellow	EOBD connector pin 6
70 CAN-Low	Blue	EOBD connector pin 14




Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.
Insulate not used wires.

Lpg tank housing

Wire number / code	Wire colour	Connection
3-pole tank level connector 40 Ground tank gauge 12 Tank level in 11 + tank level supply	Brown Blue Red	Connect the 3-pole connector to the tank level sensor. Connector pin 1 Connector pin 2 Connector pin 3
1. 2-pole connector tank lock-off	Green-yellow Brown	Pump driver to lock-off power Pump driver to lock-off ground
2. 3-pole fusite	Red Brown -	1. Pump power 2. Pump ground 3. not used
3. 2-pole connector tank pump	Red 2.5mm ² Brown 2.5mm ²	Pump driver power Pump driver ground
4. 2-pole connector	Grey Green	Pump driver diagnose Pump driver control

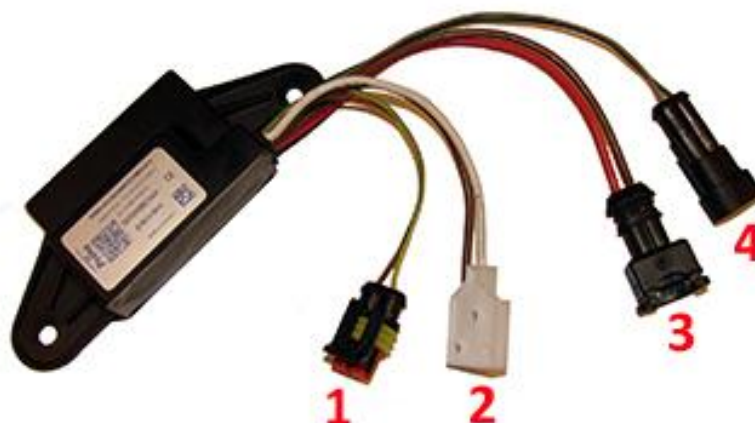

Wiring tank relay 2 + tank relay 26 Ground tank relay +12V BATT fused +12V pump driver	Red Green-yellow Red 2.5mm ² Red 2.5mm ²	Pin 86 of the tank relay Pin 85 of the tank relay Pin 30 of the tank relay Pin 87 of the tank relay
--	---	--



Checklist after installation

1. Install the system fuses.
Turn on ignition.
Connect the Prins interface wire and run the Prins diagnosis program.
When working on the car, beware of moving and rotating parts in the engine compartment (even when the engine is not running !!).
2. When commissioning the LPG system, you must activate the AFC with the diagnosis software.
3. Check whether the program in the AFC matches with the car (dedicated engine set):
See "Identification" in the diagnosis program.
4. Check all components and connections for any LPG leakage, use a LPG leak detector device or a fluid detection like soap. Also check for petrol leakage. Make sure the solenoid valves are in open position.
No evidence of leakage is permitted.
Caution for moving and rotating parts in the engine compartment !
5. Use the diagnosis software to check again all input and output signals.
6. Check the system for error codes and solve these, if required.
Check the petrol MMS for EOBD error codes.
Place the protection connector back on the diagnose connector.
7. Make a test drive and check the cars drivability on LPG and petrol.

