



Installation manual

PART 2/2

We strongly recommend ValveCare-DI on this engine

MANUFACTURER	Hyundai / Kia
TYPE	(based on Sportage G4FD)
ENGINE DISPLACEMENT	1591cc
NUMBER OF VALVES	16
ENGINE CODE / NUMBER - OUTPUT	G4FJ - 130 kW
FIRING ORDER	1-3-4-2
VEHICLE CATEGORIES	M
TRANSMISSION	MT
VERSION	AFC-2.1 DI-LPG eVP
TYPE VSI INJECTOR	KN9 - 63cc
TYPE INJECTION MODULE	Gen2 Type 4
PETROL ECU MANUFACTURER / CODE	CPEGD 2.20.3
MODEL YEAR:	2018-
SYSTEM APPROVAL NUMBER (R115)	E4-115R-000031 / VSI-LPG 45
LOCATION R115 SYSTEM STICKER	right side, centre door post
ENGINE SET NUMBER	349/129005/A
MANUAL NUMBER	076/2892200
DATE	2020-04-01

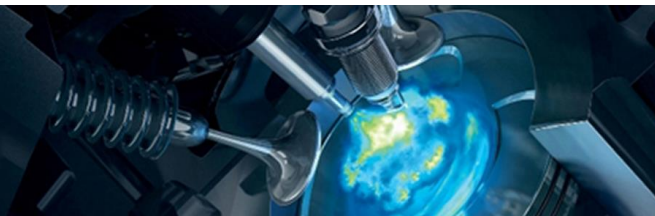


TABLE OF CONTENTS

General instructions	2
Required equipment / tools / materials for installing a complete system	3
Vehicle check	3
Tightening moments	4
Basic System Overview	4
VSI approval numbers	6
VSI component location overview	7
Water Connections	8
Mounting the inlet manifold couplings 1	9
Mounting the inlet manifold couplings 2	10
Overpressure connection	11
Extending the engine cover mountings	12
Mounting the Injector Rail 1	13
Mounting the Injector Rail 2 / Prins Filter Unit 1	14
Mounting the Injector Rail 3 / Prins Filter Unit 2	15
Mounting the Injector Rail 4 / Prins Filter Unit 3 / Overpressure	16
LPG hoses	17
Mounting the fuel selection switch	18
Mounting the fuel selection switch	19
Basic Wiring Diagram	20
Electrical connections - Driver Room	21
Electrical connections - Driver Room	22
Wiring routing & fuse	23
Electrical connections	24
Electrical connections	25
Electrical connections – Dedicated wiring loom	26
Electrical connections – Dedicated wiring loom	27
Electrical connections – Dedicated wiring loom	28
Electrical connections	29
Finishing	30
Checklist after installation	31
FOR EXPLANATION AND CIRCUIT DIAGRAMS SEE : INSTALLATION MANUAL GENERAL PART 1 / 2	



General instructions

- The installation of the system shall be done in accordance with the installation manual provided by Prins Autogassystemen.
- This manual is based on Dutch regulations; always install the system in accordance to the local regulations.
- Always download the “general manual 1/2” from our [website](#) for basic instructions and diagrams.
- Always disconnect the battery when installing the LPG system. Make sure the ignition key is outside the car. Be aware of central door locking, radio / telephone memory code and alarm system.
- Do not place the main fuse into the fuse holder before having completed the installation of the VSI system.
- The VSI computer has to be activated by means of the diagnosis software.
- In the unlikely event the AFC fails, it will automatically switch over to petrol. Never disconnect the AFC connector, unless you have removed the main fuse.
- When installing the VSI wiring harness, ensure that it does not run near any of the ignition components.
- Solder and insulate all electrical connections.
The wires in the loom are provided with numbers and text.
The text on the wire explains the function of the wire.
The wire harness is not model specific, therefore it may be necessary to adjust the length of the wires.
Ensure maximum care is taken when connecting the wiring.
Make professional joints using solder and shrink sleeve. Do not stretch the wiring harness.
- No component of the LPG-system shall be located within 100mm of the exhaust or similar heat source, unless such components are adequately shielded against heat.
- Remove any internal burrs after having shortened the LPG pipe.
(This guarantees the maximum flow through the pipe without pollution.)
- If holes have to be drilled (wear safety glasses) for installing brackets, etc., the drilled holes must always be treated with an anti-corrosion agent after the chips have been removed (especially when mounting an exterior filler into the body work).
- After having completed the installation, check the whole system for gas leakage; use a gas leak detection device. Also check for any leak of engine coolant, petrol and air.
- Fitting and maintenance is only allowed by Prins Autogassystemen selected LPG engineers.
- Failure to follow the instructions in this manual can result in a poor or non-working LPG-installation or a dangerous situation.
- For maintenance instructions and filter registration see owner's manual.
- Prins Autogassystemen is not responsible for any damages to people or objects as a result of changes to Prins products.
- [Check our website regularly for diagrams, certificates, updates, info-bulletins and product information.](#)

Please fill in the [warranty portal](#) completely within 14 days after installation.



Required equipment / tools / materials for installing a complete system

- Complete workshop toolbox (wrenches, screwdrivers, cutters, pliers, ratchet, sockets)
- Car lift
- Portable computer
- Vehicle fuel system scan tool or OBD scan tool Prins (part no. 099/99928)
- Exhaust gas analyser
- Multimeter
- Oscilloscope
- Prins diagnostic software
- Prins Diagnostic Tool
- Torque wrench (5-50Nm)
- Torque wrench (200-250Nm)
- Portable light
- Assortment drill bits Ø4 to 12 mm
- Assortment cutters (Ø20, 30, 50, 70 mm)
- Portable drill or pneumatic drill
- Thread cutting device (male M6x1, M8x1, M10x1)
- Air gun
- Vacuum cleaner
- Safety goggles
- Hot air gun
- Soldering iron, soldering tin
- Wire-stripping pliers
- Adhesive tape
- Adhesive sealant
- Thread locking compound
- Anti-corrosion agent / black body coating
- Gas leak detection device or foam leak spray
- Shrink sleeves

Vehicle check

- Check the vehicle drivability on petrol
- Check the fuel system for error codes (scan tool)
- Check if the catalytic converter is in good condition (exhaust gas analyser)
- Check the condition of the ignition system (spark plugs, cables, coil)



Tightening moments


	Nm	Spanner mm
M5 x 0,8	6.5	8
M6 x 1,0	11.3	10
M8 x 1,25	27.3	13
M10 x 1	52	15-16-17
M10 x 1,5	54	15-16-17

LPG manifold nipple	1	3.5 Allen
Reducer nut - bracket	10	13
Lock-off nut	15	16
Fuel line nut – lock-off	20	13
Fuel line tank – lock-off	20	16
Filling hose connections	50	22

EXPLANATION OF SYMBOLS:




= IMPORTANT, CAUTION

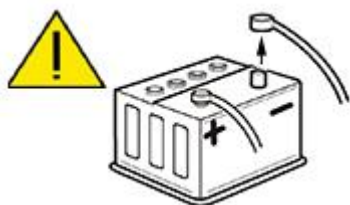



= WEAR SAFETY GOGGLES

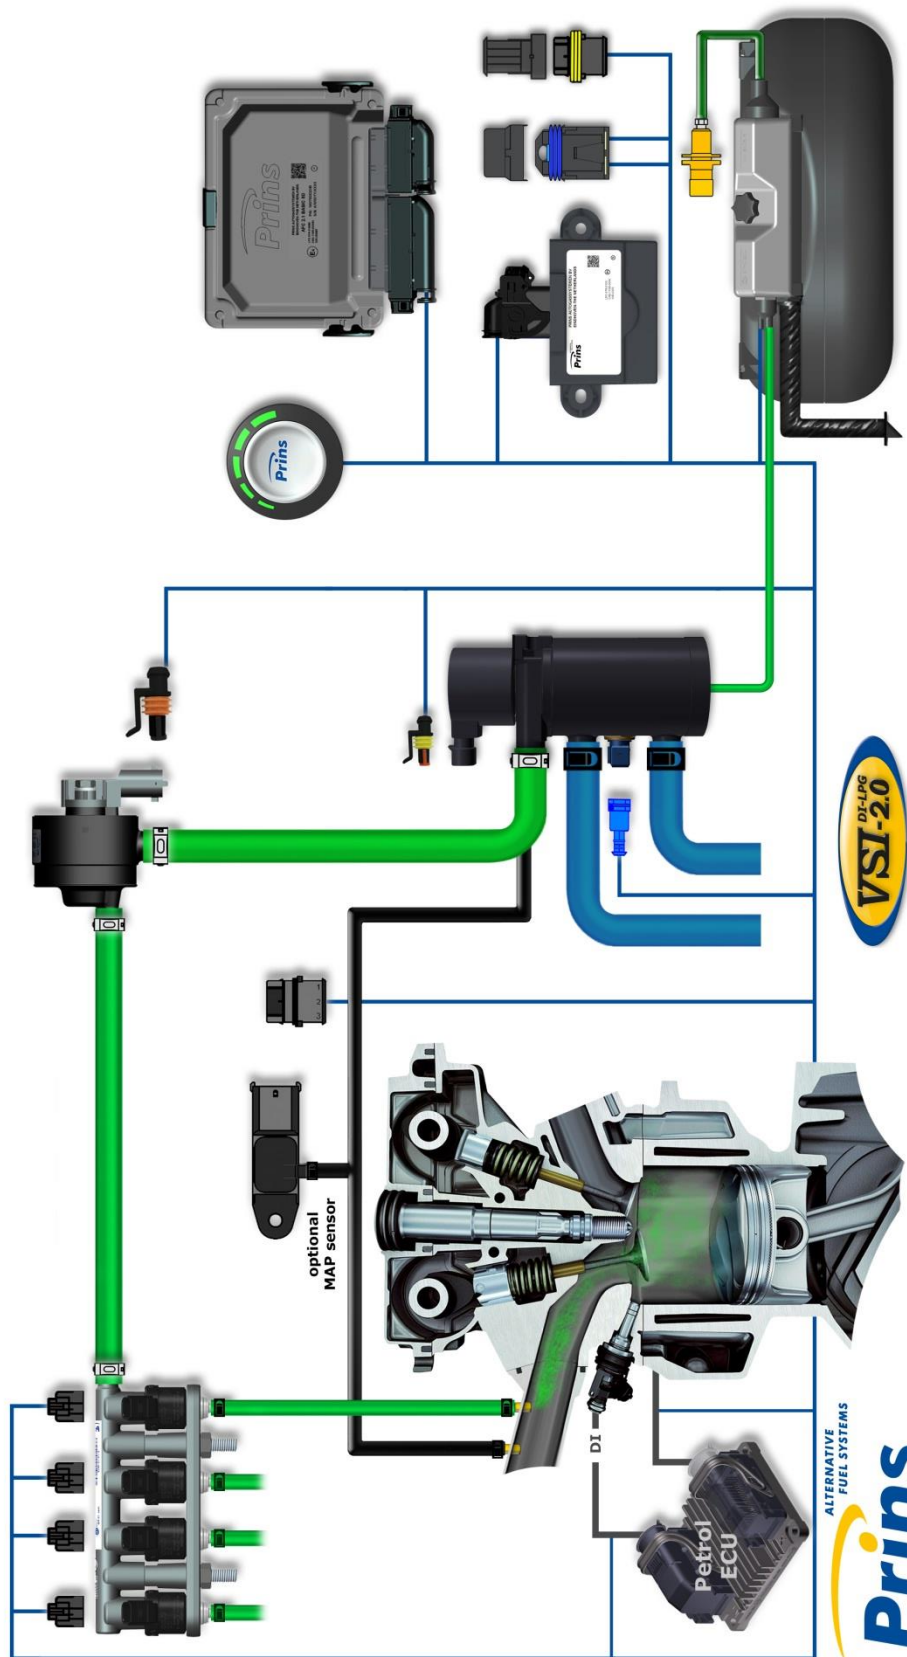







Basic System Overview

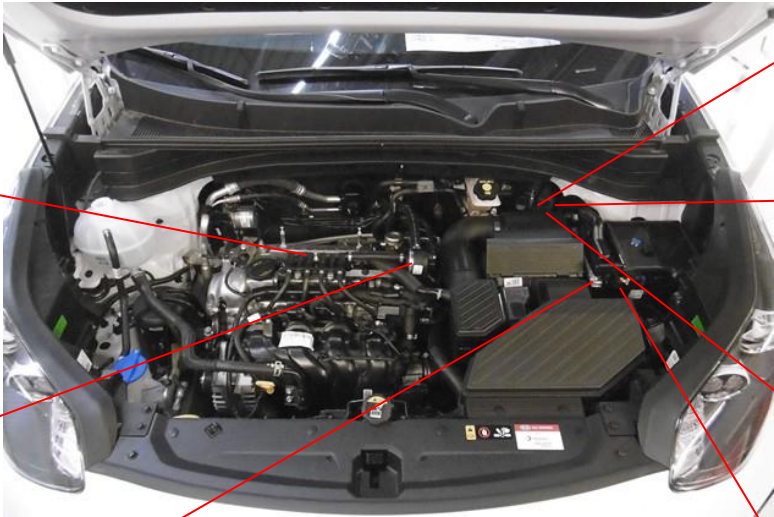


VSI approval numbers

	
Prins eVP-500 LPG: E4-67R-010358	Injector rail Prins : LPG E4-67R-010093 CNG E4-110R-000021
	
Filter unit Prins : LPG E4-67R-010096 CNG E4-110R-000028	Injector Keihin KN9 : LPG E4-67R-010310 CNG E4-110R-000295
	
Prins AFC : E4-67R-010098 E4-10R-030507	Tubithor : LPG E13-67R-010145 CNG E13-110R-000017 Rubia : LPG E4-67R-010068 CNG E4-110R-000003 WinLas : LPG E37-67R-010140 CNG E37-110R-000012 Thunderflex : LPG E24-67R-010018 CNG E24-110R-000040


VSI component location overview
(sample overview from the Sportage G4FD)

		eVP-500 
Rail 		AFC 
Filter 		Injection module 
Petrol ECU 		Fuse box 

	<p>If applicable, R115 approval sticker : Right side centre door post</p>
---	---

Water Connections


(This is based on the G4FD. The G4FJ is a little tighter in the back of the vehicle)

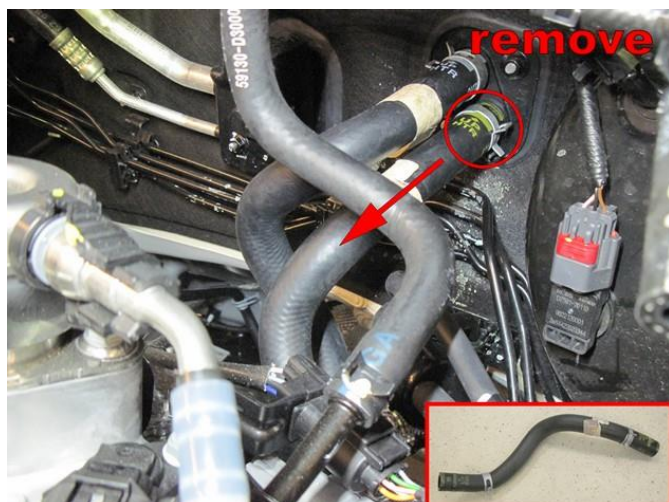

Remove the original hose from the engine to the heater.



Cut the water hoses on length and with a little lubrication mount them to the original water connections.

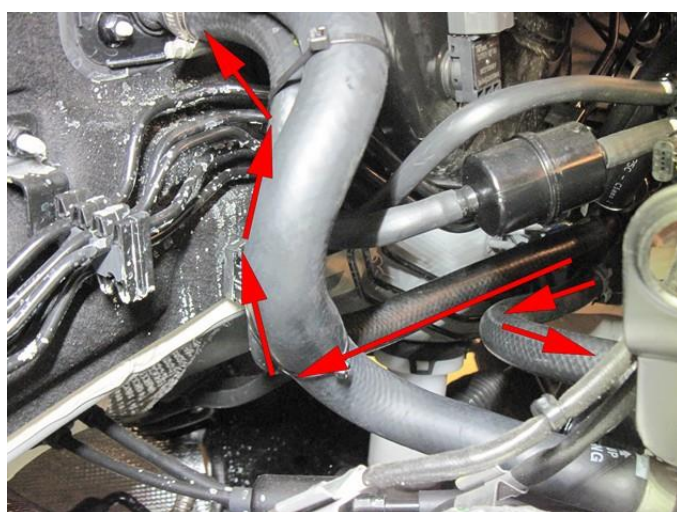


Cut the water hoses on length and mount them with a little lubrication to the original water connections.
Fixate with pull-straps.

Mounting the inlet manifold couplings 1

(Based on the G4FD, the installation is the same for the G4FJ)

Remove the inlet manifold. Drill **5** holes of **5mm** in the inlet manifold. Cut **M6x1** thread in these holes. Place the VSI couplings with a locking compound in the inlet manifold. Watch out that the locking compound doesn't come inside the VSI couplings. Place the inlet manifold back on the engine.

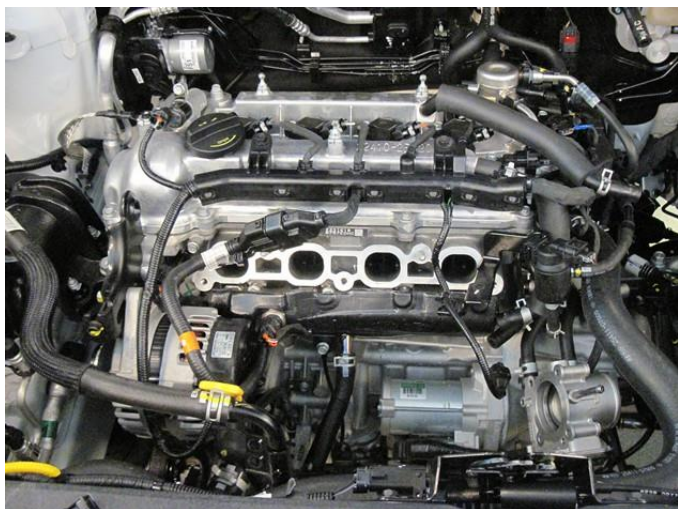

Remove the inlet manifold





Drill holes 5mm and cut thread M6.


Mounting the inlet manifold couplings 2



Drill holes 5mm and cut thread M6.

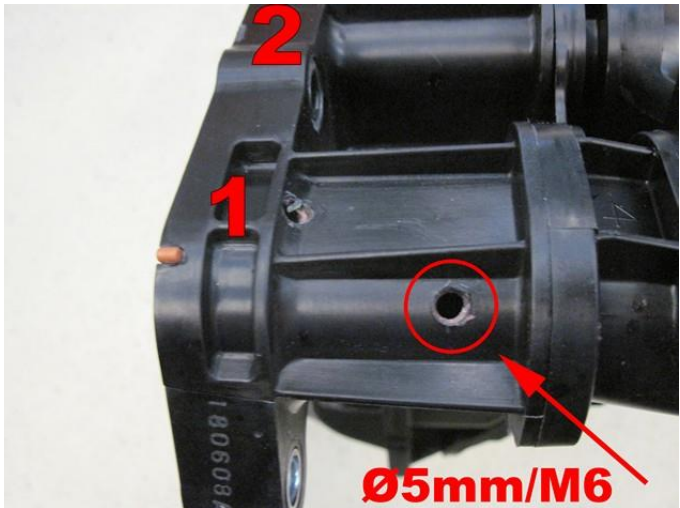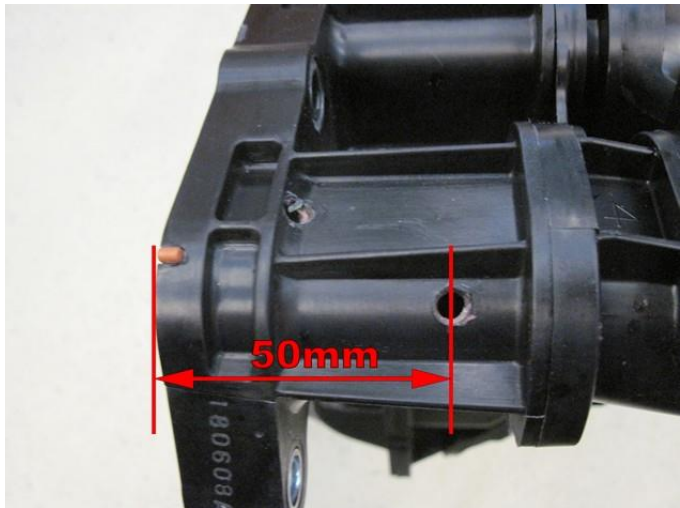

Drill holes 5mm and cut thread M6.

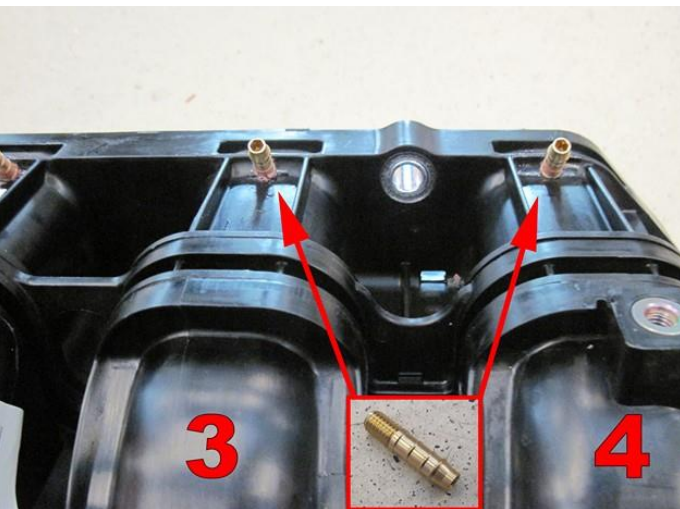


Mount the VSI couplings with a locking compound.

Overpressure connection




Mount the VSI coupling with a locking compound.

Mounting the Injector Rail 1

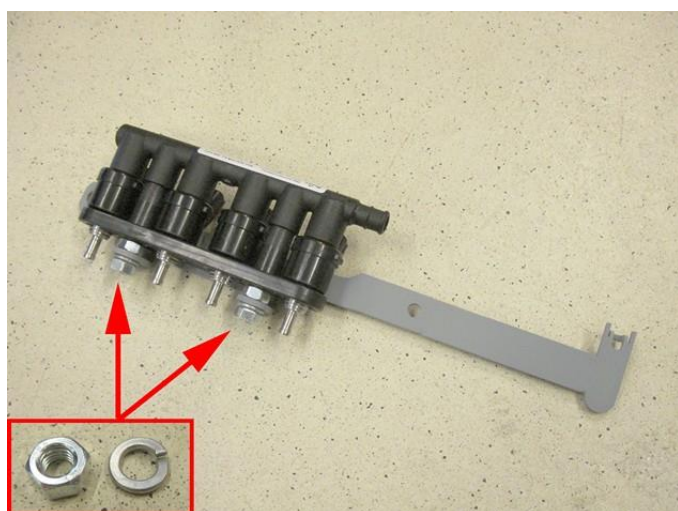

Mount the injector rails to the bracket

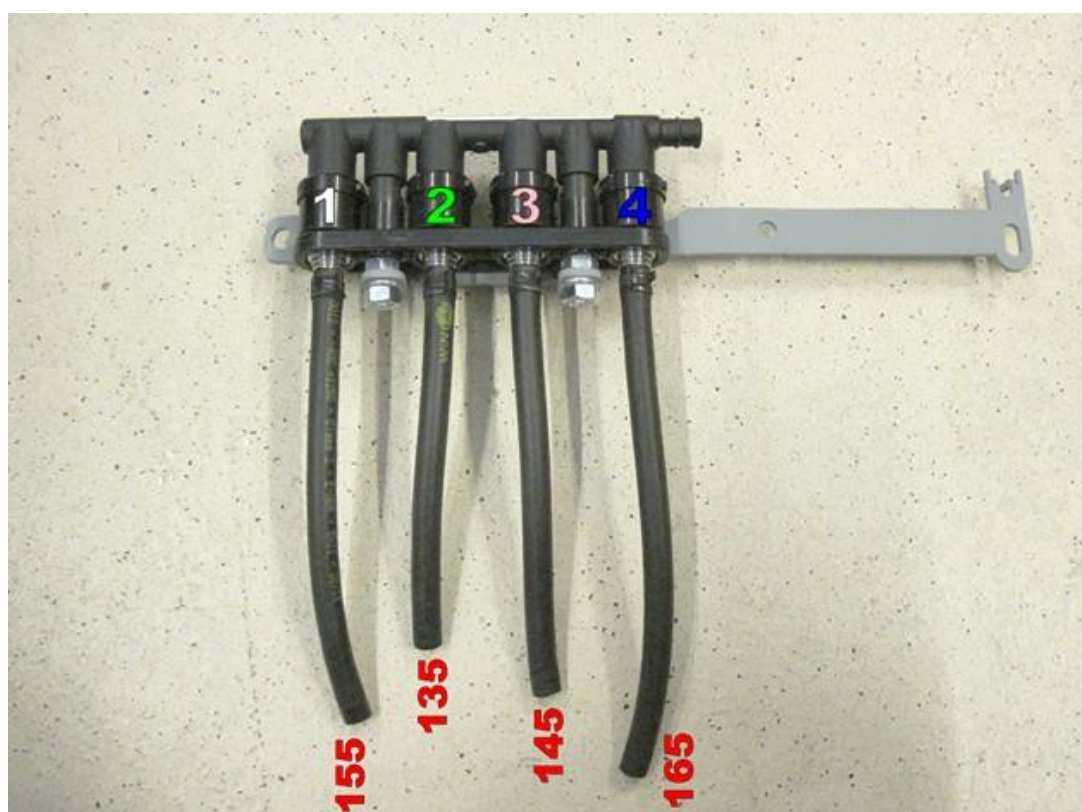


Mount the 5mm LPG hoses with the correct length to the injector rail.

Mounting the Injector Rail 2 / Prins Filter Unit 1



Mount the 5mm hoses to the rail. Mount the clamps for the VSI couplings to the hoses (preparation).

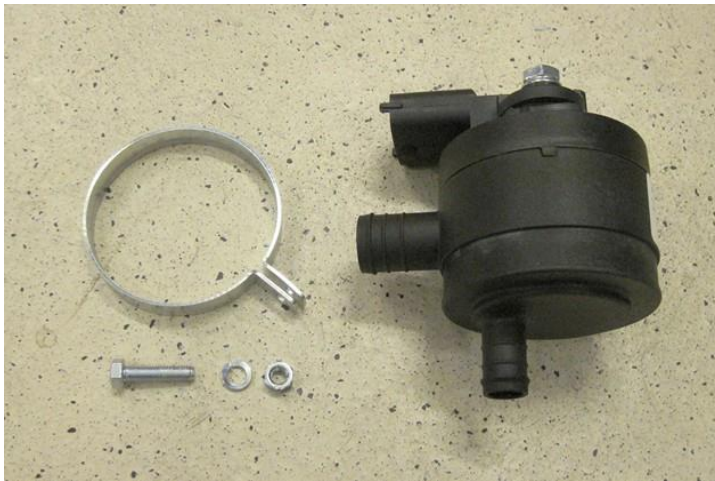


Mount the filter with the clamp to the bracket as shown,




Mount the 11mm LPG hose between the Prins filter and the injector rail.


Mounting the Injector Rail 3 / Prins Filter Unit 2

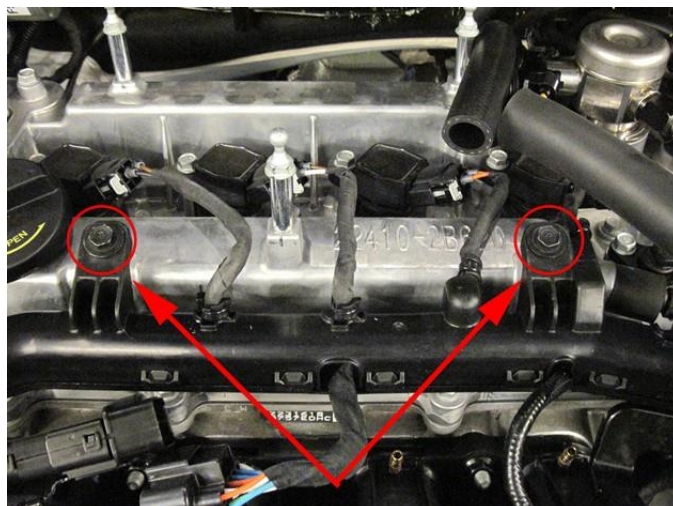

Mount the bracket with injector rail and filter to the original mounting points.


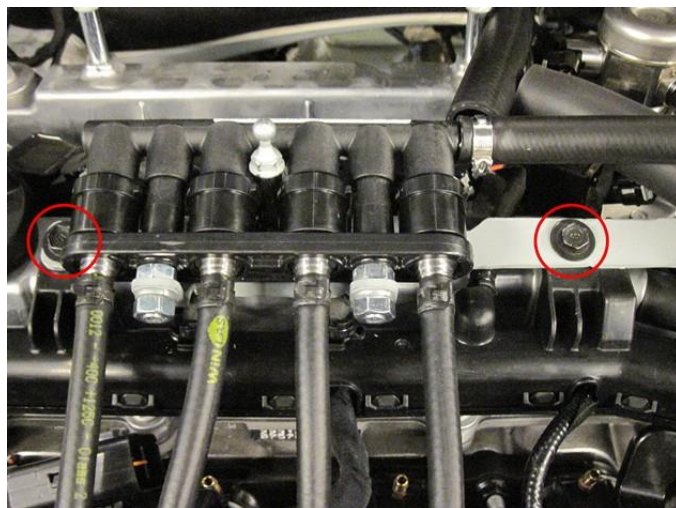


Turn clamp to fit the Prins filter under the hose.

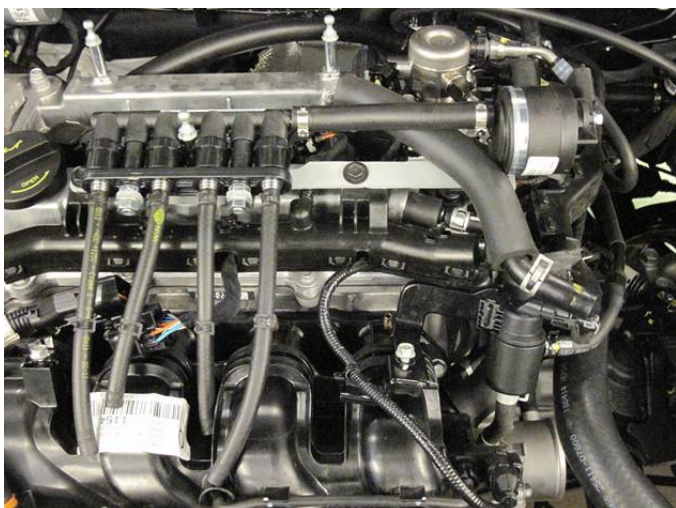


Connect the hoses to the VSI couplings.


Mounting the Injector Rail 4 / Prins Filter Unit 3 / Overpressure

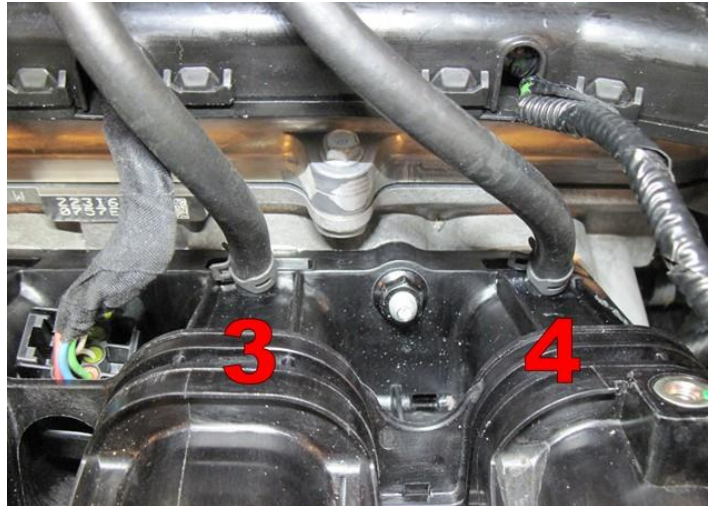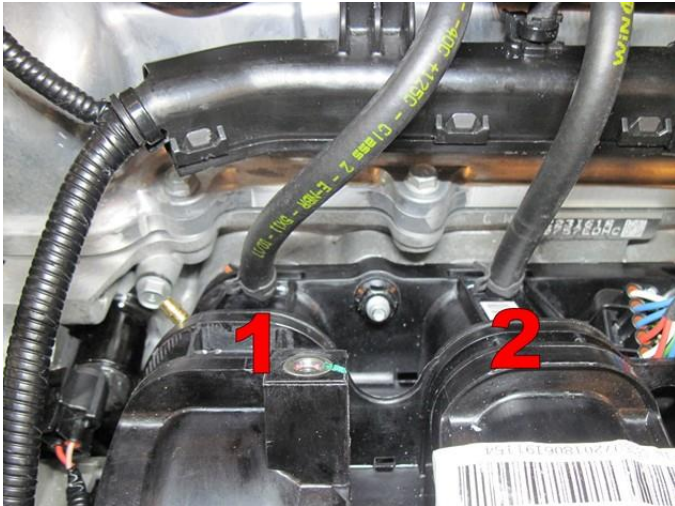

Connect the hoses to the VSI couplings.

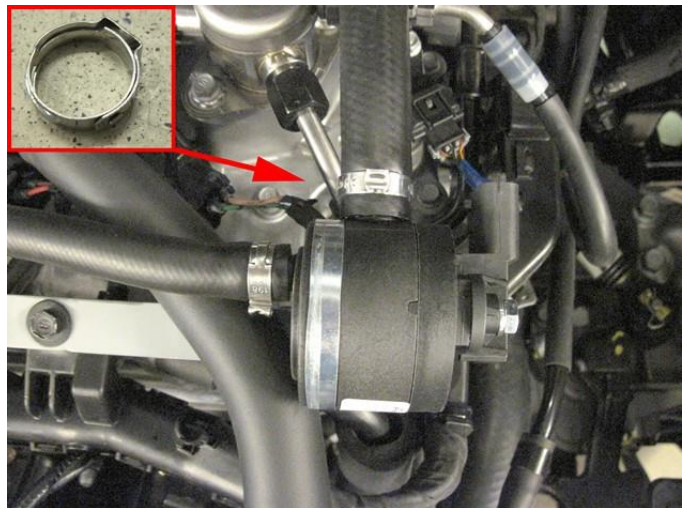

Mount the 16mm LPG hose from the eVP-500 to the Prins filter.

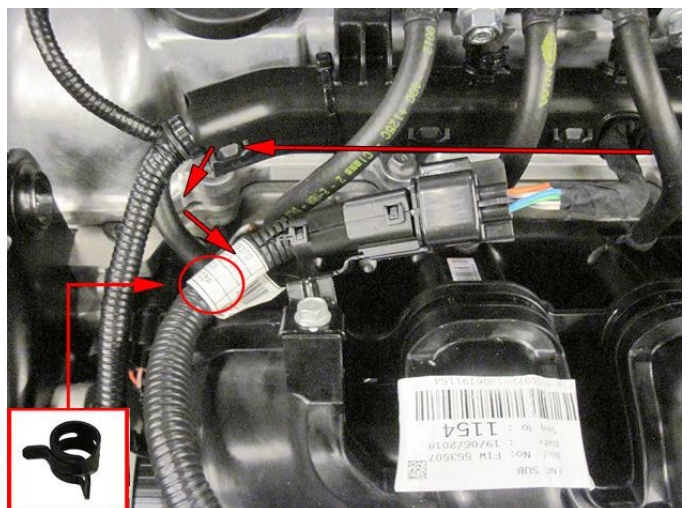

Mount the 5mm overpressure hose from the eVP-500 to the overpressure coupling.
For the routing, follow the 16mm LPG hose around the filter, via the wiring to the overpressure coupling.

LPG hoses
(based on Kia Sportage G4FD)

Hose (Ø in mm)	From component	To component	Hose length (cm) +/-
16	eVP-500	Prins filter unit	70
11	Prins filter unit	VSI injector rail	14
5	eVP-500 overpressure	Inlet manifold coupling	130
5	VSI injector 1	Inlet manifold coupling cyl.1	15,5
5	VSI injector 2	Inlet manifold coupling cyl.2	13,5
5	VSI injector 3	Inlet manifold coupling cyl.3	14,5
5	VSI injector 4	Inlet manifold coupling cyl.4	16,5

General info.

Cut the LPG hoses on length.

Please observe that there is no damage or fouling to the hoses.



Mounting the fuel selection switch



When mounting the switch, only push on its sides.
Pushing the switch hard in the centre may result in damage to the switch.


Remove parts as shown.



Mounting the fuel selection switch




Drill a hole Ø32mm for mounting the switch. Mount the switch with the ring and fixate with some hot glue.

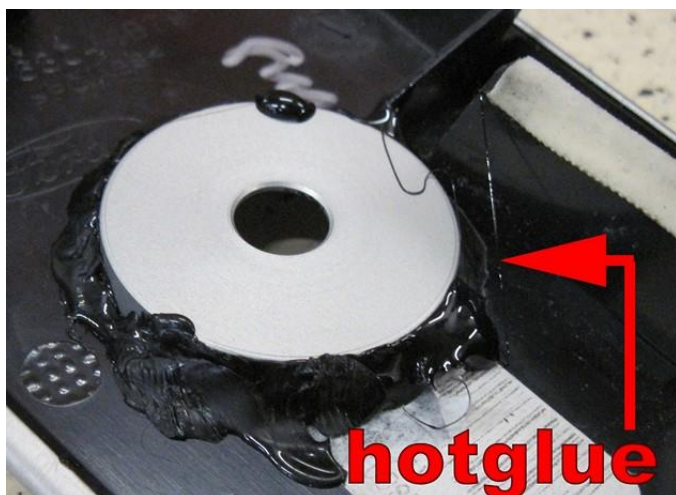




Mount the switch with the ring and fixate with some hot glue. Mount everything back.

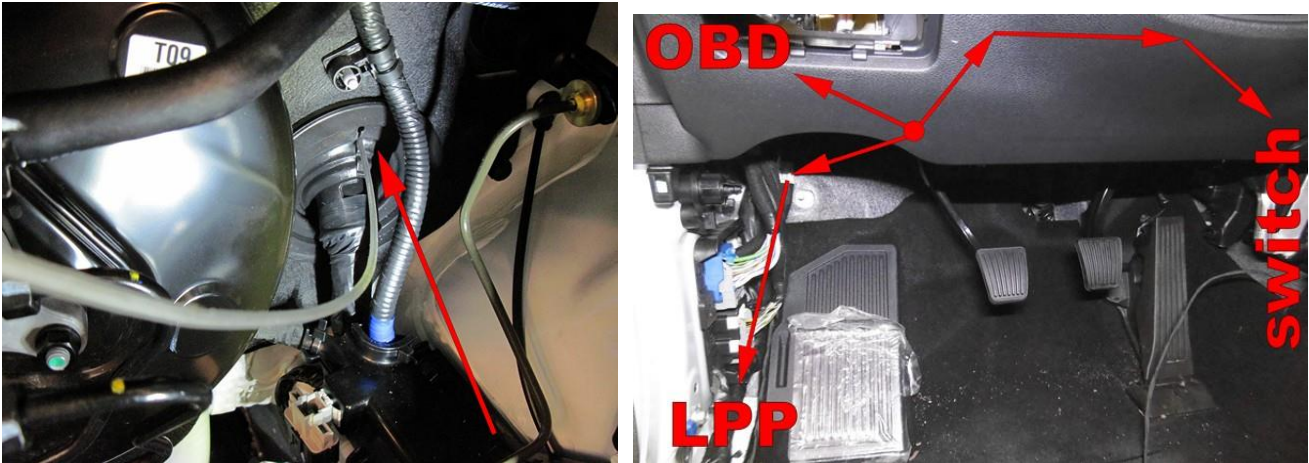


Electrical connections - Driver Room




Put the wires from the switch, CAN/OBD & Low Pressure Sensor (17&10) through the (prepared) grommet.
The wiring for the low pressure sensor are connected underneath the back seat.

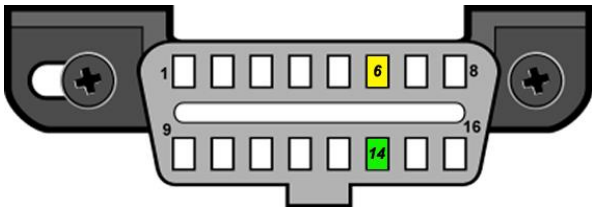

				Connect to EOBD diagnose connector.
51	CAN1 High		Yellow	Pin : 6
70	CAN1 Low		Green	Pin : 14


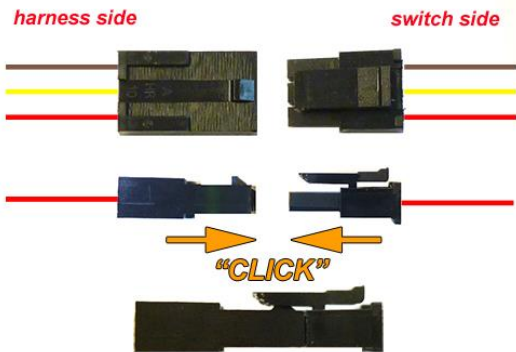


				Connect to the Prins fuel selection switch.
66	Ground fuel switch		Brown-black	
3	+12V fuel switch		Red-white	
49	LIN fuel switch		Yellow	



Electrical connections - **Driver Room**




17 & 10			Low pressure petrol sensor signal interruption. UNDER THE BACK SEAT, INSIDE THE VEHICLE Wire colour: blue or white Wire location: under cover back seat , pin 2
17	AD 2		Sensor side
10	DAC 2		Pump Driver side

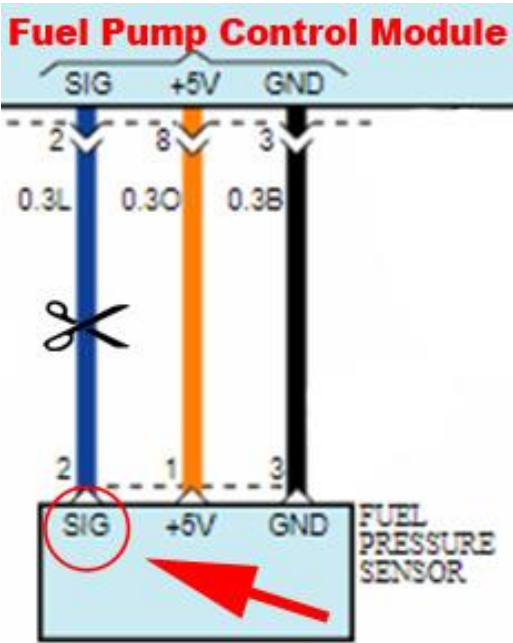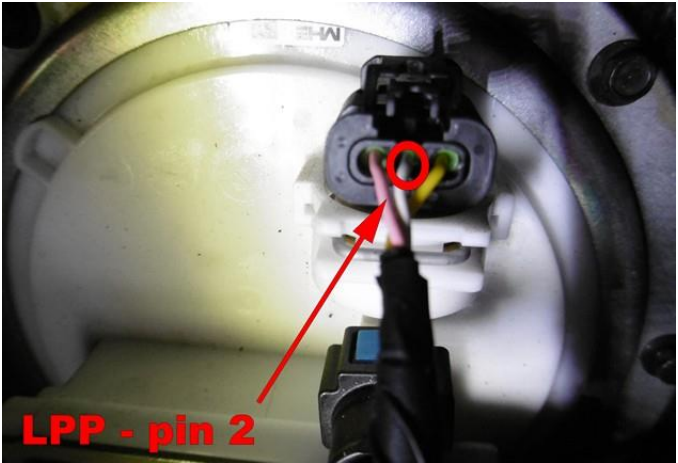

Connect wires 17 & 10 to the low pressure petrol sensor signal on the petrol tank.

Wiring routing & fuse


Do not place the fuse in the holder before having completed the installation of the LPG system

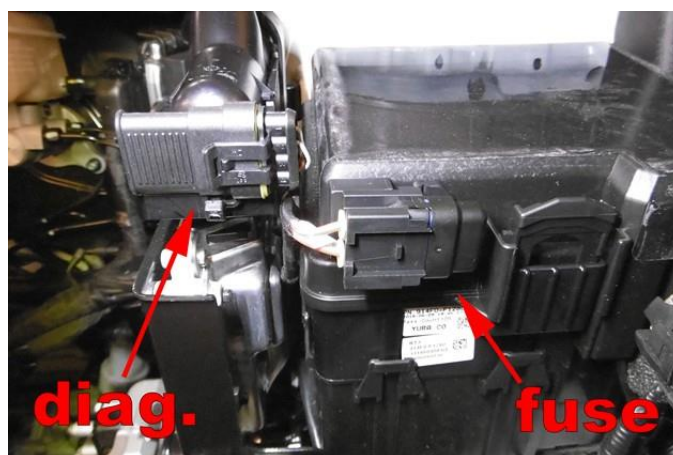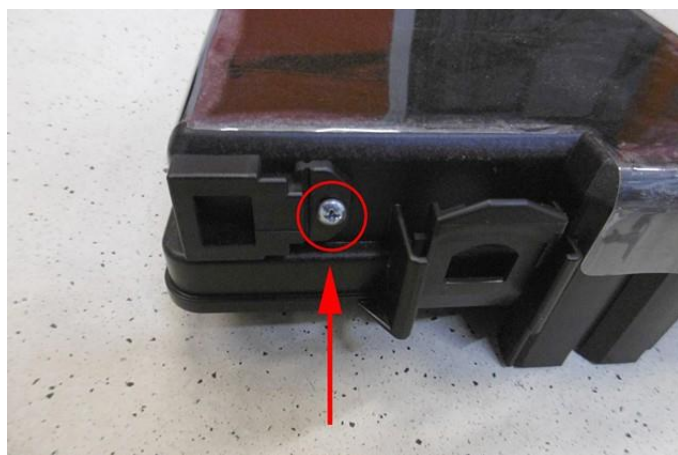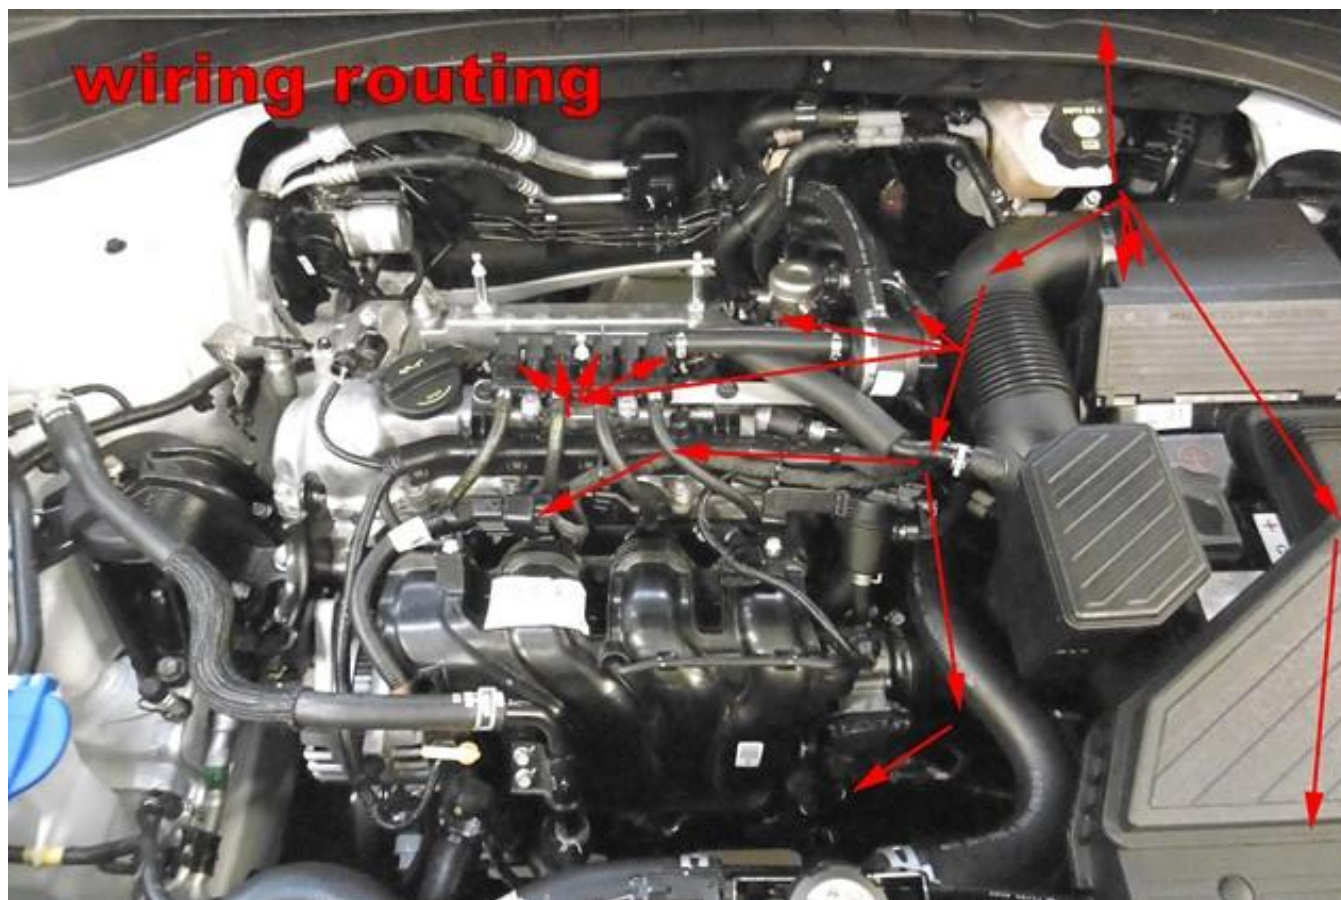



Electrical connections


Check and measure the wiring in case of changes in the cars wiring colours

Do not place the fuse in the holder before having completed the installation of the LPG system.

1 32	Ground battery Ground sense		Brown	Connect to the '-' of the battery; use a ring terminal: Wire colour: Black Wire location: Original battery ground location
---------	--------------------------------	---	-------	---

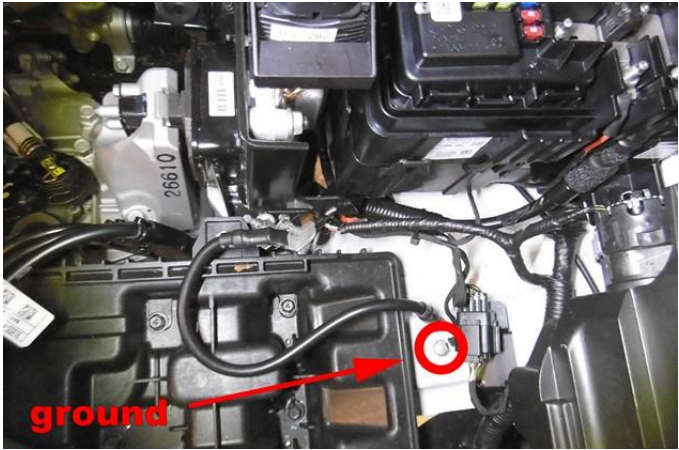



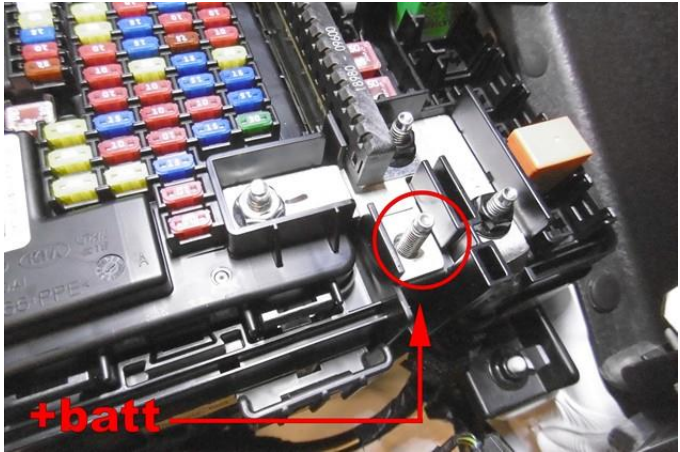






4	+12V Battery		Red	Connect to the '+' of the battery; use a ring terminal or solder: Wire colour: Red Wire location: Original +12V batt connection in the fuse-box
---	--------------	---	-----	--



Electrical connections

Mount all connectors from the Prins wiring loom to the right connector & fixate with pull-straps







98	98 G INJ OUT 1		White-yellow	Connector VSI-injector to cylinder 1. Timing belt/chain side
106	106 G + INJ 1		red	
99	99 G INJ OUT 2		Green-yellow	Connector VSI-injector to cylinder 2.
107	107 G + INJ 2		red	
100	100 G INJ OUT 3		Pink-yellow	Connector VSI-injector to cylinder 3.
108	108 G + INJ 3		red	
82	82 G INJ OUT 4		Blue-yellow	Connector VSI-injector to cylinder 4.
90	90 G + INJ 4		red	

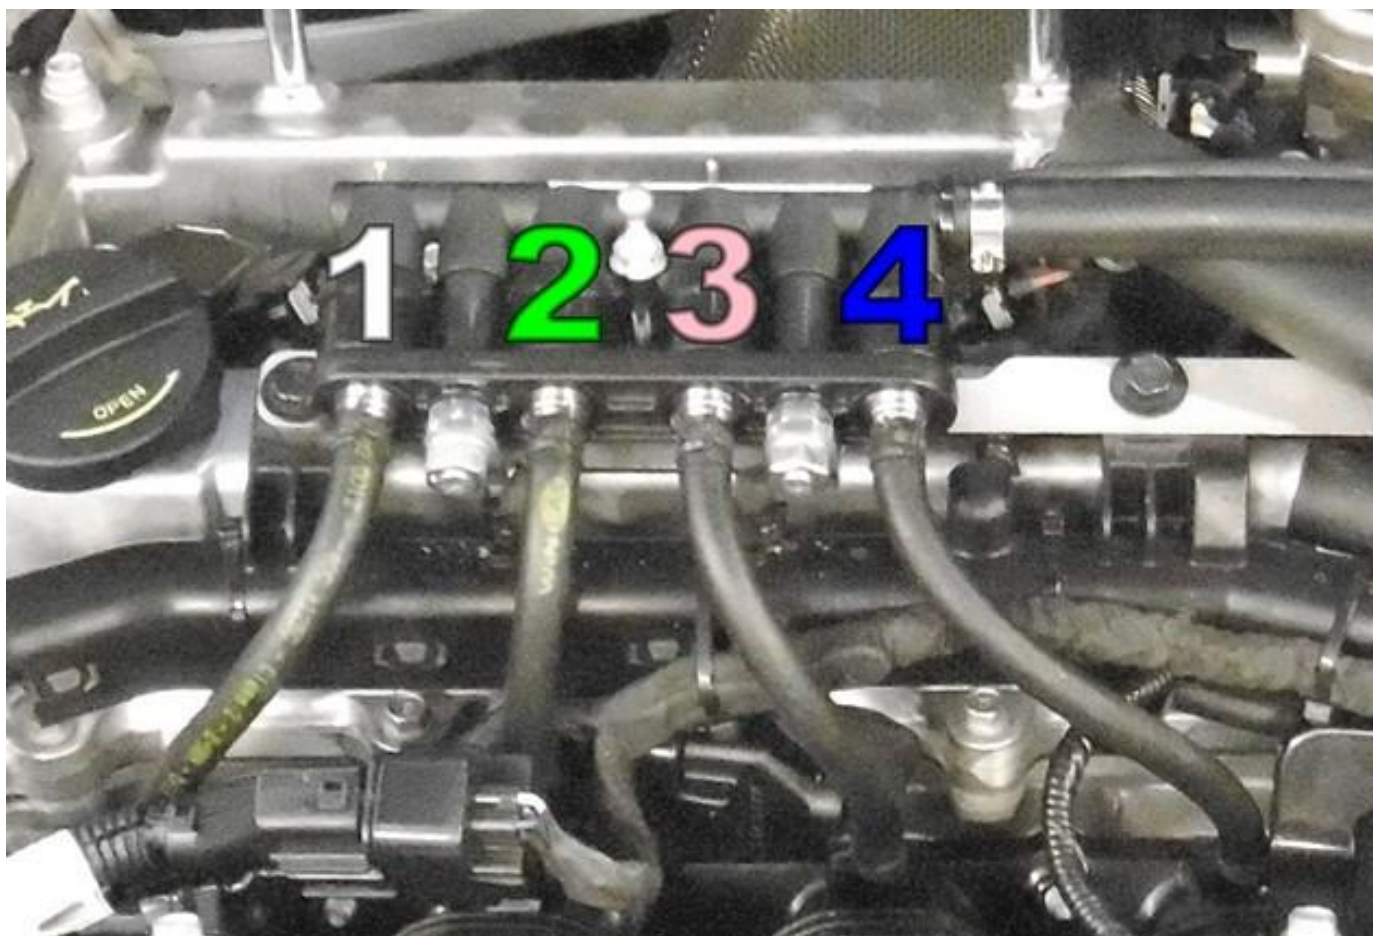


Mount het connectors from the wiring loom to the injectors.

Electrical connections – Dedicated wiring loom


Mount all connectors from the Prins wiring loom to the right connector & fixate with pull-straps

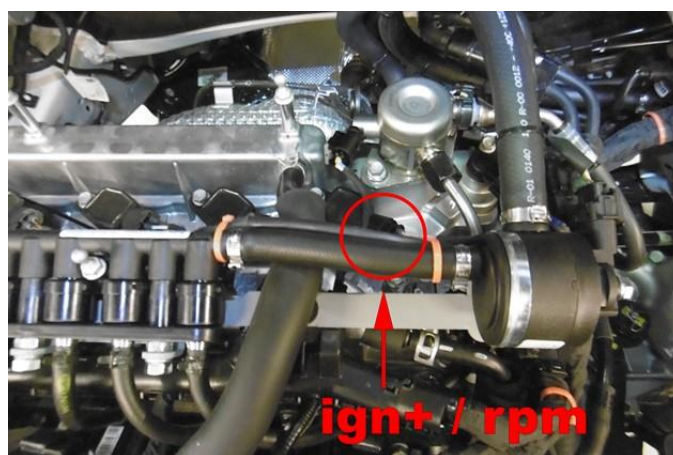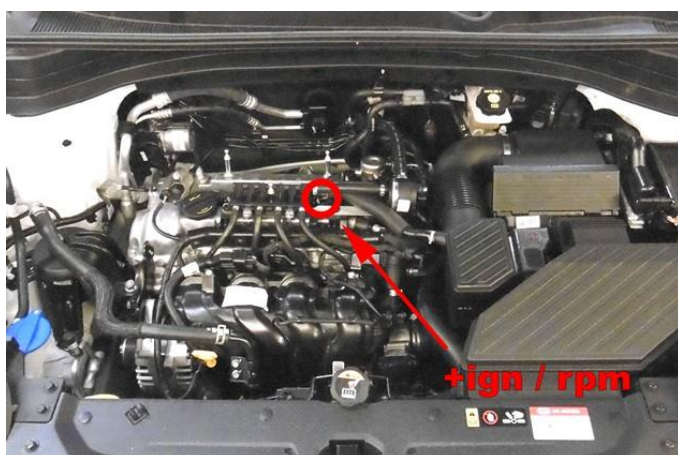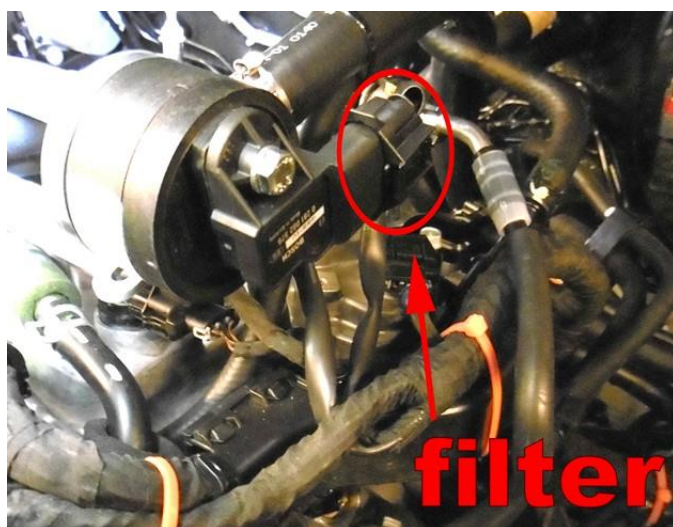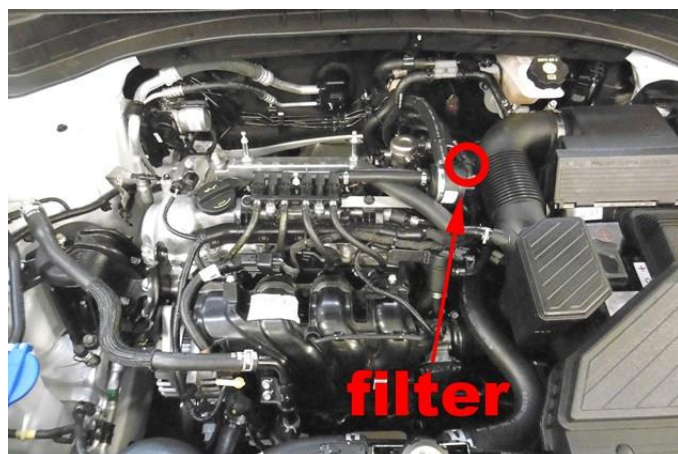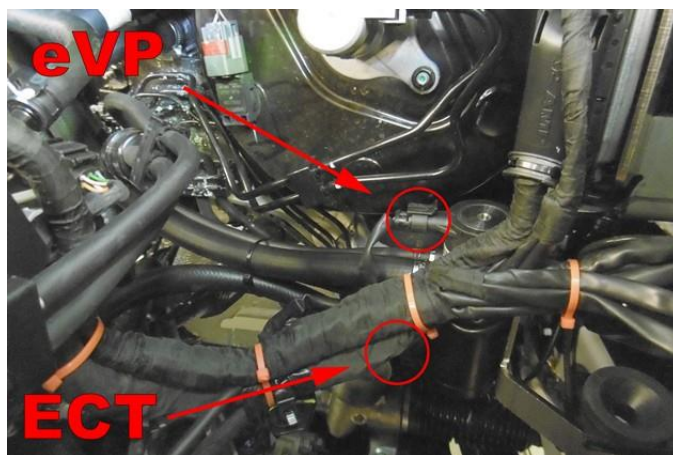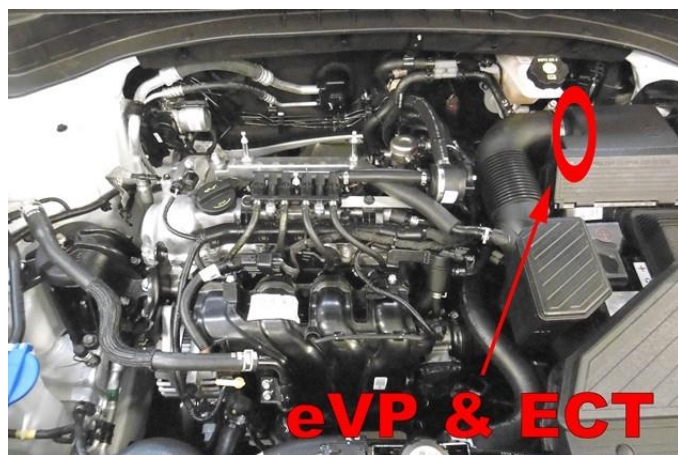

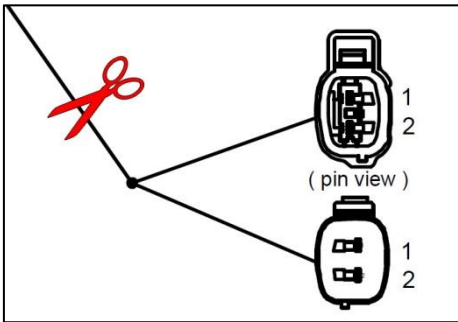

Electrical connections – Dedicated wiring loom
Check and measure the wiring in case of changes in the cars wiring colours.

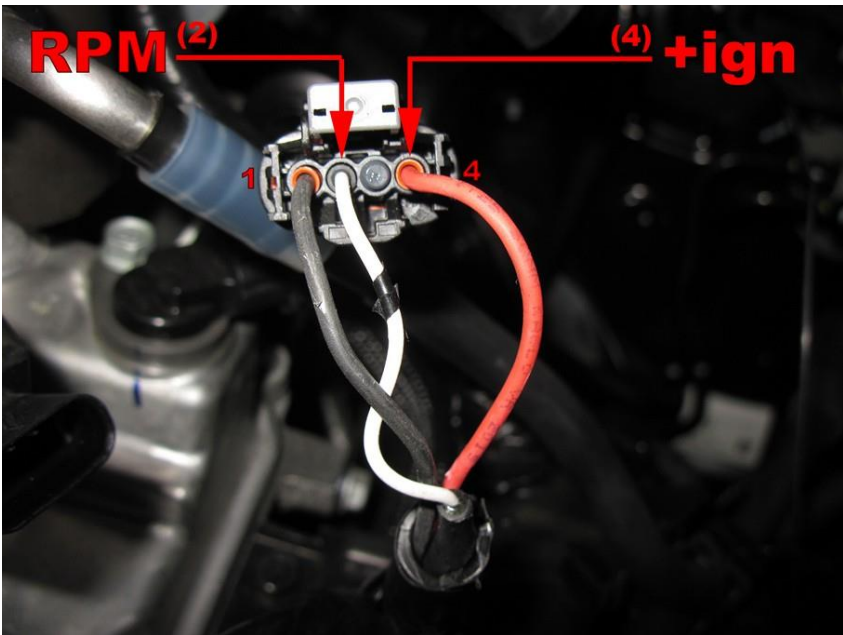




Cut-off the connector from the dedicated wiring with wire 8 (RPM) & 112 +Ignition and connect to the 4 pin ignition coil connector as shown below.



			For measuring the engine speed signal. Wire colour: White Wire location: Ignition Coil Cylinder 4, Pin 2
8	RPM		Purple-white
112			Connect to +ignition / contact+ (+15). Do not place the fuses in the holder before having completed the installation of the LPG system. Wire colour: Red Wire location: Ignition Coil Cylinder 4, Pin 4
112	+Ignition		Red-grey

Electrical connections – Dedicated wiring loom


Mount all connectors from the Prins wiring loom to the right connector & fixate with pull-straps

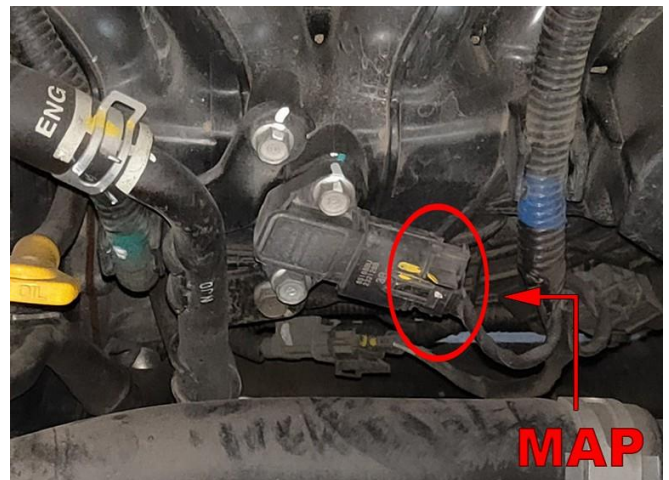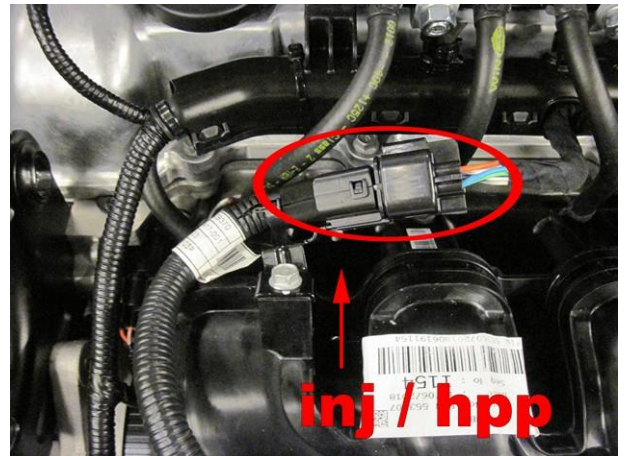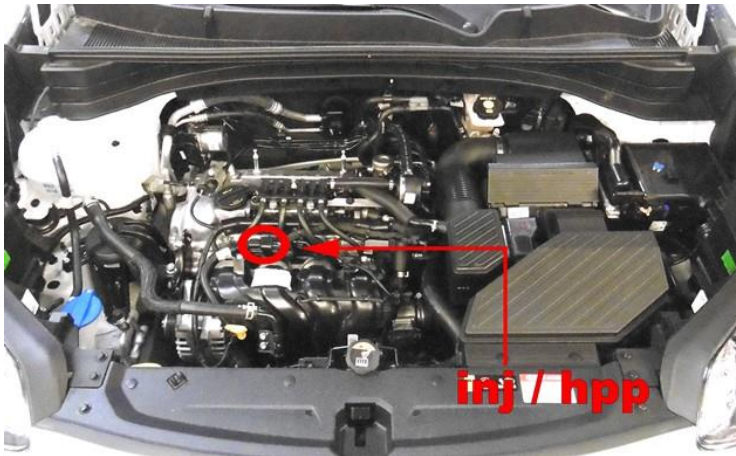

You have some extra wiring with connectors that lead to nothing; tie away with some pull straps.
Be sure to put the covers with the plugs onto those connectors against water penetration from the wiring loom.
Those connectors are normally used for the strongly recommended ValveCare-DI system.

Electrical connections

Connectors in wiring loom

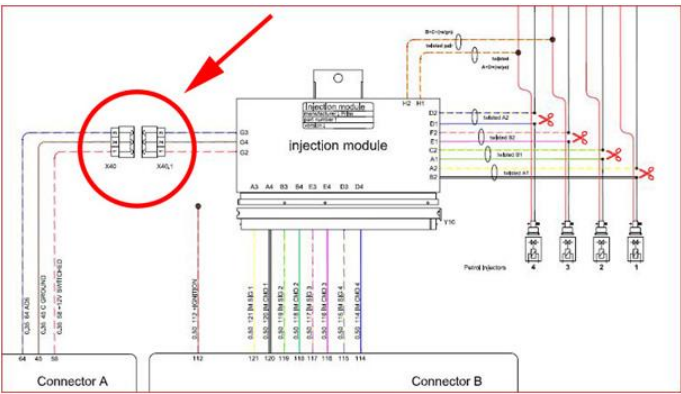2-pole blue connector 15 T-ECT 34 Ground T-ECT	Grey Brown-black	<i>For measuring the engine coolant temperature (Tect).</i> Connect the connector to the reducer temperature sensor.
4-pole connector 35 Ground Psys 14 T-Gas 9 +5 Volt sensor 16 Psys	Brown-black Grey Red-blue Green	<i>For measuring gas pressure and temperature.</i> Connect the connector to the filter unit sensor.
2-pole connector 24 +12V reducer lock-off 31 C Ground	Yellow-green Brown-black	Connect the connector to the reducer / eVP-500 lock-off valve.
4-pole connector 46 Service TxD 65 Service RxD 68 Ground PDT	Grey Grey Brown-black	Diagnose connector.
Tank wiring loom 2 +12V Tank relay 12 Tank level IN 26 Ground tank relay	red blue black	Connect to the tank lock-off. Connect the tank level gauge. Connect to the tank lock-off.
Wiring loom link 45 C ground 58 +12V switched 64 AD5	Brown-black Red-white Blue-grey	<i>Only without a dedicated wiring loom:</i> Connection from AFC connector A to connector B. 

Finishing

(This is based on the G4FD, it is similar for the G4FJ)



Checklist after installation

1. Connect the Prins Diagnostic Tool and run the VSI diagnostic program.
Install the VSI fuse, turn the ignition key in the accessory position.
When working on the car, beware of moving and rotating parts in the engine compartment.
2. When commissioning the LPG system, you must activate the AFC with the diagnostic software.
When the AFC has not been activated, the switch will keep blinking.
To activate the AFC, select function *activate ECM* in the diagnostic software.
3. Check whether the program in the AFC matches with the car (dedicated engine set):
Refer the car description in the diagnostic software (Basic → Identification) and compare these with the set number.
4. The system will switch over to LPG as soon as the temperature of the coolant becomes higher than parameter 70 - Switch over ECT.
5. Check all components and connections for any gas leakage (use a LPG leak detector device or a fluid detection like soap). Caution for moving and rotating parts in the engine compartment!
6. Let the engine run warm on petrol >80°C.
Check if the reducer heats up.
Check the engine signals, petrol injection time, RPM, ECT, lambda, MAP signal and petrol pressure signal.
Let the engine run idle on LPG.
Adjust the reducer pressure.
Refer to *Basic → System* in the diagnostic software for the idle level value set.
Adjust the reducer pressure in such a way that the pressure measured (P-sys) equals the idle level value.
Turn the socket-head screw at the front of the reducer to adjust the pressure.
An error code will be generated whenever the pressure variation is too high.
7. Use the diagnostic software to check again all input and output signals.
8. Check the system for error codes and solve these, if required.
Check the petrol ECM for EOBD error codes.
Place the protection connector on the VSI communication connector.
9. Take a test drive and check the drivability on LPG and petrol.

