



## ***Installation manual***


### ***PART 2/2***

**We strongly recommend ValveCare-DI on this engine!**

MANUFACTURER	Nissan
TYPE	Based on X-Trail (T32)
ENGINE DISPLACEMENT	1618cc
NUMBER OF VALVES	16
ENGINE CODE / NUMBER - OUTPUT	1.6 DIG-T MR16DDT - 120 kW
FIRING ORDER	1-3-4-2
VEHICLE CATEGORIES	M
TRANSMISSION	M
VERSION	AFC-2.1 DI-LPG
TYPE VSI INJECTOR	KN9 - 63cc
INJECTION MODULE	Gen2 Type 2
PETROL ECU MANUFACTURER / CODE	Hitachi BED431-401-A15728-5R
MODEL YEAR:	2014-
SYSTEM APPROVAL NUMBER ( R115 )	n.a.
LOCATION R115 SYSTEM STICKER	right side, centre door post
ENGINE SET NUMBER	356/121002/A
MANUAL NUMBER	076/1602400-2
DATE	2020-07-01

Copyright © Prins Autogassystemen 2018

Revision: 2

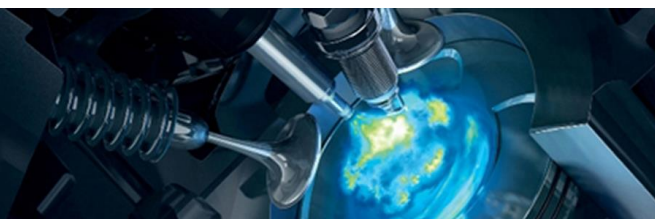

## TABLE OF CONTENTS

Manual updates / revision .....	2
General instructions .....	3
Required equipment / tools / materials for installing a complete system .....	4
Vehicle check .....	4
Tightening moments .....	5
Base diagram .....	5
VSI approval numbers .....	7
VSI component location overview .....	8
Examples .....	9
Overpressure / MAP connection .....	10
Mounting the inlet manifold couplings .....	11
Mounting the VSI injector rail .....	12
ValveCare-DI .....	13
Wiring routing .....	14
Mounting the fuel selection switch .....	15
Wiring Diagram .....	16
Electrical connections – Insulate .....	17
Electrical connections .....	18
Electrical connections .....	19
Electrical connections .....	20
Electrical connections Connector A .....	21
Electrical connections Connector B .....	21
Electrical connections Fuse box .....	22
Electrical connections .....	23
Checklist after installation .....	24
<b>FOR EXPLANATION AND CIRCUIT DIAGRAMS SEE : INSTALLATION MANUAL GENERAL PART 1 / 2</b>	



**Manual updates / revision**

Rev. nr	Rev. Date	Subject update
1	2019-02-21	-
2	2020-07-01	Updated with ValveCare-DI



## General instructions

- The installation of the system shall be done in accordance with the installation manual provided by Prins Autogassystemen.
- This manual is based on Dutch regulations, always install the system in accordance to the local regulations.
- Always download the “general manual 1/2 “ from our [website](#) for basic instructions and diagrams.
- Always disconnect the battery when installing the LPG system. Make sure the ignition key is outside the car. Be aware of central door locking, radio / telephone memory code, alarm system.
- Do not place the main fuse into the fuse holder before having completed the installation of the VSI system.
- The VSI computer has to be activated by means of the diagnosis software.
- In the unlikely event the VSI computer fails, it will automatically switch over to petrol. Never disconnect the VSI computer connector, unless you have removed the main fuse.
- When installing the VSI wiring harness, ensure that it does not run near any of the ignition components.
- Solder and insulate all electrical connections.  
The wires in the loom are provided with numbers and text.  
The text on the wire explains the function of the wire.  
The wire harness is not model specific, therefore it may be necessary to adjust the length of the wires.  
Ensure maximum care is taken when connecting the wiring.  
Make professional joints using solder and shrink sleeve. Do not stretch the wiring harness.
- No component of the LPG-system shall be located within 100 mm of the exhaust or similar heat source, unless such components are adequately shielded against heat.
- Remove any internal burrs after having shortened the LPG pipe.  
(This guarantees the maximum flow through the pipe without pollution.)
- If holes have to be drilled (wear safety glasses) for installing brackets, etc., the drilled holes must always be treated with an anti-corrosion agent, after the chips have been removed (especially when mounting an exterior filler into body work).
- After having completed the installation, check the whole system for gas leakage; use a gas leak detection device. Also check for any leak of engine coolant, petrol and air.
- Fitting and maintenance is only allowed by Prins Autogassystemen selected LPG engineers.
- Failure to follow the instructions in this manual can result in a poor or non-working LPG-installation or a dangerous situation.
- For maintenance instructions and filter registration see owner's manual.
- Prins Autogassystemen is not responsible for any damages to people or objects as a result of changes to Prins products.
- [Check our website regularly for diagrams, certificates, updates, info-bulletins and product information.](#)

Please fill in the [warranty portal](#) completely within 14 days after installation.



## Required equipment / tools / materials for installing a complete system

- Complete workshop toolbox ( wrenches, screwdrivers, cutters, pliers, ratchet, sockets )
- Car lift
- Portable computer
- Vehicle fuel system scan tool or OBD scan tool Prins ( part nr. 099/99928 )
- Exhaust gas analyser
- Multimeter
- Oscilloscope
- Prins diagnostic software
- Prins diagnostic tool
- Torque wrench ( 5-50Nm )
- Torque wrench ( 200-250Nm )
- Portable light
- Assortment drill bits 4 to 12 mm
- Assortment cutters ( Ø20, 30, 50, 70 mm )
- Portable drill or pneumatic drill
- Thread cutting device ( male M6x1, M8x1, M10x1 )
- Air gun
- Vacuum cleaner
- Safety goggles
- Hot air gun
- Soldering iron, soldering tin
- Wire-stripping pliers
- Adhesive tape
- Adhesive sealant
- Thread locking compound
- Anti-corrosion agent / black body coating
- Gas leak detection device or foam leak spray
- Shrink sleeves

## Vehicle check

- Check the vehicle drivability on petrol
- Check the fuel system for error codes ( scan tool )
- Check if the catalytic converter is in good condition ( exhaust gas analyser )
- Check the condition of the ignition system ( spark plugs, cables, coil )




### Tightening moments

	Nm	Spanner mm
M 4 x 0,7	3.3	7
M 5 x 0,8	6.5	8
M 6 x 1,0	11.3	10
M 7 x 1,0	14.5	11
M 8 x 1	24.5	13
M 8 x 1,25	27.3	13
M 10 x 1	52	15-16-17
M 10 x 1,5	54	15-16-17

#### EXPLANATION OF SYMBOLS :




= IMPORTANT, CAUTION

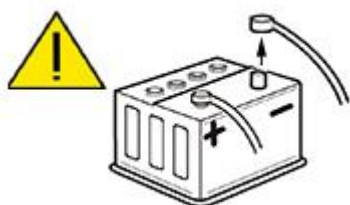

= WEAR SAFETY GOGGLES



Base diagram

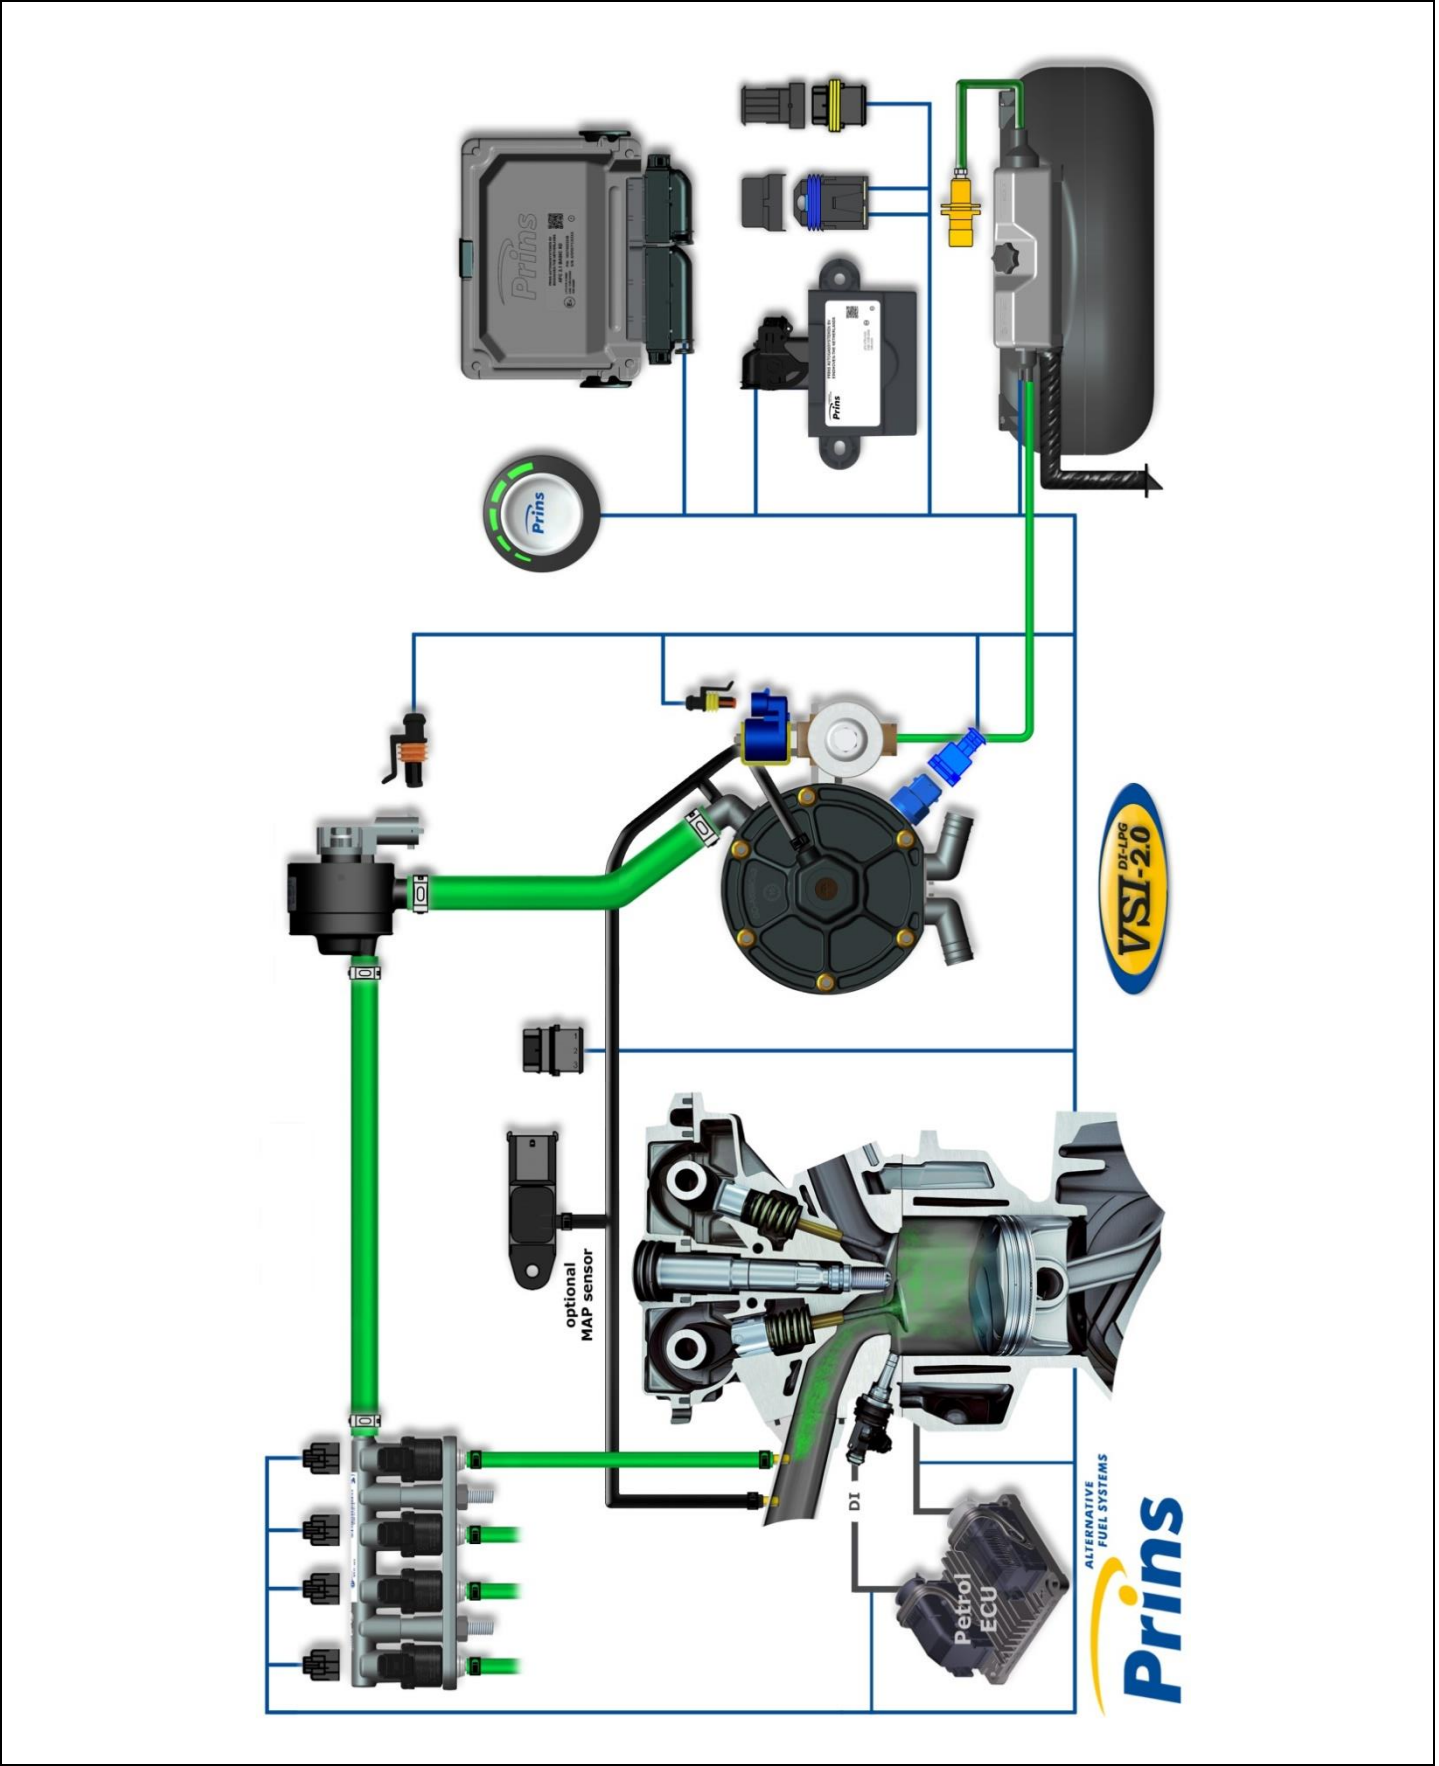








## VSI approval numbers

	
<p>Reducer VSI LPG Prins : E4-67R-010054  Lock-off valve OMB : E8-67R-014327  Lock-off valve Valtek : E4-67R-010041</p>	<p>Injector rail Prins : LPG E4-67R-010093  CNG E4-110R-000021</p>
	
<p>Filter unit T1 / T2 Prins : LPG E4-67R-010096  CNG E4-110R-000028  Filter unit Keihin: LPG E4-67R-010177  CNG E4-110R-000091</p>	<p>Injector Keihin KN9 : LPG E4-67R-010310  CNG E4-110R-000295</p>
	
<p>Prins AFC : E4-67R-010098  E4-10R-030507</p>	<p>Tubithor : LPG E13-67R-010145  CNG E13-110R-000017  Rubia : LPG E4-67R-010068  CNG E4-110R-000003  WinLas : LPG E37-67R-010140  CNG E37-110R-000012</p>



VSI component location overview  
(example X-trial)

		<b>AFC</b> 
		<b>Petrol ECU / Fuse / IM</b> 
<b>Rail(s)</b> 		<b>Reducer</b> 
		<b>Filter</b> 

	<p>If applicable - R115 approval sticker : Right side centre door post</p>
---	--



Examples  
(from X-trial)




Reducer & filter



Water (serial) connections





AFC bracket

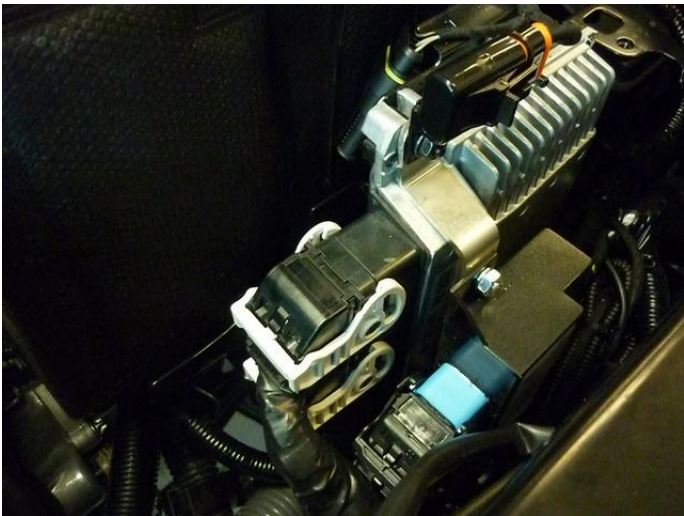

IM location

## Overpressure / MAP connection

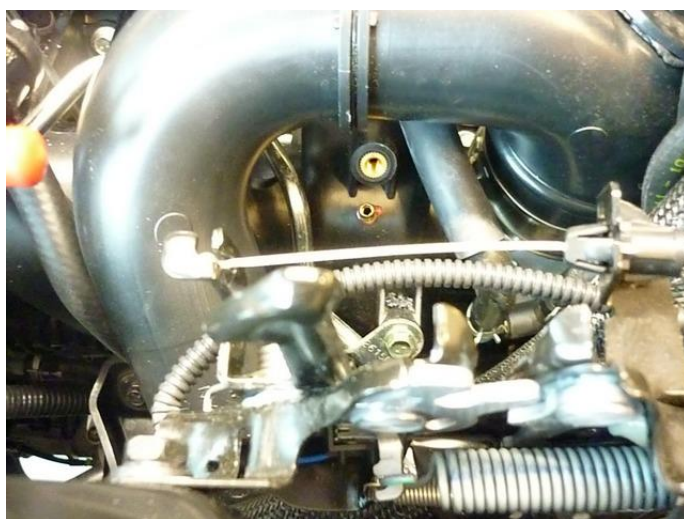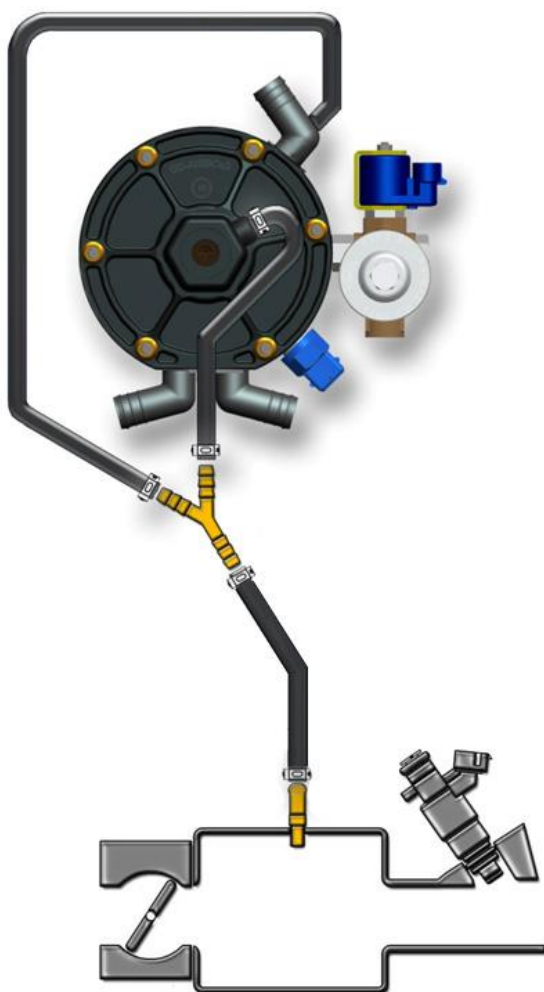

See next page



## Mounting the inlet manifold couplings

Remove the inlet manifold.


Drill **5** holes of **5mm** in the inlet manifold. Cut **M6x1** thread in these holes.

Place the VSI couplings with a lock compound in the inlet manifold.



Watch out that the lock compound doesn't come inside the VSI couplings.

Place the inlet manifold back on the engine.

Drill under 45 degrees


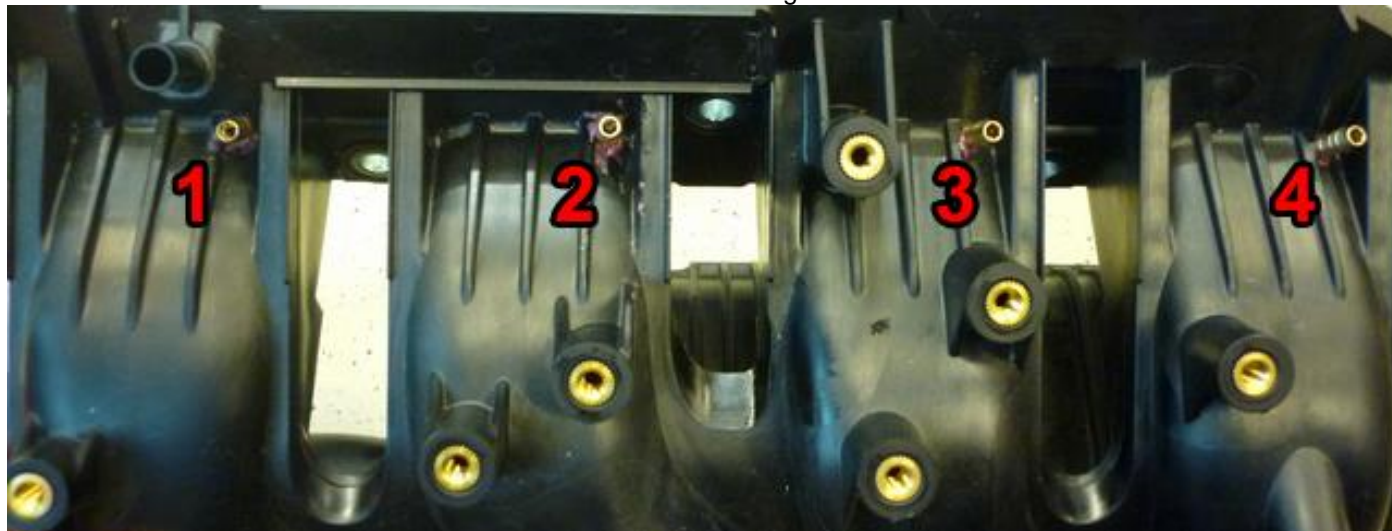


MAP:

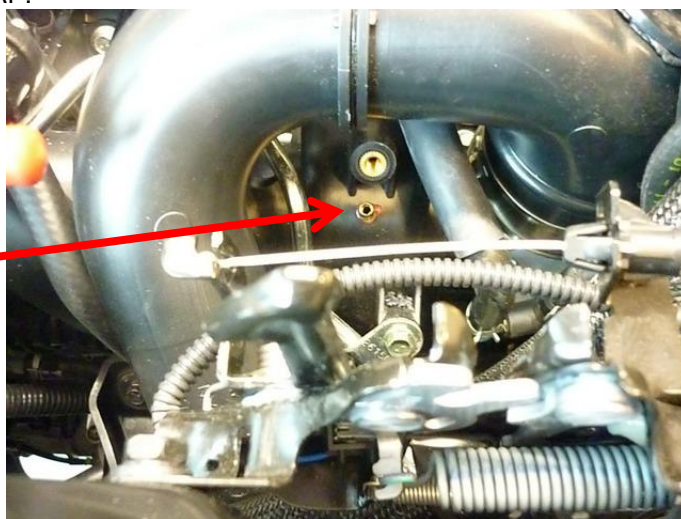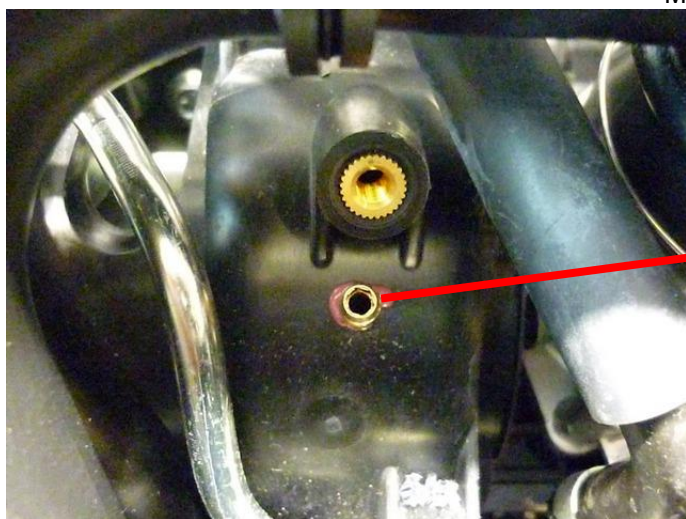





Mounting the VSI injector rail

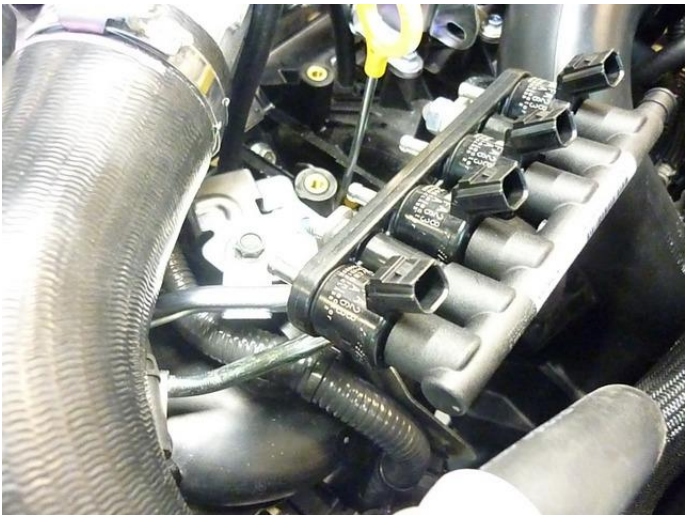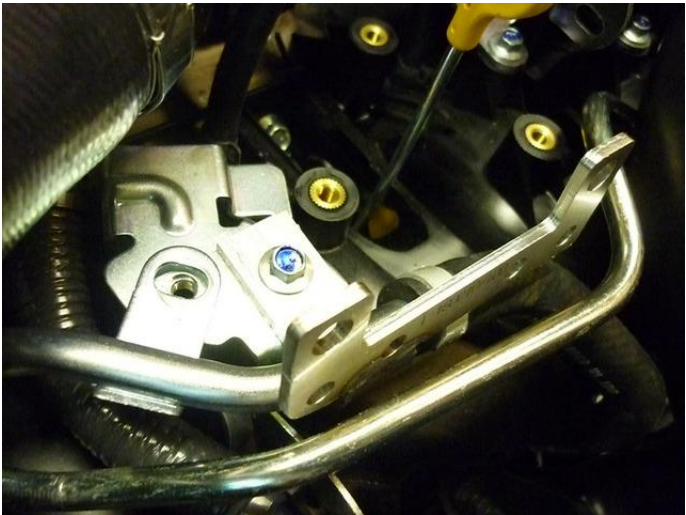




## ValveCare-DI

Install the ValveCare-DI system. For connections see **Information Bulletin 306**.  
Pictures from an installed system are welcome.

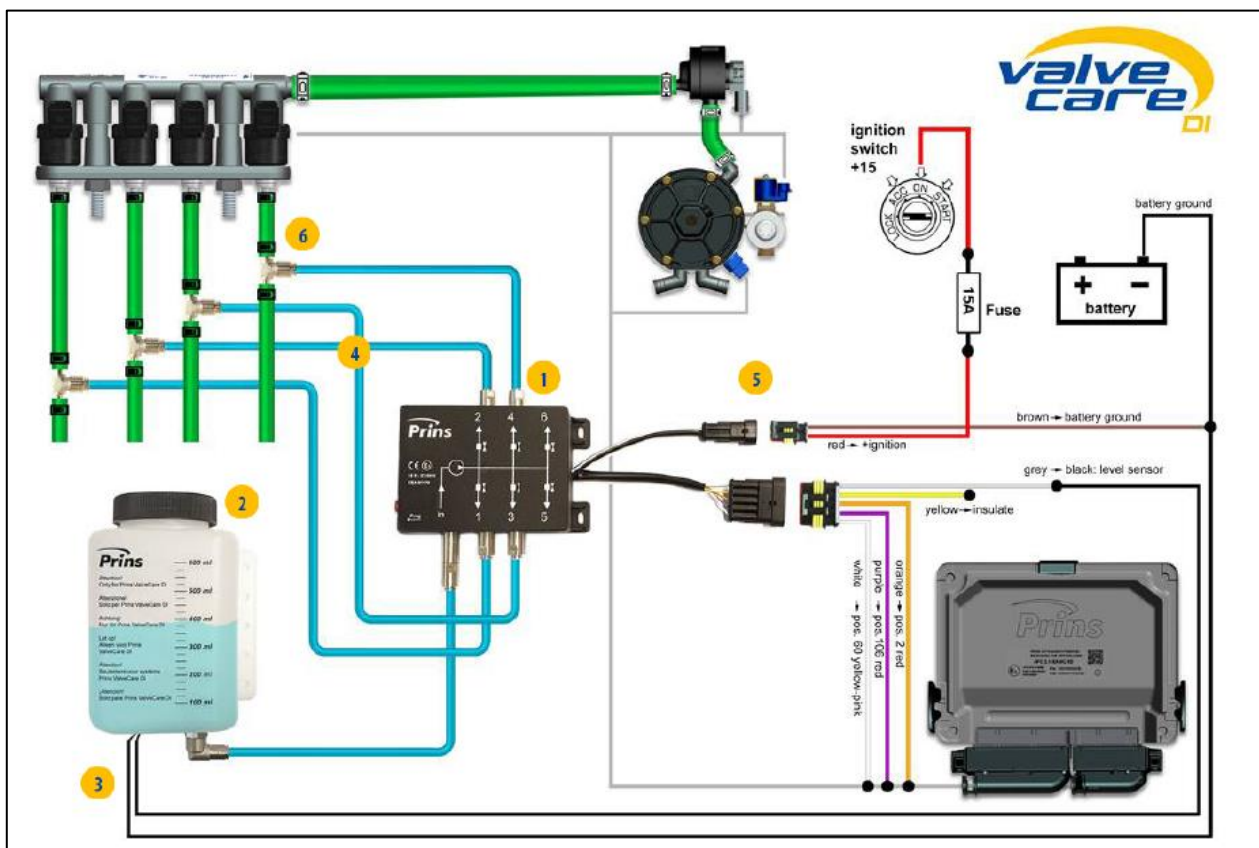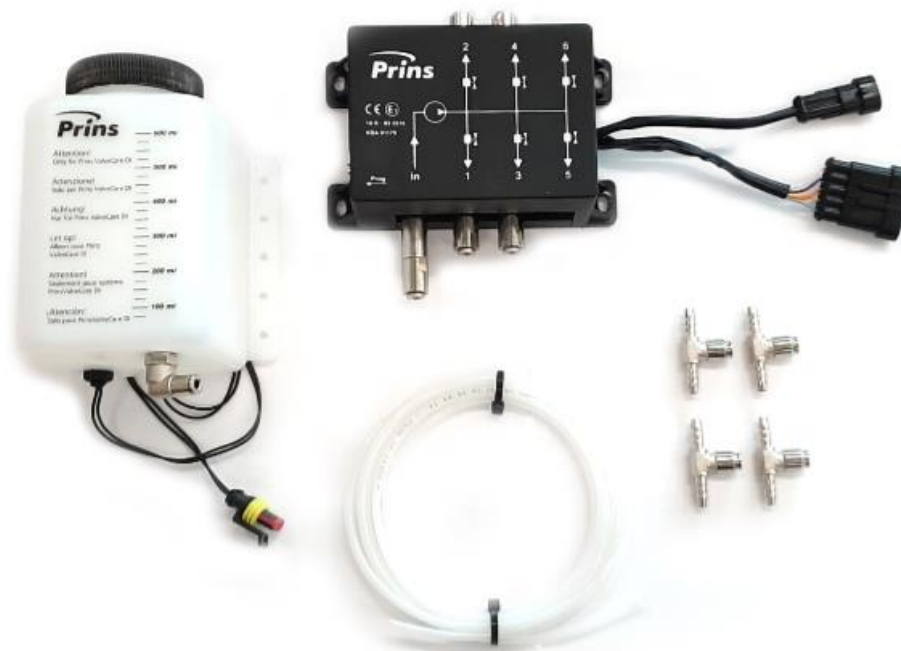

## Wiring routing (example X-trail)

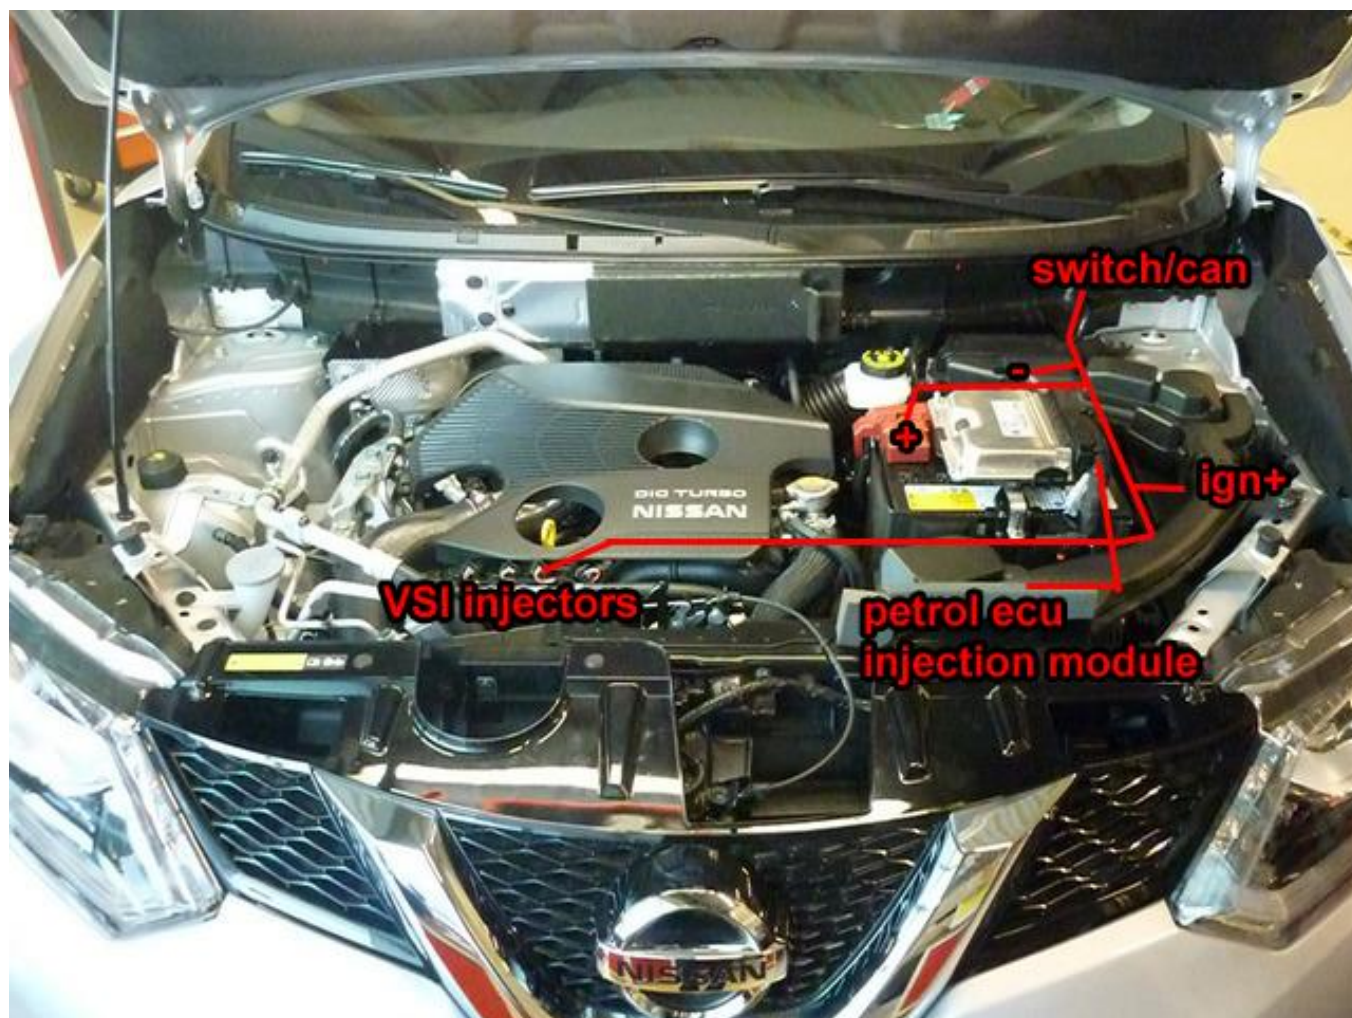



## Mounting the fuel selection switch (example X-trail)



When mounting the switch, only push on its sides.  
Pushing the switch hard in the centre may result in damage to the switch.



[illegible]

**Electrical connections – Insulate**



10	DAC2	Green	<i><b>Insulate</b></i>
19	AD4	Blue	<i><b>Insulate</b></i>
20	AD3	Blue–pink	<i><b>Insulate</b></i>
22	LSS1	Purple	<i><b>Insulate</b></i>
23	LSS2	Purple-green	<i><b>Insulate</b></i>
36	AD6	Blue-brown	<i><b>Insulate</b></i>
38	AD7	Blue-light Blue	<i><b>Insulate</b></i>
39	AD8	Blue-red	<i><b>Insulate</b></i>
43	+12 Valve 2	Red-white	<i><b>Insulate</b></i>
50	DAC4	Green-blue	<i><b>Insulate</b></i>
56	DI2	Yellow–green	<i><b>Insulate</b></i>
60	DIG IN3	Yellow-pink	<i><b>Insulate</b></i>
61	DIG IN4	Yellow-blue	<i><b>Insulate</b></i>
62	C Ground	Brown-black	<i><b>Insulate</b></i>
74	DAC3	Green-pink	<i><b>Insulate</b></i>
<i><b>Insulate additional loose wires</b></i>			







Electrical connections

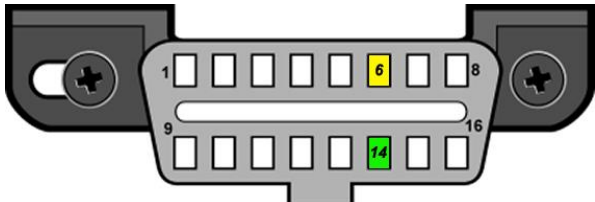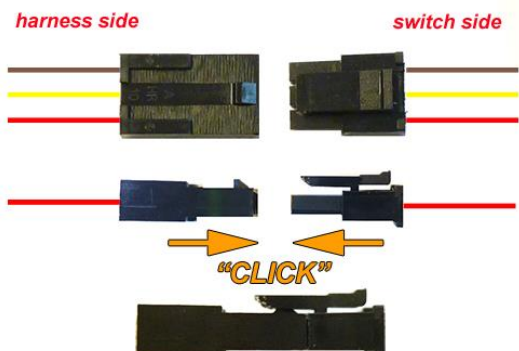
Driver room

51 70	CAN1 High CAN1 Low	Yellow Green	Connect to EOBD diagnose connector. Pin : 6 Pin : 14
			
3-pole micro connector 66 3 49	Ground fuel switch +12V fuel switch LIN fuel switch	Brown-black Red-white Yellow	Connect to switch.  Connect the 3-pole connector to the Prins fuel selection switch
			

## Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.

Wire number / code	Wire colour	Connection
32 Ground sense 1 Ground battery	Brown Brown	Connect to the '-' of the battery; use a ring terminal: 
4 +12V Battery	Red	Do not place the fuse in the holder before having completed the installation of the LPG system. use a ring terminal: 
98 98 G INJ OUT 1 106 106 G + INJ 1	<b>White-yellow</b> red	Connector VSI-injector to cylinder 1. <b>Timing belt side</b>
99 99 G INJ OUT 2 107 107 G + INJ 2	<b>Green-yellow</b> red	Connector VSI-injector to cylinder 2.
100 100 G INJ OUT 3 108 108 G + INJ 3	<b>Pink-yellow</b> red	Connector VSI-injector to cylinder 3.
82 82 G INJ OUT 4 90 90 G + INJ 4	<b>Blue-yellow</b> red	Connector VSI-injector to cylinder 4.

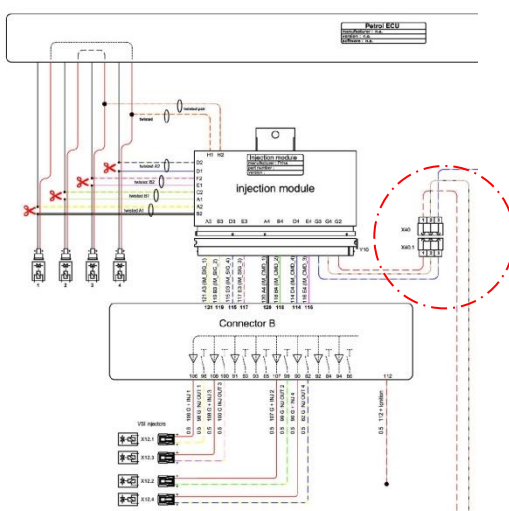

## Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.



For measuring the petrol injectors :

Interrupt each petrol injector control wire (injector min)

Each VSI wire has a petrol injector / cylinder number printed on the wire, connect this wire to the corresponding petrol injector / cylinder.

Connect the **bicoloured** VSI measuring wire to the **ecu side**, ( wire code: ecu-lo ).


Connect the **corresponding full coloured** VSI wire to the **petrol injector side** ( wire code: inj-lo ).

See diagrams: Installation manual general part 1 / 2.

### Attention:

**Each bicoloured measuring wire corresponds to a specific LPG injector and petrol injector / cylinder number.**  
**Do not interchange the wires.**


VSI measure wire nr. :	Full coloured / Bicoloured Module position	Interrupt petrol injector wire
INJ LO 1 / ECU LO 1 Petrol injector cyl. 1	white / white-yellow B2 / A2	Colour : <b>Green</b> Location : Top connector <b>A</b> , pin <b>B3</b>
INJ LO 4 / ECU LO 4 Petrol injector cyl. 4	blue / blue-yellow D1 / D2	Colour : <b>Blue</b> Location : Top connector <b>A</b> , pin <b>B1</b>
Module wire pos. H1 ECU HIGH A ( cyl. 1-4 )	red-yellow H1	Colour : <b>Red</b> Location : in <b>coax</b> cable, <b>inj1</b> (see picture <b>H1</b> )
INJ LO 2 / ECU LO 2 Petrol injector cyl. 2	green / green-yellow A1 / C2	Colour : <b>Black</b> Location : Top connector <b>A</b> , pin <b>A2</b>
INJ LO 3 / ECU LO 3 Petrol injector cyl. 3	pink / pink-yellow E1 / F2	Colour : <b>Pink</b> Location : Top connector <b>A</b> , pin <b>A3</b>
Module wire pos. H2 ECU HIGH B ( cyl. 2-3 )	red-green H2	Colour : <b>White</b> Location : in <b>coax</b> cable, <b>inj2</b> (see picture <b>H2</b> )

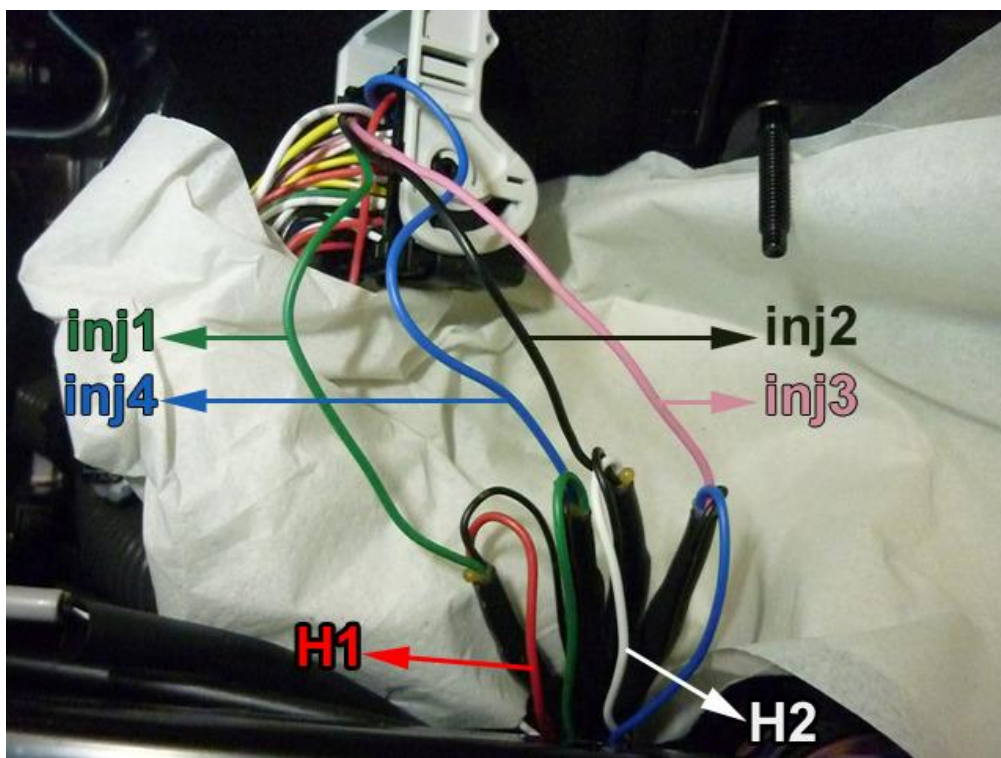

### Electrical connections Connector A

Check and measure the wiring in case of changes in the cars wiring colours.

27 +5V Sensor 37 C ground	Red-blue Brown-black	For measuring the inlet manifold pressure (MAP). <i>Not used → Cut-off connector, insulate wire</i> <i>Not used → Cut-off connector, insulate wire</i>
18 AD1	Blue-white	Wire colour : <b>White</b> Wire location : Top connector <b>A</b> , pin <b>G1</b>
17 AD2 25 DAC1	Blue-green Green-white	High pressure petrol sensor signal interruption. Sensor side. ECU side. Wire colour : <b>Green</b> Wire location : Top connector <b>A</b> , pin <b>E5</b>
63 Ground shift	Blue-orange	High pressure petrol sensor signal ground. Wire colour : <b>Red</b> Wire location : Top connector <b>A</b> , pin <b>C3</b>
40 Wake-up	Grey-red	High pressure petrol sensor 5Volt supply / car wake-up. Wire colour : <b>Brown</b> Wire location : Top connector <b>A</b> , pin <b>F4</b>

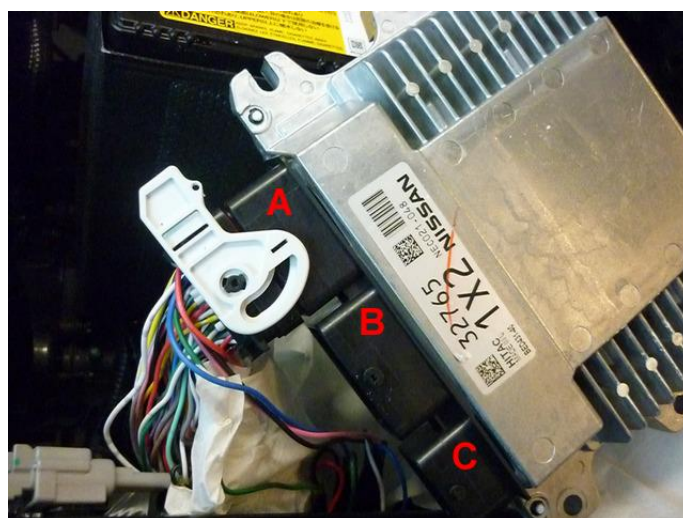

### Electrical connections Connector B

Check and measure the wiring in case of changes in the cars wiring colours.

8 RPM engine speed	Purple-white	For measuring the engine speed. Wire colour : <b>White</b> Wire location : Mid connector <b>B</b> , pin <b>C2</b> ( twisted )
--------------------	--------------	---



**Electrical connections Fuse box**  
**Check and measure the wiring in case of changes in the cars wiring colours.**

112 + Ignition	Red-grey	<i>Make a connection to ignition + / contact +.</i> Do not place the fuse in the holder before having completed the installation of the LPG system.  Wire colour : <b>Light Blue</b> Wire location : left side, fuse box, next to battery (example X-trail)
----------------	----------	---





## Electrical connections

### Connectors in wiring loom

2-pole blue connector 15 T-ECT 34 Ground T-ECT	Grey Brown-black	For measuring the engine coolant temperature (Tect ).  Connect the connector to the reducer temperature sensor.
4-pole connector 35 Ground Psys 14 T-Gas 9 +5 Volt sensor 16 Psys	Brown-black Grey Red-blue Green	For measuring gas pressure and temperature.  Connect the connector to the filter unit sensor.
2-pole connector 24 +12V reducer lock-off 31 C Ground	Yellow-green Brown-black	Connect the connector to the reducer lock-off valve.
4-pole connector 46 Service TxD 65 Service RxD 68 Ground PDT	Grey Grey Brown-black	Diagnose connector.
Tank wiring loom 2 +12V Tank relay 12 Tank level IN 26 Ground tank relay	red blue black	Connect to the tank lock-off. Connect the tank level gauge. Connect to the tank lock-off.
Wiring loom link 45 C ground 58 +12V switched 64 AD5	Brown-black Red-white Blue-grey	Connection from AFC connector A to connector B.

### Optional:

3-pole connector 11 + manometer 12 tank level in 33 ground manometer	red blue brown	<b>Cut off connector and insulate wires</b>
---	----------------------	---

## Checklist after installation

1. Connect the Prins Diagnostic Tool and run the VSI diagnostic program.  
Install the VSI fuse, turn the ignition key in the accessory position.  
When working on the car, beware of moving and rotating parts in the engine compartment.
2. When commissioning the LPG system, you must activate the AFC with the diagnostic software.  
When the AFC has not been activated, the switch will keep blinking.  
To activate the AFC, select function \*activate ECM\* in the diagnostic software.
3. Check whether the program in the AFC matches with the car (dedicated engine set):  
Refer the car description in the diagnostic software (Basic → Identification) and compare these with the set number.
4. The system will switch over to LPG as soon as the temperature of the coolant becomes higher than parameter 70 - Switch over ECT.
5. Check all components and connections for any gas leakage (use a LPG leak detector device or a fluid detection like soap). Caution for moving and rotating parts in the engine compartment!
6. Let the engine run warm on petrol >80°C.  
Check if the reducer heats up.  
Check the engine signals, petrol injection time, RPM, ECT, lambda, MAP signal and petrol pressure signal.  
Let the engine run idle on LPG.  
Adjust the reducer pressure.  
Refer to \*Basic → System\* in the diagnostic software for the idle level value set.  
Adjust the reducer pressure in such a way that the pressure measured (P-sys) equals the idle level value.  
Turn the socket-head screw at the front of the reducer to adjust the pressure.  
An error code will be generated whenever the pressure variation is too high.
7. Use the diagnostic software to check again all input and output signals.
8. Check the system for error codes and solve these, if required.  
Check the petrol ECM for EOBD error codes.  
Place the protection connector on the VSI communication connector.
9. Take a test drive and check the drivability on LPG and petrol.

