



Installation manual

PART 2/2

MANUFACTURER
ENGINE DISPLACEMENT
NUMBER OF VALVES
ENGINE CODE / NUMBER
FIRING ORDER
VEHICLE CATEGORIES
TRANSMISSION
VERSION
TYPE VSI INJECTOR
TYPE INJECTION MODULE
PETROL ECU MANUFACTURER / CODE
MODEL YEAR:
SYSTEM APPROVAL NUMBER (R115)
LOCATION R115 SYSTEM STICKER
ENGINE SET NUMBER
MANUAL
DATE

VAG
1400cc
16
CUKB - 110kW
1-3-4-2
M
MT / AT
AFC-2.1 DI-LPG
KN9 - 63cc
Gen2 type 2
Bosch MED 17.1.21
2014-
E4-#115R-000020 / VSI-LPG 31
right side, centre door post
366/121017/A
076/2620300
2020-04-06

Copyright © Prins Autogassystemen 2020

Revision: -



TABLE OF CONTENTS

Manual updates / revision2

General instructions3

Required equipment / tools / materials for installing a complete system4

Vehicle check4

Base diagram5

VSI approval numbers6

Water connections7

Overpressure / MAP connection8

Mounting the inlet manifold couplings; MAP9

Mounting the inlet manifold couplings10

Mounting the VSI injector rail with hoses11

LPG hoses12

Basic Wiring Diagram13

Electrical connections - Insulate14

Electrical connections – driver room15

Electrical connections16

Electrical connections17

Electrical connections18

Electrical connections19

Checklist after installation20

FOR EXPLANATION AND CIRCUIT DIAGRAMS SEE : INSTALLATION MANUAL GENERAL PART 1 / 2



Manual updates / revision

Rev. nr	Rev. Date	Subject update
-	2020-04-06	Start revision management



General instructions

- The installation of the system shall be done in accordance with the installation manual provided by Prins Autogassystemen.
- This manual is based on Dutch regulations; always install the system in accordance to the local regulations.
- Always download the “general manual 1/2” from our [website](#) for basic instructions and diagrams.
- Always disconnect the battery when installing the LPG system. Make sure the ignition key is outside the car. Be aware of central door locking, radio / telephone memory code and alarm system.
- Do not place the main fuse into the fuse holder before having completed the installation of the VSI system.
- The VSI computer has to be activated by means of the diagnosis software.
- In the unlikely event the AFC fails, it will automatically switch over to petrol. Never disconnect the AFC connector, unless you have removed the main fuse.
- When installing the VSI wiring harness, ensure that it does not run near any of the ignition components.
- Solder and insulate all electrical connections.
The wires in the loom are provided with numbers and text.
The text on the wire explains the function of the wire.
The wire harness is not model specific, therefore it may be necessary to adjust the length of the wires.
Ensure maximum care is taken when connecting the wiring.
Make professional joints using solder and shrink sleeve. Do not stretch the wiring harness.
- No component of the LPG-system shall be located within 100mm of the exhaust or similar heat source, unless such components are adequately shielded against heat.
- Remove any internal burrs after having shortened the LPG pipe.
(This guarantees the maximum flow through the pipe without pollution.)
- If holes have to be drilled (wear safety glasses) for installing brackets, etc., the drilled holes must always be treated with an anti-corrosion agent after the chips have been removed (especially when mounting an exterior filler into the body work).
- After having completed the installation, check the whole system for gas leakage; use a gas leak detection device. Also check for any leak of engine coolant, petrol and air.
- Fitting and maintenance is only allowed by Prins Autogassystemen selected LPG engineers.
- Failure to follow the instructions in this manual can result in a poor or non-working LPG-installation or a dangerous situation.
- For maintenance instructions and filter registration see owner's manual.
- Prins Autogassystemen is not responsible for any damages to people or objects as a result of changes to Prins products.
- [Check our website regularly for diagrams, certificates, updates, info-bulletins and product information.](#)

Please fill in the [warranty portal](#) completely within 14 days after installation.



Required equipment / tools / materials for installing a complete system


- Complete workshop toolbox (wrenches, screwdrivers, cutters, pliers, ratchet, sockets)
- Car lift
- Portable computer
- Vehicle fuel system scan tool or OBD scan tool Prins (part nr. 099/99928)
- Exhaust gas analyser
- Multimeter
- Oscilloscope
- Prins diagnostic software
- Prins diagnostic tool
- Torque wrench (5-50Nm)
- Torque wrench (200-250Nm)
- Portable light
- Assortment drill bits 4 to 12 mm
- Assortment cutters (Ø20, 30, 50, 70 mm)
- Portable drill or pneumatic drill
- Thread cutting device (male M6x1, M8x1, M10x1)
- Air gun
- Vacuum cleaner
- Safety goggles
- Hot air gun
- Soldering iron, soldering tin
- Wire-stripping pliers
- Adhesive tape
- Adhesive sealant
- Thread locking compound
- Anti-corrosion agent / black body coating
- Gas leak detection device or foam leak spray
- Shrink sleeves

Vehicle check

- Check the vehicle drivability on petrol
- Check the fuel system for error codes (scan tool)
- Check if the catalytic converter is in good condition (exhaust gas analyser)
- Check the condition of the ignition system (spark plugs, cables, coil)



Base diagram

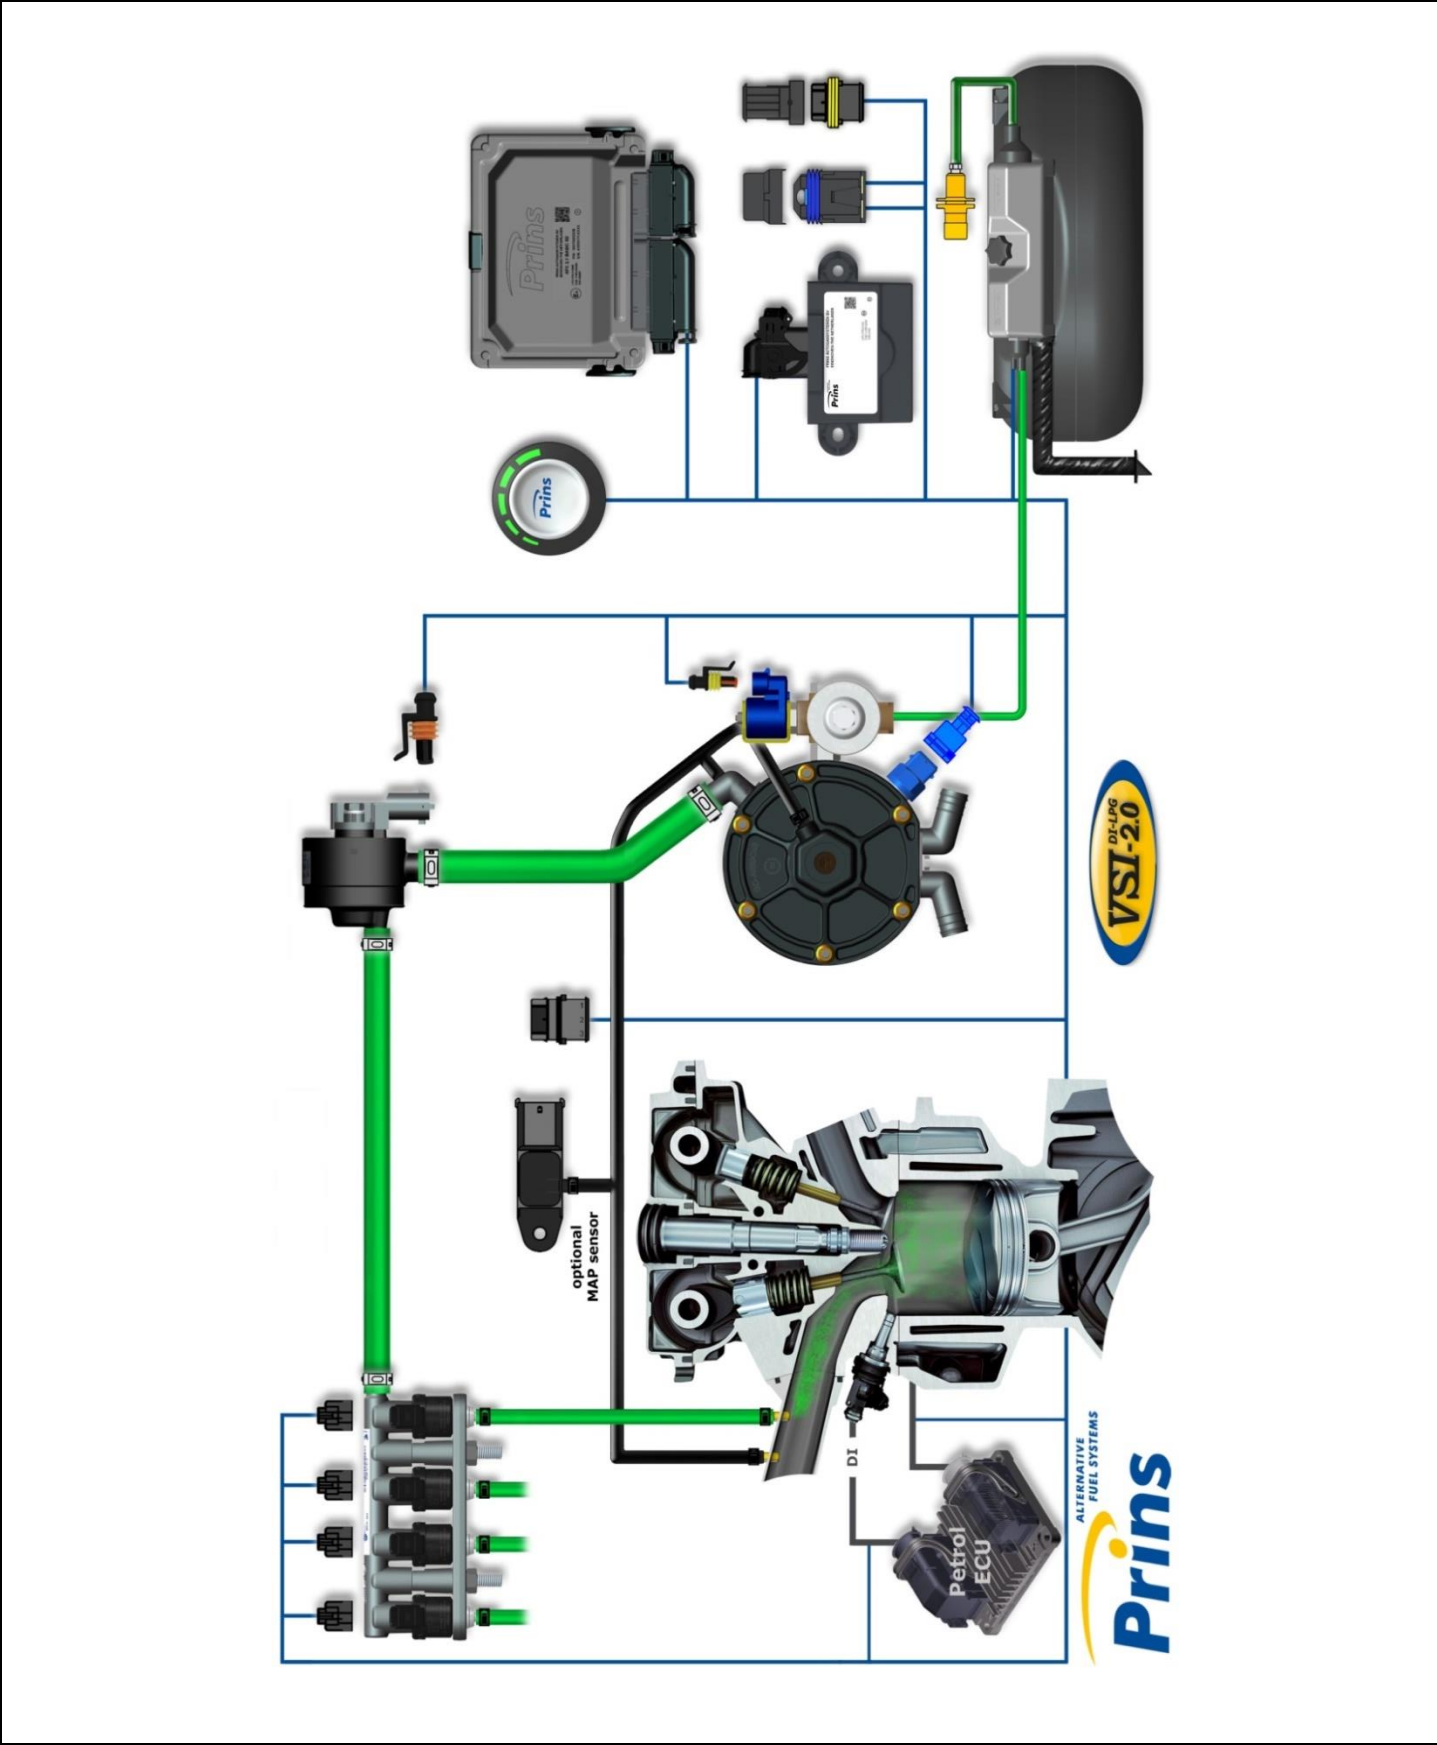

VSI approval numbers

	
<p>Reducer VSI LPG Prins : E4-67R-010054 Lock-off valve OMB : E8-67R-014327 Lock-off valve Valtek : E4-67R-010041</p>	<p>Injector rail Prins : LPG E4-67R-010093 CNG E4-110R-000021</p>
	
<p>Filter unit T1 / T2 Prins : LPG E4-67R-010096 CNG E4-110R-000028 Filter unit Keihin: LPG E4-67R-010177 CNG E4-110R-000091</p>	<p>Injector Keihin KN9 : LPG E4-67R-010310 CNG E4-110R-000295</p>
	
<p>Prins AFC : E4-67R-010098 E4-10R-030507</p>	<p>Tubithor : LPG E13-67R-010145 CNG E13-110R-000017 Rubia : LPG E4-67R-010068 CNG E4-110R-000003 WinLas : LPG E37-67R-010140 CNG E37-110R-000012</p>

Water connections




rotate



Overpressure / MAP connection

Drill hole $\varnothing 5\text{mm}$, cut **M6x1** thread

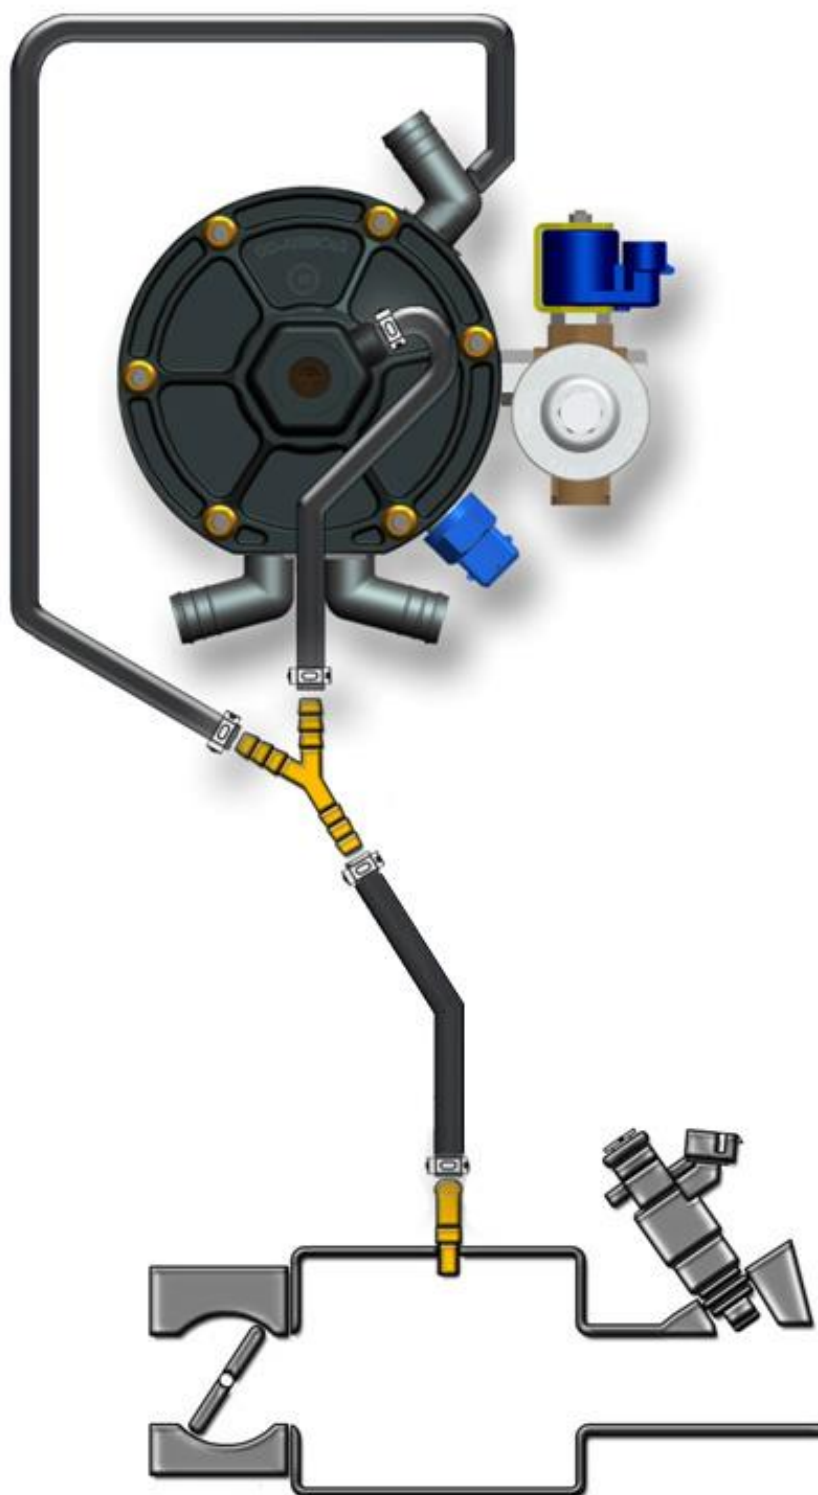

Mounting the inlet manifold couplings; MAP


Remove the inlet manifold.

Drill **5** holes of **5mm** in the inlet manifold. Cut **M6x1** thread in these holes.


Place the VSI couplings with a lock compound in the inlet manifold.

Watch out that the lock compound doesn't come inside the VSI couplings.

Place the inlet manifold back on the engine.

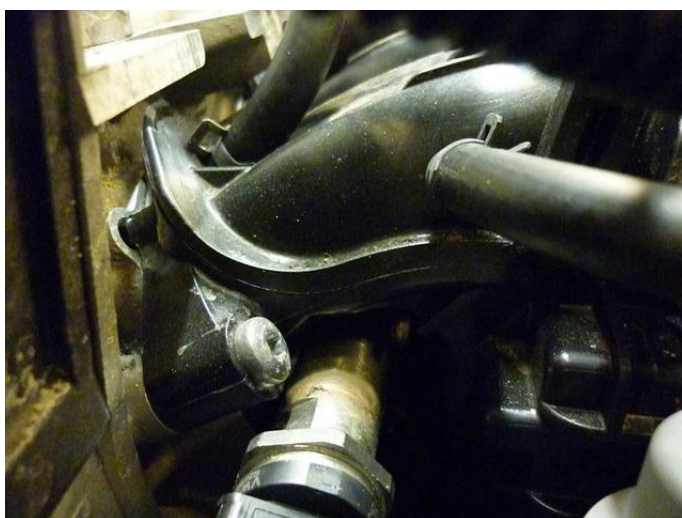

Mounting the inlet manifold couplings

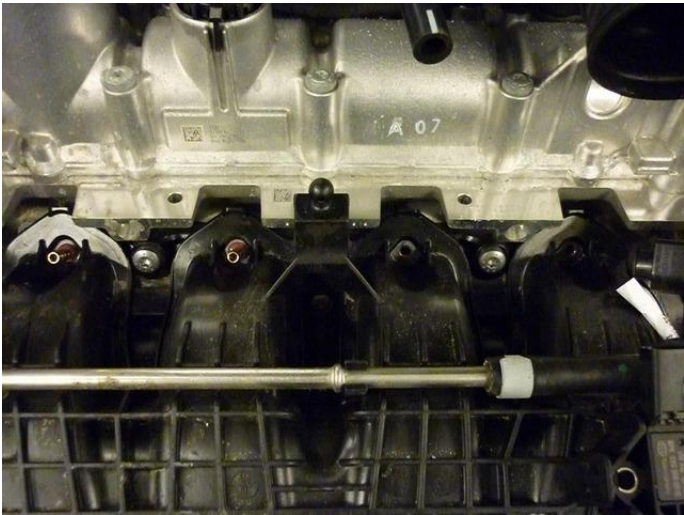

Mounting the VSI injector rail with hoses



(With cylinder deactivation).



Option 1



Option 2

11mm hose routing



LPG hoses

Hose (Ø..mm)	From component	To component	Hose length (cm)
5	VSI injector 1	Inlet manifold coupling cyl.1	20
5	VSI injector 2	Inlet manifold coupling cyl.2	18
5	VSI injector 3	Inlet manifold coupling cyl.3	18
5	VSI injector 4	Inlet manifold coupling cyl.4	20

General info.

Cut the LPG hoses on length.

Please observe that there is no damage or fouling to the hoses.





Electrical connections - Insulate


10	DAC2	Green	<i>Insulate</i>
19	AD4	Blue	<i>Insulate</i>
20	AD3	Blue-pink	<i>Insulate</i>
22	LSS1	Purple	<i>Insulate</i>
23	LSS2	Purple-green	<i>Insulate</i>
36	AD6	Blue-brown	<i>Insulate</i>
38	AD7	Blue-lightBlue	<i>Insulate</i>
39	AD8	Blue-red	<i>Insulate</i>
43	+12 Valve 2	Red-white	<i>Insulate</i>
50	DAC4	Green-blue	<i>Insulate</i>
56	DI2	Yellow-green	<i>Insulate</i>
60	DIG IN3	Yellow-pink	<i>Insulate</i>
61	DIG IN4	Yellow-blue	<i>Insulate</i>
62	C Ground	Brown-black	<i>Insulate</i>
74	DAC3	Green-pink	<i>Insulate</i>
<i>Insulate additional loose wires</i>			



Electrical connections – driver room

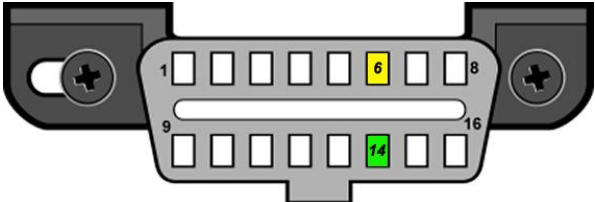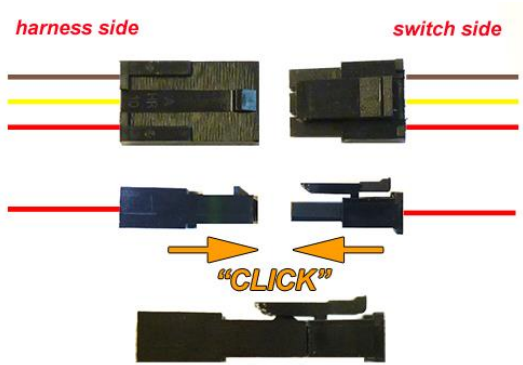

Driver room

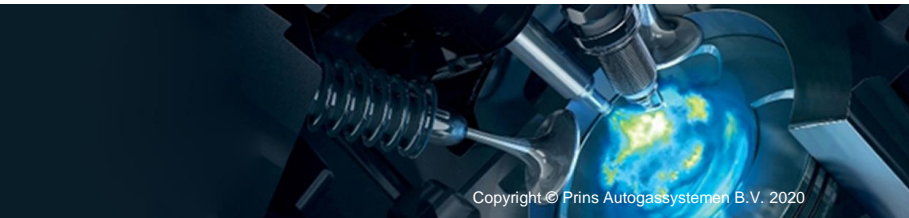
51 70	CAN1 High CAN1 Low	Yellow Green	Connect to EOBD diagnose connector Pin : 6 Pin : 14
			
3-pole micro connector 66 3 49	Ground fuel switch +12V fuel switch LIN fuel switch	Brown-black Red-white Yellow	Connect the 3-pole connector to the Prins fuel selection switch
			



Electrical connections

Check and measure the wiring in case of changes in the cars wiring colours.

Wire number / code	Wire colour	Connection
32 Ground sense 1 Ground battery	Brown Brown	Connect to the '-' of the battery; use a ring terminal:  <i>Example</i>
4 +12V Battery	Red	Do not place the fuse in the holder before having completed the installation of the LPG system.  <i>Example</i>
98 98 G INJ OUT 1 106 106 G + INJ 1	White-yellow red	Connector VSI-injector to cylinder 1. Timing belt side
99 99 G INJ OUT 2 107 107 G + INJ 2	Green-yellow red	Connector VSI-injector to cylinder 2.
100 100 G INJ OUT 3 108 108 G + INJ 3	Pink-yellow red	Connector VSI-injector to cylinder 3.
82 82 G INJ OUT 4 90 90 G + INJ 4	Blue-yellow red	Connector VSI-injector to cylinder 4.

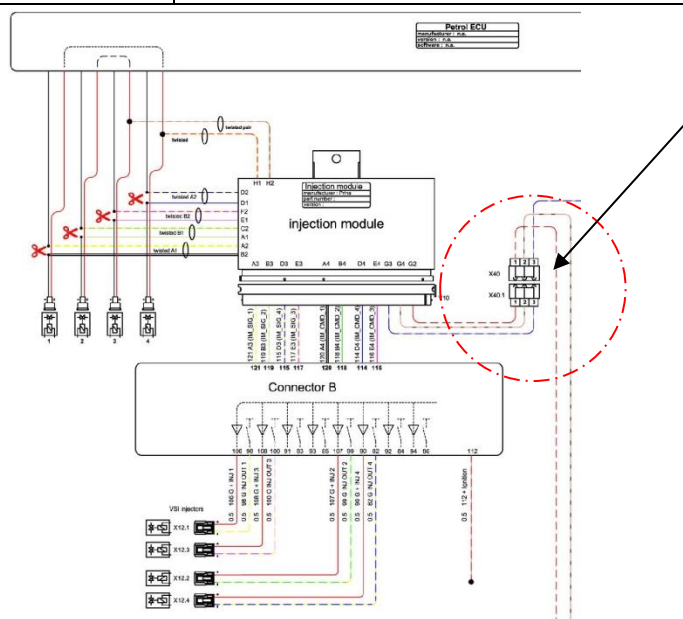

Electrical connections

PIN-outs are LEADING



For measuring the petrol injectors :

Interrupt each petrol injector control wire (injector min)

Each VSI wire has a petrol injector / cylinder number printed on the wire, connect this wire to the corresponding petrol injector / cylinder.

Connect the **bicoloured** VSI measuring wire to the **ecu side**, (wire code: ecu-lo).


Connect the **corresponding full coloured** VSI wire to the **petrol injector side** (wire code: inj-lo).

See diagrams: Installation manual general part 1 / 2.

Attention:

Each bicoloured measuring wire corresponds to a specific LPG injector and petrol injector / cylinder number. Do not interchange the wires.

VSI measure wire nr. :	Full coloured / Bicoloured Module position	Interrupt petrol injector wire
VSI wire inj/ecu-lo-1 Petrol injector cyl. 1	white / white-yellow B2 / A2	Colour : red-black Location : petrol ecu, T60 , pin 48
VSI wire inj/ecu-lo-2 Petrol injector cyl. 2	green / green-yellow A1 / C2	Colour : red-yellow Location : petrol ecu, T60 , pin 31
VSI wire inj/ecu-lo-3 Petrol injector cyl. 3	pink / pink-yellow E1 / F2	Colour : red-purple Location : petrol ecu, T60 , pin 46
VSI wire inj/ecu-lo-4 Petrol injector cyl. 4	blue / blue-yellow D1 / D2	Colour : red-blue Location : petrol ecu, T60 , pin 33
Module wire pos. H1 ECU HIGH A (cil. 1-4)	red-yellow H1	Colour : brown-black Location : petrol ecu, T60 , pin 32
Module wire pos. H2 ECU HIGH B (cil. 2-3)	red-green H2	Colour : brown-white Location : petrol ecu, T60 , pin 3

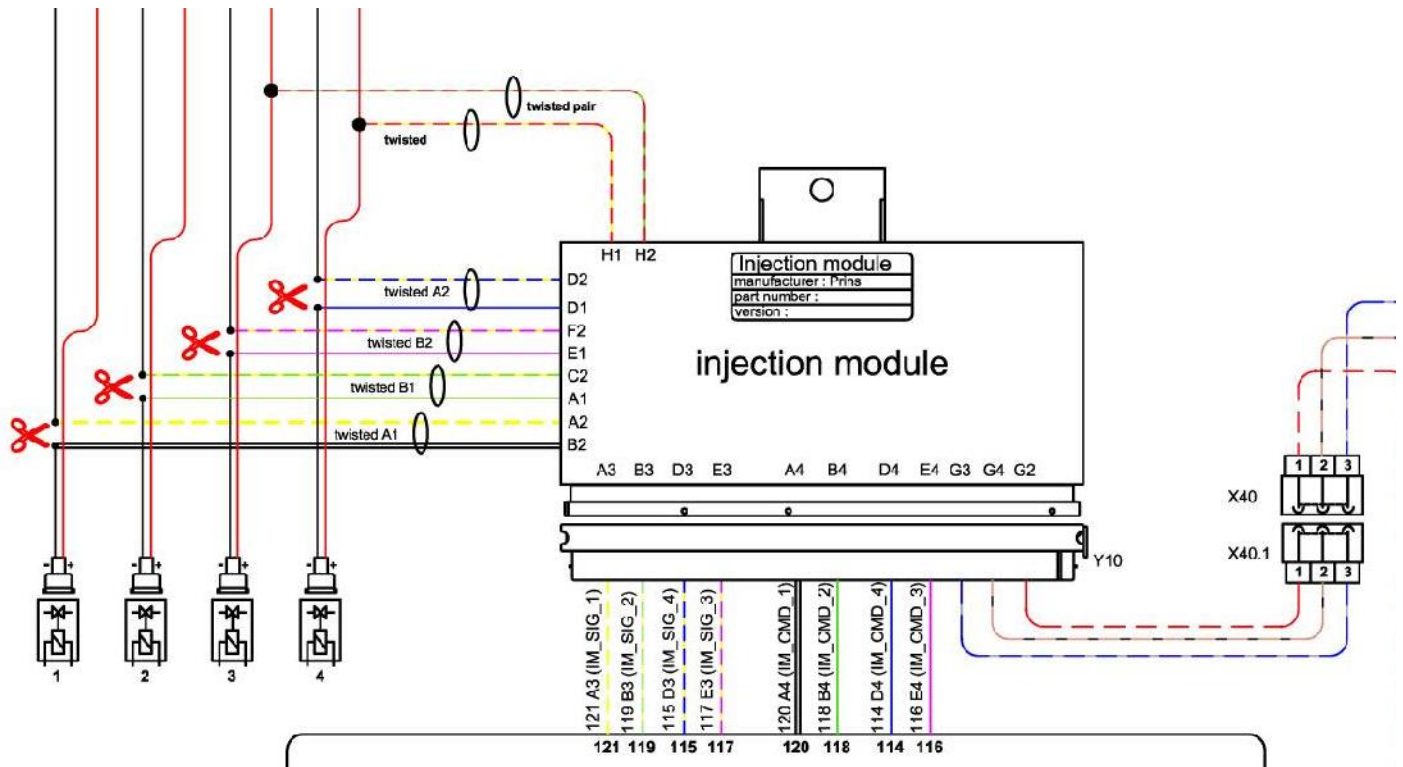

Electrical connections**PIN-outs are LEADING**

27 +5V Sensor 37 C ground	Red-blue Brown-black	For measuring the inlet manifold pressure (MAP). Not used → Cut-off connector, insulate wire Not used → Cut-off connector, insulate wire
18 AD1	Blue-white	Wire colour : Black Wire location : petrol ecu, T60 , pin 7
40 Wake-up	Grey-red	High pressure petrol sensor 5Volt supply / car wake-up Wire colour : Yellow-red Wire location : petrol ecu, T60 , pin 57
17 AD2 25 DAC1	Blue-green Green-white	High pressure petrol sensor signal interruption. Sensor side. ECU side. Wire colour : Red-yellow Wire location : petrol ecu, T60 , pin 27
8 RPM engine speed	Purple-white	For measuring the engine speed. Wire colour : Brown-yellow Wire location : petrol ecu, T60 , pin 21
63 Ground shift	Blue-orange	High pressure petrol sensor signal ground. Wire colour : Brown Wire location : petrol ecu, T60 , pin 20
112 + Ignition	Red-grey	Make a connection to ignition + / contact +. Do not place the fuse in the holder before having completed the installation of the LPG system. Wire colour : black-violet / grey-black / black-white. Wire location : petrol ecu, T94 , pin 87 PIN = Leading !



Electrical connections

Connectors in wiring loom

2-pole blue connector 15 T-ECT 34 Ground T-ECT	Grey Brown - black	<i>For measuring the engine coolant temperature (Tect)</i> Connect the connector to the reducer temperature sensor.
4-pole connector 35 Ground Psys 14 T-Gas 9 +5 Volt sensor 16 Psys	Brown - black Grey Red - blue green	<i>For measuring gas pressure and temperature.</i> Connect the connector to the filter unit sensor.
2-pole connector 24 +12V reducer lock-off 31 C Ground	Yellow - green Brown - black	Connect the connector to the reducer lock-off valve.
4-pole connector 46 Service TxD 65 Service RxD 68 Ground PDT	Grey Grey Brown - black	<i>Diagnose connector.</i>
Tank wiring loom 2 +12V Tank relay 12 Tank level IN 26 Ground tank relay	red blue black	Connect to the tank lock-off. Connect the tank level gauge. Connect to the tank lock-off.
Wiring loom link 45 C ground 58 +12V switched 64 AD5	Brown – black Red – white Blue - grey	Connection from AFC connector A to connector B

Optional:

3-pole connector 11 + manometer 12 tank level in 33 ground manometer	red blue brown	<i>Cut off connector and insulate wires</i>
---	----------------------	--

Checklist after installation

1. Connect the Prins Diagnostic Tool and run the VSI diagnostic program.
Install the VSI fuse, turn the ignition key in the accessory position.
When working on the car, beware of moving and rotating parts in the engine compartment.
2. When commissioning the LPG system, you must activate the AFC with the diagnostic software. When the AFC has not been activated, the switch will keep blinking.
To activate the AFC, select function *activate ECM* in the diagnostic software.
3. Check whether the program in the AFC matches with the car (dedicated engine set):
Refer the car description in the diagnostic software (Basic → Identification) and compare these with the set number.
4. The system will switch over to LPG as soon as the temperature of the coolant becomes higher than parameter 70 - Switch over ECT.
5. Check all components and connections for any gas leakage (use a LPG leak detector device or a fluid detection like soap). Caution for moving and rotating parts in the engine compartment!
6. Let the engine run warm on petrol >80°C.
Check if the reducer heats up.
Check the engine signals, petrol injection time, RPM, ECT, lambda, MAP signal and petrol pressure signal.
Let the engine run idle on LPG.
Adjust the reducer pressure.
Refer to *Basic → System* in the diagnostic software for the idle level value set.
Adjust the reducer pressure in such a way that the pressure measured (P-sys) equals the idle level value.
Turn the socket-head screw at the front of the reducer to adjust the pressure.
An error code will be generated whenever the pressure variation is too high.
7. Use the diagnostic software to check again all input and output signals.
8. Check the system for error codes and solve these, if required.
Check the petrol ECM for EOBD error codes.
Place the protection connector on the VSI communication connector.
9. Take a test drive and check the drivability on LPG and petrol.

